


al Computer

BOA


System Cor

GUIDE TO USE OF THIS MANUAL

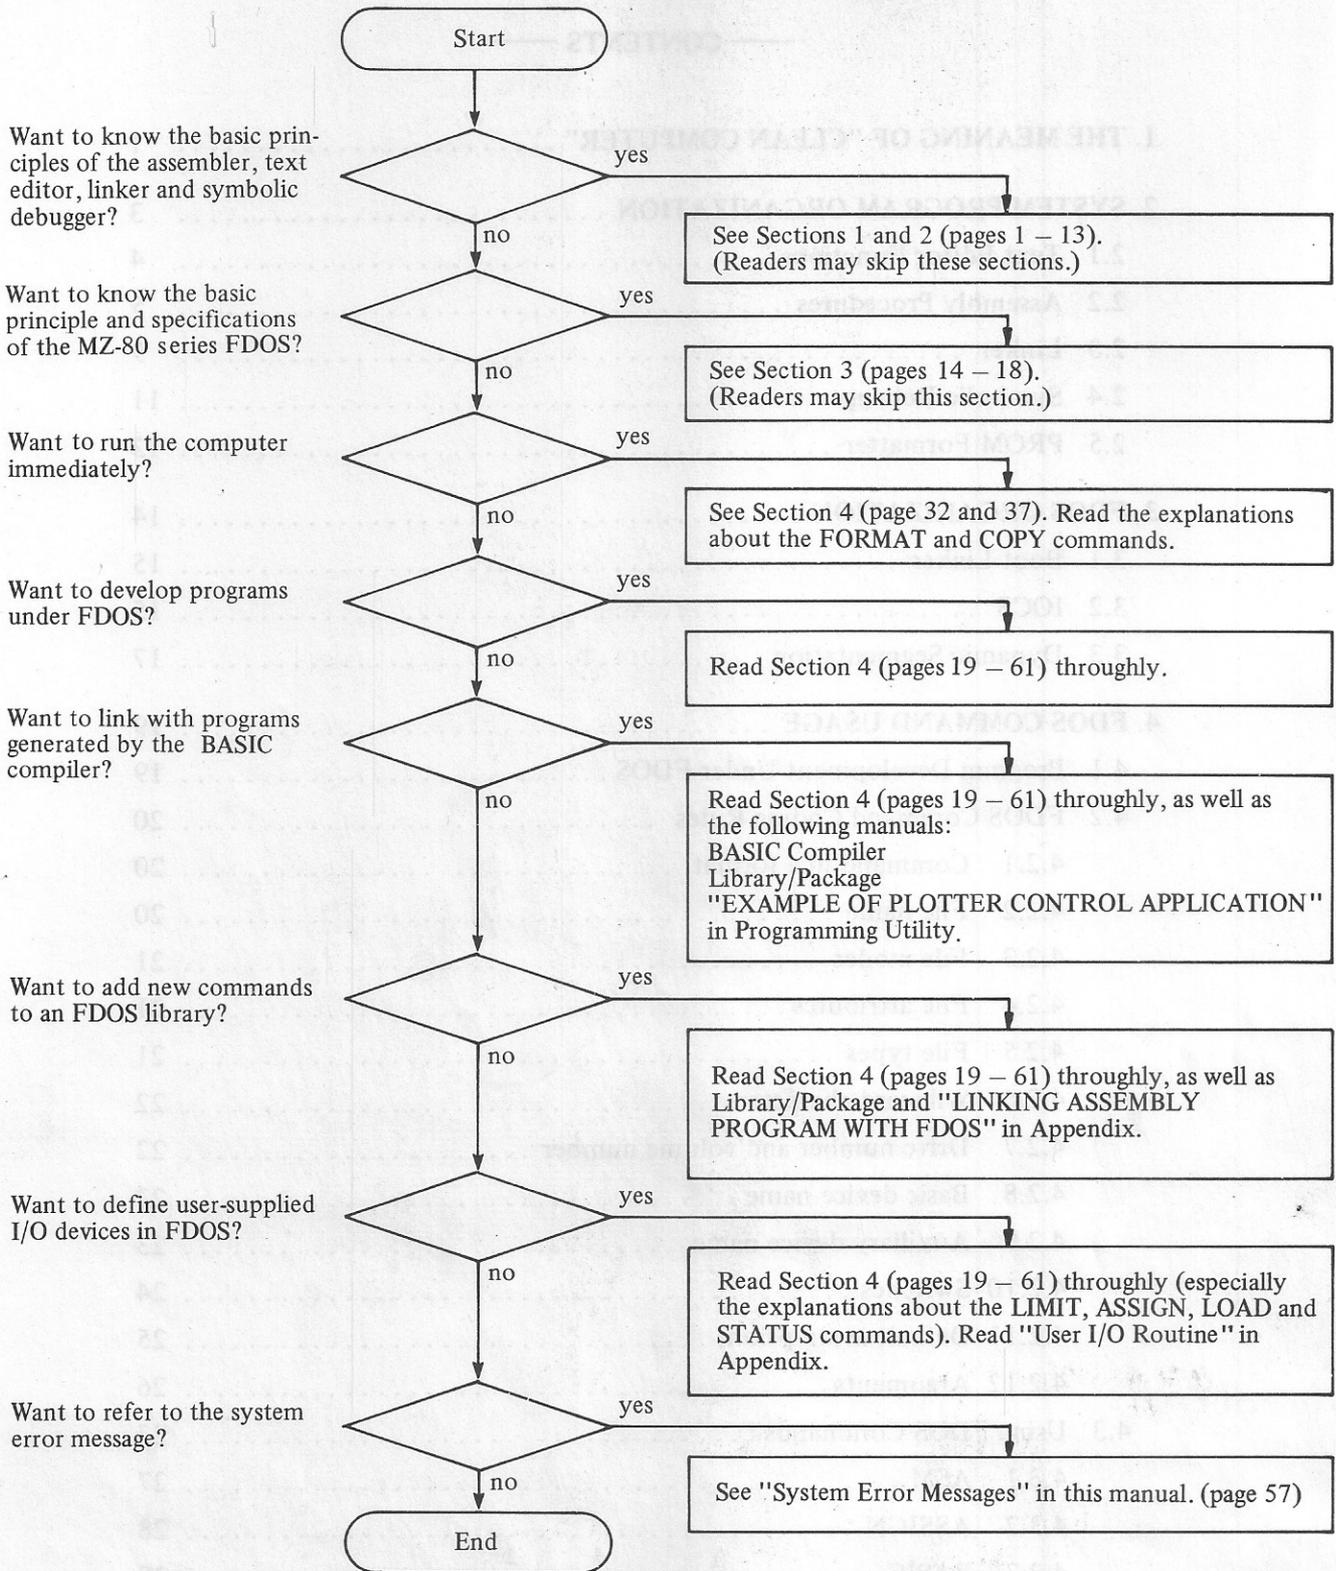

4.3.6	CONVERT	30
4.3.7	COPY	32
4.3.8	DATE	32
4.3.9	DEBUG	33
4.3.10	DELETE	34
4.3.11	DIR	35
4.3.12	EDIT	36
4.3.13	EXEC	36
4.3.14	FORMAT	37
4.3.15	FREE	39
4.3.16	HCOPY	39
4.3.17	LIBRARY	40
4.3.18	LIMIT	40
4.3.19	LINK	41
4.3.20	LOAD	42
4.3.21	MLINK	42
4.3.22	MON	43
4.3.23	PAGE	44
4.3.24	POKE	44
4.3.25	PROM	45
4.3.26	RENAME	45
4.3.27	RUN	46
4.3.28	SIGN	47
4.3.29	STATUS	47
4.3.30	TIME	49
4.3.31	TYPE	49
4.3.32	VERIFY	50
4.3.33	XFER	50
4.4	FDOS Command Summary	52
4.5	System Error Messages	57
5.	DISKETTE HANDLING	59
6.	MUTUAL CONVERSION	60

GUIDE TO USE OF THIS MANUAL

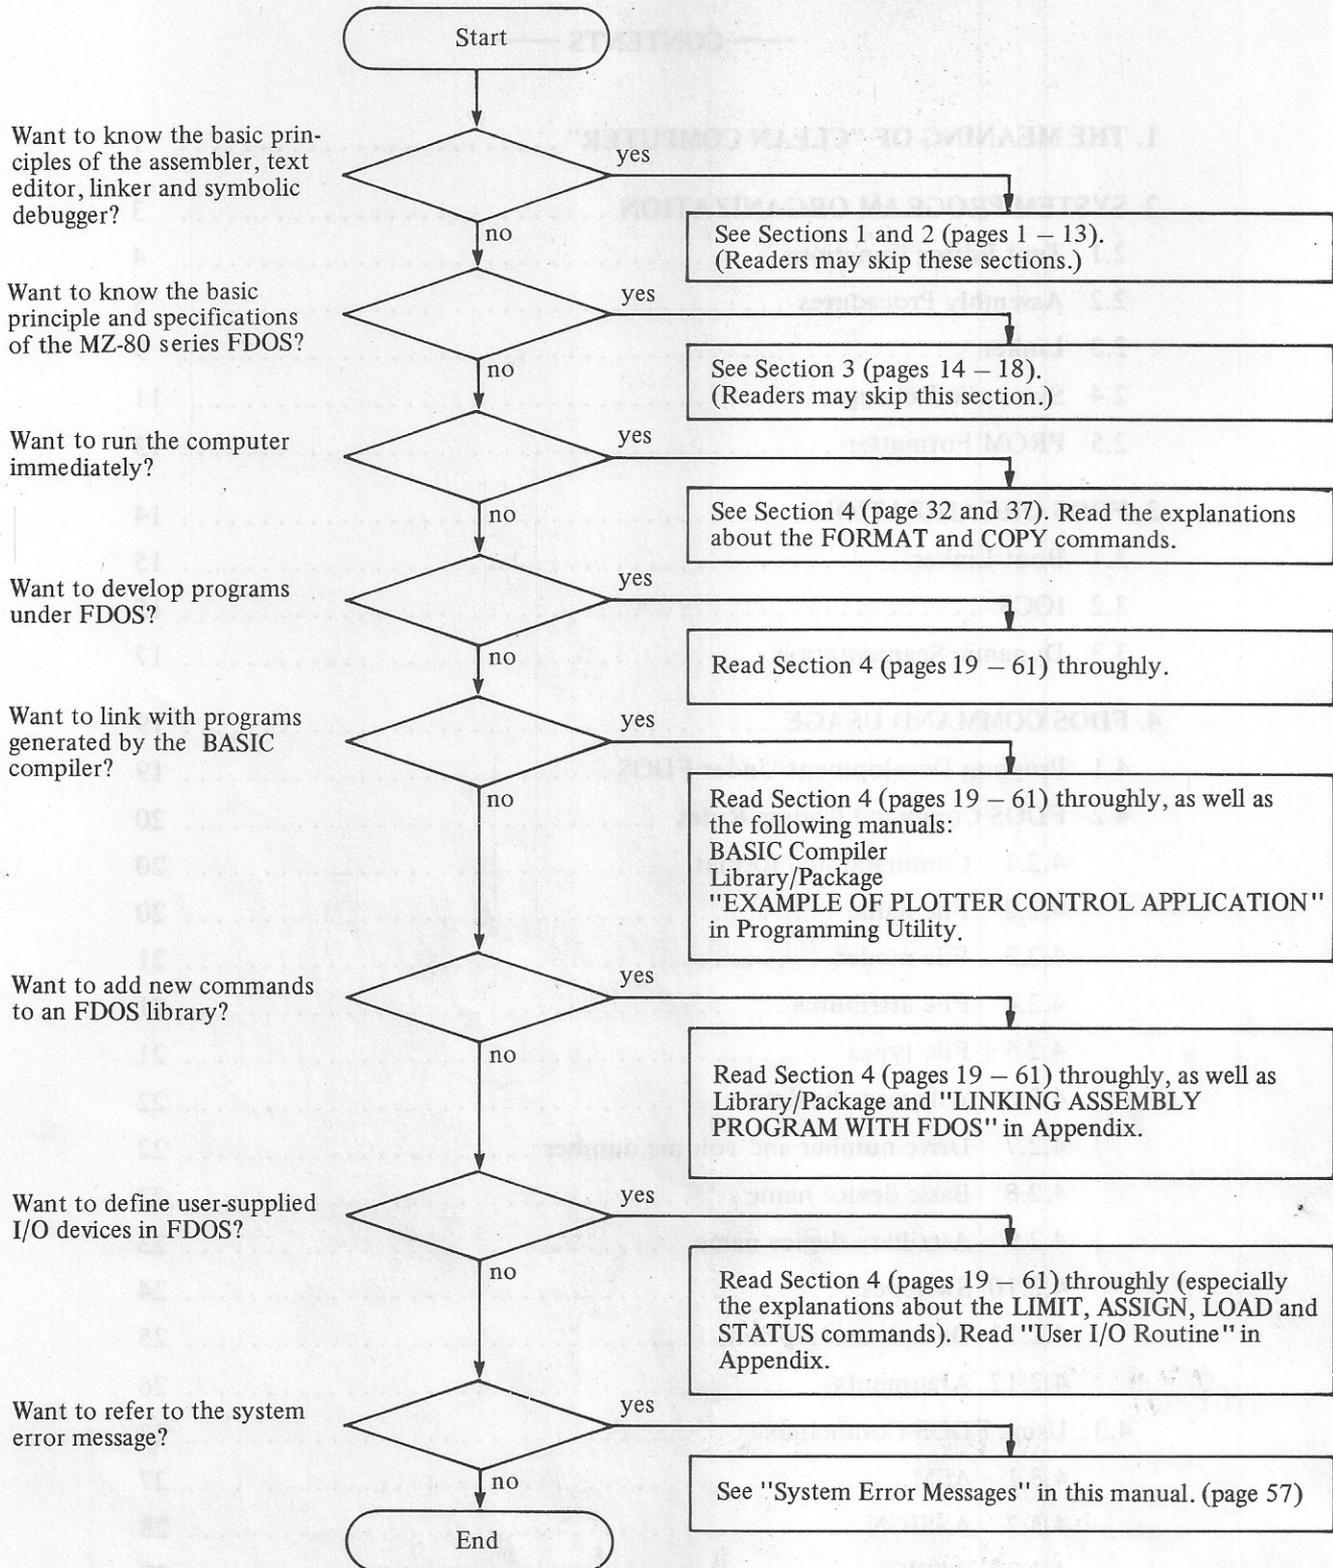

1	1	THE MEANING OF "CLEAN COMPUTER"
3	2.1	Text Editor Functions
4	2.2	Assembly Procedures
5	2.3	Linker
9	2.4	Symbolic Debugger
11	2.5	PROM Formatter
13	3.1	Boot Linker
15	3.2	IOCS
15	3.3	Dynamic Segmentation
17	4. FDIS COMMAND USAGE	
19	4.1	Program Development Under FDIS
19	4.2	FDOS Command Coding Rules
20	4.2.1	Command line format
20	4.2.2	File name
21	4.2.3	File modes
21	4.2.4	File attributes
21	4.2.5	File types
22	4.2.6	Wildcard characters
22	4.2.7	Drive number and volume number
22	4.2.8	Basic device name
23	4.2.9	Auxiliary device name
24	4.2.10	Switches
25	4.2.11	Default assumptions
26	4.2.12	Arguments
27	4.3	Using FDIS Commands
27	4.3.1	ASM
28	4.3.2	ASSIGN
28	4.3.3	BASIC
29	4.3.4	BOOT
29	4.3.5	CHATR