

SHARP

PERSONAL COMPUTER

11%-80A

OWNER'S MANUAL



MACHINES SUPPLIED IN THE U.K. AND
REPUBLIC OF IRELAND HAVE 48K BYTE
RAM FITTED AS STANDARD

Personal Computer
MZ-80A

**Owner's
Manual**

080311-250182

NOTICE

This apparatus complies with requirements of EEC directive 76/889/EEC.

This manual is applicable to the SA-5510 BASIC interpreter used with the SHARP MZ-80A Personal Computer. The MZ-80A general-purpose personal computer is supported by system software which is filed in software packs (cassette tapes or diskettes).

All system software is subject to revision without prior notice, therefore, you are requested to pay special attention to file version numbers.

This manual has been carefully prepared and checked for completeness, accuracy and clarity. However, in the event that you should notice any errors or ambiguities, please feel free to contact your local Sharp representative for clarification.

All system software packs provided for the MZ-80A are original products, and all rights are reserved. No portion of any system software pack may be copied without approval of the Sharp Corporation.

Preface

This manual describes the Sharp MZ-80A personal computer. Read this manual thoroughly to become familiar with the operating procedures, BASIC language and precautions. This manual describes the MZ-80A and associated software.

Chapter 1 describes the features of the MZ-80A, general operating procedures—read these sections first, and language specifications and summary of the standard system software BASIC interpreter SA-5510. BASIC (an abbreviation for “Beginner’s All-purpose Symbolic Instruction Code”) was developed as an all purpose language to provide beginners with a means of easily programming computers to solve a diverse range of problems. Its simplicity and versatility make it well suited to personal programming applications. BASIC SA-5510 is an extended BASIC interpreter which enables the MZ-80A computer to be used to its fullest capacity.

Chapter 2 describes command and subroutines of the MONITOR SA-1510.

Chapter 3 describes the hardware. This information will be helpful to you if you intend to expand system.

Precautions

The MZ-80A is one of the finest personal computers in the world; its design incorporates all the technical knowledge accumulated by Sharp in its many years of experience in the electronics field. All units are thoroughly inspected prior to shipment so that each will operate normally when it is unpacked. However, be sure to check visually for any damage caused during transportation. If any damage is found or any parts are missing, contact your dealer immediately.

Observe the following guidelines to keep your set in optimum operating condition:

- Do not place the MZ-80A in locations where the temperature is extremely high or low or where it varies to a great extent. Avoid exposing the unit to direct sunlight, vibration or dust.
- Handle the power cable carefully to prevent it from being damaged. When removing it from the AC outlet, turn the power off first, then pull the plug (do not pull the cable).
- If the power switch is turned off then immediately turned on again, initialization may not be performed correctly. Allow a few moments after turning the power off before turning it on.
- The personal computer MZ-80A contains 32K byte RAM as standard equipment. When you use system software that requires the disk drive access (DISK BASIC, FDOS, etc.), it is necessary to expand the existing RAM area to 48K bytes.

For more detailed information, see Appendix 5.

IMPORTANT

For users in the United Kingdom:

The wires in the mains lead of this apparatus are coloured in accordance with the following code:

BLUE : Neutral

BROWN : Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
- The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured **RED**.

Contents

Notice	ii
Preface	iii
Precautions	iv
Chapter 1 Your MZ-80A and BASIC Programming	1
1.1 Profile of the MZ-80A	2
1.2 Operating the MZ-80A	4
Top view and rear view of the MZ-80A	4
1.2.1 Activating the BASIC interpreter SA-5510	5
1.2.2 Keyboard	6
1.3 Basic operations for programming	9
What is the Direct Mode?	12
The Four Arithmetic Operations	13
String? Expression?	14
What are the PRINT's 1st and 2nd Approaches?	15
Let the Computer Run!	16
LIST for Quick Understanding	17
Error Puts the Computer in Confusion	18
Collect the Statement <i>!!!</i>	19
Correct the Statement!	20
Further Study of Comma and Semicolon	21
Colon and it's Use	22
Does "A=B" Equal "B=A"?	23
Variables the Computer is Very Fond of	24
Computing the Earth	25
Archimedes and the Mysterious Soldier	26
The Function Family Members	27
Free Definition of Function DEF FN	28
This is INPUT, Answer Please	29
Yes or No in Reply to a Proposal?	30
DATA and READ go hand in hand	31
Don't Oppose GOTO	32
IF THEN	33

IF . . . THEN and its Associates	34
Leave Any Decision to IF	35
Password Found for Numbers	36
FOR NEXT is an Expert of Repetition	37
Loop in a Loop	38
Line up in Numerical Order	39
How many Right Triangles are Possible?	40
TAB () is Versatile	41
Grand Prix using RESTORE	42
Talkative Strings	43
Another type of INPUT	44
LEFT\$, MID\$, RIGHT\$	45
LEN is a Measurement for Strings	46
ASC and CHR\$ are Relatives	47
STR\$ and VAL are Numeral Converters	48
Print out as £123, 456, 789	49
Difference between the Simple and Compound Interests	50
Annuity if Deposited for 5 years	51
Subroutine is the Ace of Programs	52
Stop, Check and Continue	53
Jump in masse Using the ON GOTO statement	54
ON GOSUB is the Use of a Subroutine Group	55
Primary Array has the Strength of 100 Men	56
Array is also Available for String Variables	57
Array is the Master of File Generation	58
Challenge of French Study	59
Secondary Array is More Powerful	60
What about the Multiplication Table?	61
Random Number is the One Left to Chance	62
Make a Dice using the RND function	63
Quick Change into a Private Mathematics Teacher	64
Probable Calculations for Figure's Areas	65
Let's Make Money at the Casino	66
Let's Create Exercises using the RND Function	67
SET or RESET?	68
Introduction to the Principles of TV	69
Wild Sketch	70


The Secret of an Oval Graph	71
GET is a useful Key Input	72
Let's Have a Look at a Position-Taking Game	73
TIS is a Digital Clock	74
Time for a Morning Call to a Friend in Tokyo?	75
Enjoyment of Music	76
"I Change Strings to Music" said Mr. MZ-80A	77
Prelude, Allegro Amabile	78
Now Make a Music Library	79
I'll Get Up at 7 Tomorrow Morning	80
Two Exercises	81
Here's Advice on how Lists can be made	82
Cards if Dealt by a Poker Player	83
Program Recording (SAVE)	84
Use of VERIFY and LOAD Commands	85
Data can also be Stored on Cassette Tape	86
Technique to Memorize a Music History	87
List of School Work Results	88
Music Library Kept on Tapes	89
Data Bank is a Computer's Speciality	90
Telephone Number List is also a Data Bank	91
SOS in Morse Code	92
Signals in Dots and Dashes	93
Unending "Time"	94
Miniature Space Dictionary	95
A Solution of Simultaneous equations	96
Find 1000 Prime Numbers	100
701, 260 Hours	105
1.4 Reserved word	106
1.5 List of BASIC SA-5510 commands, statements and functions	107
1.5.1 Commands	107
1.5.2 Assignment statement	108
1.5.3 Input/output statements	108
1.5.4 Loop statement	109
1.5.5 Branch statements	110
1.5.6 Definition statements	110
1.5.7 Comment and control statements	111

1.5.8	Music control statements	112
1.5.9	Graphic control statements	112
1.5.10	Cassette data file input/output statements	112
1.5.11	Machine language control statements	113
1.5.12	Printer control statements	114
1.5.13	I/O input/output statements	114
1.5.14	Arithmetic functions	114
1.5.15	String control functions	116
1.5.16	Tabulation function	116
1.5.17	Arithmetic operators	117
1.5.18	Logical operators	117
1.5.19	Other symbols	118
1.5.20	Error message table	120
1.6	How to obtain copied BASIC tapes	122
 Chapter 2 Monitor Program of the MZ-80A		123
2.1	MONITOR SA-1510 Commands and Subroutines	124
2.1.1	Using monitor commands	124
2.1.2	Monitor subroutines	124
2.2	MONITOR SA-1510 Assembly Listing	130
 Chapter 3 Hardware Configuration of the MZ-80A		161
3.1	The MZ-80A system configuration	162
3.1.1	Memory configurations	164
3.1.2	Key scanning system	167
3.2	The MZ-80A circuit diagram	169
3.3	Expansion equipments	176
3.4	Technical Data of Z80 CPU	178
 APPENDIX		209
A.1	ASCII Code Table	210
A.2	Display Code Table	211
A.3	Mnemonic Codes and Corresponding Object Codes	212
A.4	Specifications	222
A.5	Caring for the system	224

Your MZ-80A and BASIC Programming

Chapter

1



1.1 Profile of the MZ-80A

You must know the configuration of a computer to construct programs which can actually run on it. The more you know about the console, memory, processors, peripheral environment, and language processing programs, the more efficient and elaborate your programs will be because you can create your programs taking full advantage of the computer facilities. You can, however, acquire detailed such detailed knowledge only by accumulating experience in designing and running programs on a computer yourself.

This first section presents a profile of the SHARP MZ-80A personal computer to allow you to grasp an outline of its hardware configuration and basic operating procedures. In the next section, we will take our first steps in computer programming.

■ Profile

The MZ-80A is an integrated personal computer which made its debut in the fall of 1981. It is a completely new multi-purpose small computer designed with a wide range of future hardware and software applications in mind. Its greatest features are its high speed and ease of operation. When it was introduced, the MZ-80A was widely acclaimed as a system which would open a new dimension in computer programming.

Figure 1.1 is a simplified illustration of the hardware configuration of the MZ-80A. It consists of a storage unit (which stores programs and data), a central processing unit (which performs operations on data as directed by the programs in the storage unit and transfers the data to and from the storage unit), and several input/output units. The storage unit is divided into main memory, monitor program, and video RAM sections. The MZ-80A has 32 K bytes of RAM (read/write memory) in its main memory section. The main memory section can be expanded to 48 K bytes by incorporating an additional 16 K bytes of RAM. The input units include a keyboard and a cassette tape unit. The output units include CRT display, cassette tape, and audio output units.

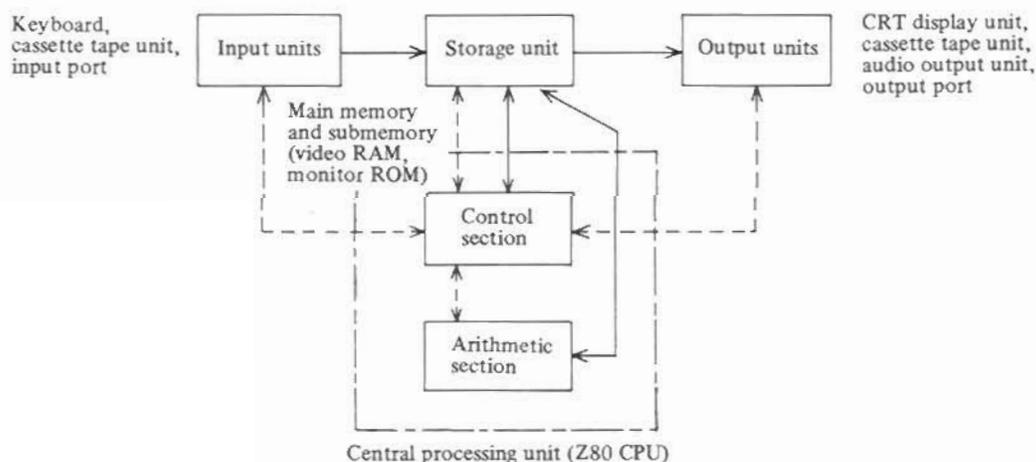


Figure 1.1 MZ-80A configuration

The central processing unit, which consists of control and arithmetic sections, performs active dynamically; it serves as the brain of the computer and controls its overall operation. Its operation, however, is made up of repetitions of the following simple operating sequence:

1. A data item containing an instruction is read from storage.
2. The instruction is executed.

In other words, logically speaking it is a collection of data items in the storage unit give instructions that cause the computer to operate in a dynamic manner. This collection of data items is called a program. It is, therefore, necessary to prepare a program to indicate the steps of a job and store it in the storage unit to cause the computer to perform the job.

Inside the computer, data and control signals are logically represented by binary numbers which are represented by the digits of 0 and 1. The number of digits of a binary number (i.e., a sequence of 0s and 1s) is counted in terms of bits. For example, the 8-bit binary number

0 0 1 1 0 1 0 1

is a data item which has a length of 8 bits (this is equivalent to 53 in decimal representation). Since bits are too small to be convenient for indicating the length of data, a unit called the "byte" is used to indicate a data item of 8 bits. One byte can represent up to 2^8 (= 256) different numbers.

The MZ-80A employs a Z80, a so-called 8-bit microprocessor (which process one byte of data at a time), as its central processing unit. Accordingly, programs which give instructions and data to be processed are all stored and transferred in byte units. Byte locations in the storage unit are designated by a 2-byte pointer in the central processing unit. With this 2-byte pointer, the Z80 can address up to 2^{16} (= 65536) locations. Since 2^{10} (= 1024) represents 1 K bytes, the Z80 is said to have an address space of 64 K bytes. As mentioned above, the MZ-80A main storage unit is made up of 48 K bytes, or 3/4 of the Z80 RAM (Random Access Memory) address space. RAM is a type of memory which can be freely read and written; on the other hand, ROM (Read Only Memory) can only be read.

The majority of special-purpose computers dedicated to automatic control systems and many personal computers have memories in which 1/3 to 1/2 or more of the memory space is composed of ROM for storage of control or system programs (e.g., BASIC interpreter programs). The use of RAM in the memory configuration of the MZ-80A is based on the premise that main memory should be freely available for a variety of uses. The MZ-80A stores all system programs in external files from which they are loaded into main memory by a monitor program.

The SA-5510 BASIC interpreter, one of the MZ-80A system programs, functions to translate BASIC source programs into machine code for execution.



The personal computer MZ-80A

1.2 Operating the MZ-80A

This section describes the constituent units of the MZ-80A and their functions.

■ Top view of the MZ-80A



Figure 1.2

■ Rear view of the MZ-80A

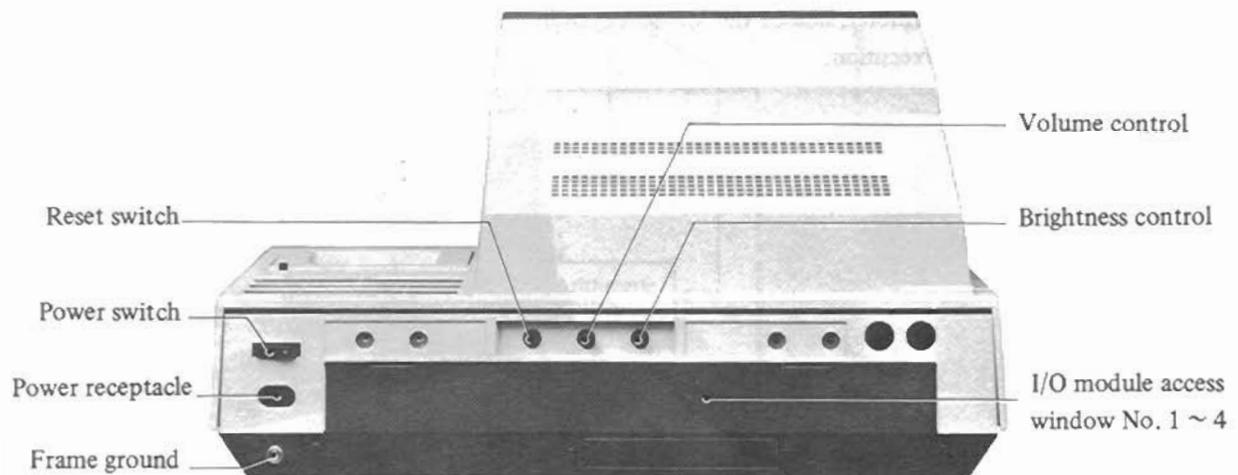


Figure 1.3

1.2.1 Activating system software

The MZ-80A personal computer is supported by system software which is filed in software packs.

BASIC SA-5510 is stored on a cassette tape file, and must undergo initial program loading whenever it is to be used. Loading is easily achieved.

First, turn on the power switch on the back of the MZ-80A. The Monitor program starts and the following message will be displayed on the CRT display.

```
* * MONITOR SA-1510 * *
* [X]
  |
  | cursor flickers
```

Place the BASIC cassette file in the cassette tape deck and press the **[L]** key, then press the **[CR]** key. (L: Load)

The Monitor's program loader starts, and message "↓PLAY" is displayed. Press the **[PLAY]** button of the cassette tape deck.

The program loader loads the BASIC interpreter (photo at left of Figure 1.4), and upon completion of loading, the MZ-80A displays the message illustrated in the photo at right and the BASIC interpreter begins to operate.

The message "Ready" indicates that system control is at the BASIC command level and that the system is ready to accept any command.

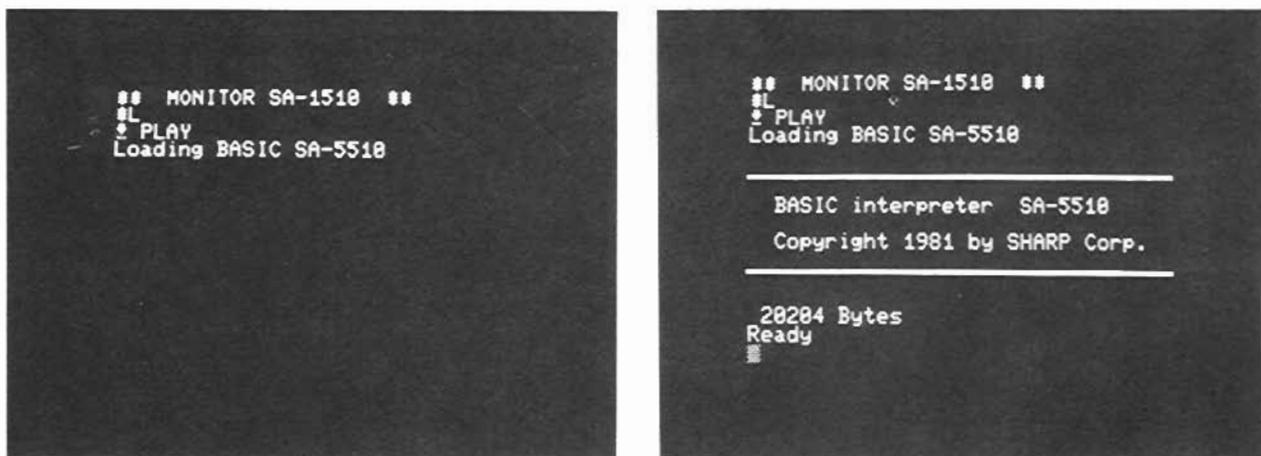


Figure 1.4

Please refer to the chapter 2 on activating system software from the diskette files and Monitor commands.

1.2.2 Keyboard

The keyboard of the MZ-80A is arranged as shown in Figure 1.5, and is divided into 2 areas; main keyboard and numeric pad.

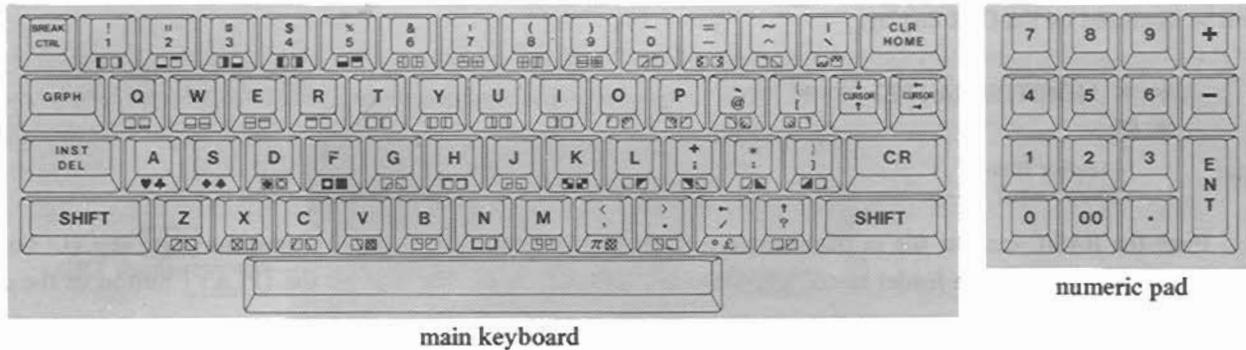


Figure 1.5 The keyboard of the MZ-80A

The main keyboard (typewriter keyboard) conforms to ASCII standard and includes character keys and control keys (such as the carriage return key, the control key and the cursor control keys.)

The numeric pad is for entering numeric data and is similar to that of an ordinary electronic calculator.

The main keyboard has two operating modes;

- [1] Normal mode
- [2] Graphic mode

Keys provided on the main keyboard produce different characters according to operating mode, as shown in Figure 1.6.



Figure 1.6 Different characters of the A key

Note that the letter key normally produce capital letters. To enter lower case letters, hold down the SHIFT key then press the letter key—just opposite of an ordinary typewriter. The reason for this is that capital letters are generally easier to read on the screen, so most people prefer to write their programs in capital letters.

Figure 1.7 shows the control keys (the stippled keys).



Figure 1.7 Control keys

The functions of the control keys are explained below.

- SHIFT** : Similar to the shift key of an ordinary typewriter; when this key is depressed, the character keys and some control keys are shifted.
- CR** : Carriage return key. The **ENT** key has the same function as the **CR** key.
- GRPH** : If this key is pressed in the normal mode, the graphic mode is entered and the cursor pattern changes from “” to “”, and vice versa.
- INST DEL** : DEL erases the character at the left of the cursor location, shifting all following characters of the string to the left one space. INST inserts a space where the cursor is located by shifting all following characters of the string to the right one space.
- CLR HOME** : HOME returns the cursor to the upper left hand corner of the display screen. CLR clears the display screen and also returns the cursor to the screen’s upper left hand corner. In the graphic mode, HOME produces the reverse character “”, and CLR produces the reverse character “”.
- CURSOR** (up, down, left, right arrows) : Cursor control keys. Each key moves the cursor in the direction indicated by the arrow (normal position and shift position). In the graphic mode, each key produces the reverse arrow;    .
- BREAK CTRL** : When this key is pressed with the **SHIFT** key depressed, a break code is generated, and halts execution of BASIC programs.

Figure 1.8 shows the **CTRL** key and some other keys (the stippled keys).



Figure 1.8 **CTRL** and some keys

The functions of these keys depressing the **CTRL** key are explained below.

- CTRL** + **A** : This locks the **SHIFT** key so that it does not need to be held down. Pressing these keys again or pressing the **CR** key releases the shift lock.
- CTRL** + **E** : This rolls down the listing of the CRT display.
- CTRL** + **D** : This rolls up the listing of the CRT display.
- CTRL** + **Z** : This generates the character “→”. This character is used as a delimiter (PASCAL, FDOS, etc.)
- CTRL** + **@** : This sets the character display mode to reverse mode. Pressing these keys again sets the character display mode to normal mode.
- CTRL** + **|** : This sets the V-RAM configuration to the MZ-80K mode.
- CTRL** + **]** : This sets the V-RAM configuration to the MZ-80A mode.

1.3 BASIC Operations for Programming

Now let's start our study of BASIC programming. Here, our purpose is to allow the beginner to gain familiarity with the basic elements of programs. In the first section, we will construct very short programs to illustrate fundamental concepts and learn about basic operations which are required during the course of BASIC programming. That is, we will learn:

- 1 How to construct a program.
- 2 How to run a program.
- 3 How to correct a program.
- 4 How to store a program (on cassette tape).
- 5 How to run a program stored in an external file.

1 Constructing a program

To have a computer do a job, it must be given sequence of instructions according to which it is to work. Determining the sequence of instructions, implementing them as a BASIC program, entering the program into the MZ-80A from the keyboard, and correcting the program afterwards are operations which are fundamental to program development. The problem is given below is a simple example of work to be done on a computer.

Example 0: Read two numeric data items from the keyboard, compute their sum, and display the result.

The sequence of instructions is, as indicated in the problem, "read two numeric data items from the keyboard," "compute their sum," and "display the result." These instructions are written in BASIC as follows:

```

10 INPUT A
20 INPUT B
30 LET C = A + B . . . . . Compute their sum.
40 PRINT C . . . . . Display the result.
50 END . . . . . End.

```

} Read two numeric data items from the keyboard.

On the first two lines, variables A and B are assigned two numeric values through the INPUT statement, which has the function of receiving data from the keyboard. On the next line, the sum of A and B is assigned to variable C. The content of C is shown on the display unit through the PRINT statement on the next line, which has the function of displaying data on the CRT display unit. Then the program ends. Although we explain these steps as if they were a matter of course, they are far from self-explanatory. Thus, it is here that we will begin our study.

There are two points to keep in mind in the above problem:

- A BASIC program is written using words such as INPUT, LET, PRINT, END, etc. Lines containing these words are called INPUT statements, PRINT statements, and so forth.
- Each line begins with a number such as 10.

In other words, a BASIC program is made up of statements beginning with a set of words (called reserved words) or their abbreviations, and numbers (called line numbers) which precede the statements. Although the above program has only five lines, it is a complete program. In fact, a single line can constitute a program if it contains a line number and a statement. Large programs have the same program elements as such a single line program.

The next step is to enter their program into the computer from the keyboard. This is not hard to do; you can enter it in the same way you type on a typewriter. You must take note, however, of the following:

- All variable names and words such as INPUT and PRINT must be entered in upper case letters. The MZ-80A keyboard prints upper case letters in the normal mode and lower case letters in the shift mode, so you need not press the **SHIFT** key (as with a typewriter) when keying upper case letters.
- Each line must be terminated by pressing the **CR** key (or **ENT** key on the numeric key pad). A line of data keyed in is not stored in memory as a program line until the CR key is pressed.

Now, key in the first line.

```
1 0   I N P U T   A CR
```

The cursor on the screen will move to the beginning of the next line when the **CR** key is pressed. Enter the second and third lines in succession. The entire program is stored in memory when the END statement on line number 50 is entered, followed by pressing the **CR** key.

Now key in:

```
L I S T CR
```

The listing of program input will appear on the screen. LIST is a command which displays the list of program lines stored in memory on the screen. It is called a command to distinguish it from statements (such as INPUT) which are used within the program.

2 Executing a program

To execute a program, give the RUN command to the computer. Key in:

```
R U N CR
```

A “?” mark will then appear on the next line and the cursor will flash. This means that the program execution has started and that the first INPUT statement is being executed. Key in, for example, the number 19 as the value of variable A. Entry of data during execution of the INPUT statement must also be terminated by pressing **CR**.

```
1 9 CR
```

It is convenient to use the **ENT** key, instead of the **CR** key, when entering numeric values from the numeric key pad.

The second INPUT statement is then executed and a “?” mark again appears on the screen. Key in “81” as the value of variable B.

```
8 1 CR
```

The computer, on receiving the variable B value, performs computation and assignment operations as directed on line number 30, then displays the result

```
1 0 0
```

on the screen as directed by the PRINT statement on line number 40. Thus, we obtain the result of adding $19 + 81$. The computer ends program execution when it encounters the END statement on line number 50, displays

```
Ready
```

on the screen and causes the cursor to start flashing again. The “Ready” message indicates that the computer is in a mode, called the command mode, in which no program is executed and commands are awaited. In the command mode, you can enter commands such as LIST and RUN or modify the program.

3 Correcting a program

The procedure for correcting or modifying a program is basically the same as the procedure for creating one. For example, to modify the above program so that the result of $A - B$ is assigned to variable C and the content of C is displayed on the screen, it is necessary to key in

```
3 0   L E T   C = A - B CR
```

When a line with the same line number as one of the old lines is entered, the old line is replaced by the new line.

A more convenient method, called screen editing, may be used when only portions of a line are to be changed, as in this example, where the plus sign is to be changed to a minus sign. With screen editing, all that is required is to move the cursor to the display position where a change is to be made using the cursor control keys and to overwrite the character(s). To terminate the editing session, press the `CR` key (The `CR` key may be pressed with the cursor in any position, as long as it is within a line). To insert or delete character(s), use the `INSERT/DEL` key. Run the program after modifying it.

4 Storing a program

The programs stored in the computer main memory are lost when power to the computer is turned off. You must learn how to store programs in external files in order to execute or complete them later, or exchange them with friends who use the MZ-80A.

The cassette tape unit in the MZ-80A is an input/output device which is used not only for starting the BASIC interpreter, but for recording and reading programs and data. To record a program onto cassette tape, use the following procedure:

- Load a cassette tape in the unit. When recording at the beginning of the tape, rewind it by pressing the `REW` button before proceeding to the next step.
- Enter a `SAVE` command together with an appropriate program name.

The `SAVE` command causes the program in the computer to be saved on the cassette tape.

Now, let's record the above program (changed to a subtraction program through screen editing) on cassette tape. Name the program "Subtraction." After mounting a cassette tape on the MZ-80A, key in:

```
S A V E   " S u b t r a c t i o n "  CR
```

Then,

```
↓RECORD . PLAY
```

will appear on the screen. Press the `RECORD` and `PLAY` keys simultaneously, and

```
Writing "Subtraction"
```

will appear on the screen, indicating that the save operation is in progress.

The prompt "Ready" will again appear on the screen when the program has been saved.

5 Reading a program from cassette tape

The `LOAD` command is used to read programs from cassette tape. To read the program "Subtraction," key in:

```
L O A D   " S u b t r a c t i o n "  CR
```

Figure 1.9 shows that, after the BASIC interpreter has been started, the program Subtraction has been read into the computer from the cassette tape by a `LOAD` command.

It also shows the messages Found and Loading, which are displayed in the course of program reading to indicate that the requested file has been found and that it is being read.

```

** MONITOR SA-1510 **
*
* LOAD
* PLAY
* Loading BASIC.SA-5510

-----
BASIC interpreter SA-5510
Copyright 1981 by SHARP Corp.

-----
32492 Bytes
Ready
LOAD "Subtraction"
* PLAY
Found "Subtraction"
Loading "Subtraction"
Ready

```

Figure 1.9 Loading a program



What is the Direct Mode?

Using the computer like an electronic calculator is possible if required. This kind of operation is called "Direct Mode".

Like the electronic calculator, key-in $5 + 8 =$.

To key-in the $+$, press the key while holding down the **SHIFT** key.

In fact, however, the computer displays the characters on the CRT screen only as keyed-in, and of course, no calculation is executed even with the **CR** key depressed. Here lies the difference between your computer and the electronic calculator. Your computer requires an instruction of what should be done about $5 + 8 =$.

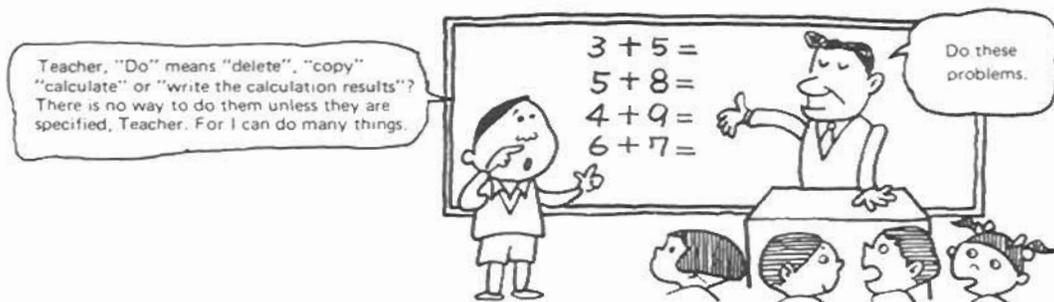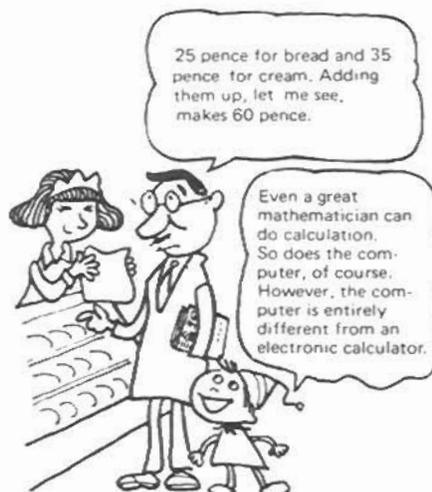

PRINT

To use the computer in the same manner as the electronic calculator, the computation of $5 + 8$ is required to be displayed on the CRT screen. For this, there is the PRINT command available as an instruction. Using this command, let's press the keys in the following order to transfer the instructions.

P R I N T 5 + 8 CR

As the keys are depressed, the characters below will be displayed on the CRT screen.

- Ready Meaning "Go ahead with your work".
- PRINT 5 + 8 Display the computation of $5 + 8$, and with the **CR** key pressed indicating the end of a command.
- 13 This is the executed result of the command.
- Ready What is to be done next?
- ❖ Cursor

■ The Four Arithmetic Operations

If you want to go on to multiplication and division, note that the computer uses signs slightly different from those of ordinary mathematics.

Multiplication sign	*
Division sign	/

Calculation with Parenthesis

The computer is capable of handling more complex calculations than an ordinary calculator. This is a calculation with parenthesis.

In case of ordinary mathematical operation, different signs of groupings are used to write as follows:

$$3 \times 6 [6 + 3(9 - 2(4 - 2) + 1)]$$

Whereas the parenthesis () alone is used at all times with the computer.

$$3 * 6 * (6 + 3 * (9 - 2 * (4 - 2) + 1))$$

Even with the above, the computer never forgets the rule that computation in the inner signs of groupings be done first, and never makes any mistake.



Exercise

$$\text{PRINT } (6 + 4) / (6 - 4)$$

5

$$\text{PRINT } 3 * (5 + 9 * (9 - 2) - 6 / (4 - 2)) + 5$$

200

$$\text{PRINT } (3 + 4) * (5 + 6)$$


77

$$\text{PRINT } (10 + 20) / 6 * (2 + 3)$$

25

$$\text{PRINT } (10 + 20) / (6 * (2 + 3))$$

1

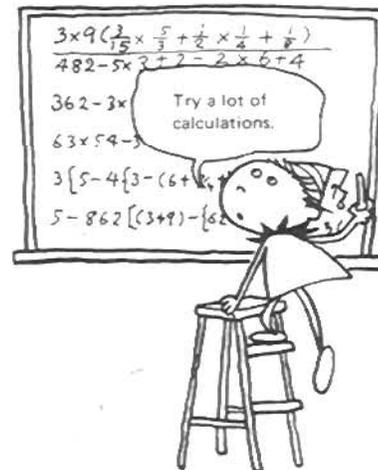

String? Expression?

```
PRINT 3 + 5
```

With the above, pressing the `CR` key makes 8, doesn't it? Now, put the expression in quotation marks".

```
PRINT "3 + 5" and CR
3 + 5
```

Oh, the result is different. Try another one

```
PRINT "HELLO MY FRIEND" CR
HELLO MY FRIEND
```

As is clear from the above, the characters or symbols put between quotation marks "" are displayed as they are on the CRT screen.

The block of characters and/or symbols between the quotation marks is called a **string**.

```
PRINT "3 + 5"
```

This is a string
put between quotation marks.

```
PRINT 3 + 5
```

This is an expression,
not a string.

It is necessary for you to know more about the strings. The free use of strings will double the pleasure in operating the computer.



`PRINT` is the command which you will have to get along with quite often. If you think it troublesome to key-in `PRINT` at every operation, press the `?` in place of `PRINT`.


The computer automatically converts the `?` to `PRINT`.

```
? 3 * 5
```

```
15
```

```
? (3 + 4) * 10
```

```
70
```

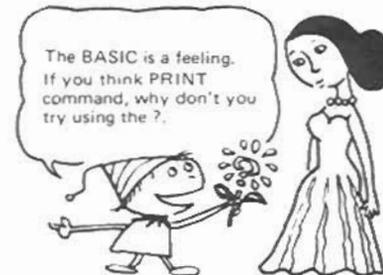

What are the PRINT's 1st and 2nd Approaches?

It is possible to add a plurality of items, such as strings and expressions, to the PRINT command. In this case, individual items should be separated using **semicolons** and **commas**.

```
PRINT "3 + 5 = " ; 3 + 5 CR
3 + 5 = 8
```

The expression between the quotation marks is a string. The actual calculation is done according to the expression following the semicolon.

Try it.

What will happen when using a comma (,) in place of a semicolon (;)?

```
PRINT "3 + 5 =" , 3 + 5 CR
3 + 5 =      8
```

Why! The result of $3 + 5$ is displayed far away from the expression. This means the following difference lies between the semicolon and comma.

- , Use of this separator results in display of output lists on successive lines.
- , This separator causes output lists to be displayed in a tabulated format.


When a separation is made with a comma, the 6 character space is not away from the end position of a string, but 10 character space from the starting position of the string. This fact requires your special attention.

```
PRINT "12345", 3 + 5 CR
12345      8
←-----→
10 character space
```

```
PRINT "123456789", 3 + 5 CR
123456789  8
←-----→
10 character space
```

If the string is longer than 10 character space, the result 8 is automatically made a further 10 character space away.

```
PRINT "123456789012", 3 + 5 CR
123456789012      8
←-----→
20 character space
```

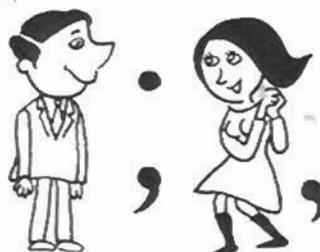

2nd approach



1st approach

```
PRINT "3+5=", 3+5 CR
3+5 =      8
←-10 character space-→
```

10 character space away. This one character space is the position for the sign of plus, or minus of the 8.

```
PRINT "3-5=", 3-5 CR
3-5 =      -2
←-10 character space-→
```

In case of a plus sign, the + sign is omitted according to mathematical practice.

```
PRINT "3-5="; 3-5 CR
3-5 = -2
```


■ LIST for Quick Understanding

While continuing conversation with the computer by repeated trials and errors, the first keyed-in program may sometimes be gone from the CRT screen. Even so, don't worry. The computer never forgets any program once keyed-in. When you want to see the previous keyed-in program, key-in the following:

LIST

This is followed by the display all the stored programs on the CRT screen. If the program extends over tens and hundreds of lines beyond display at a time, part of the stored programs can be displayed.

LIST - 30

Displays a program up to line number 30.

LIST 30 -

Displays a program after line number 30.

LIST 30 - 50

Displays a program between line numbers 30 and 50.

LIST 30


Displays a program of line number 30.

The result of NEW

To store a new program, clear the previous program using the NEW command. Otherwise, two programs may overlap to cause confusion.

NEW

This will clear the previous program completely. To ensure this, key-in the LIST command to check that the program is cleared.

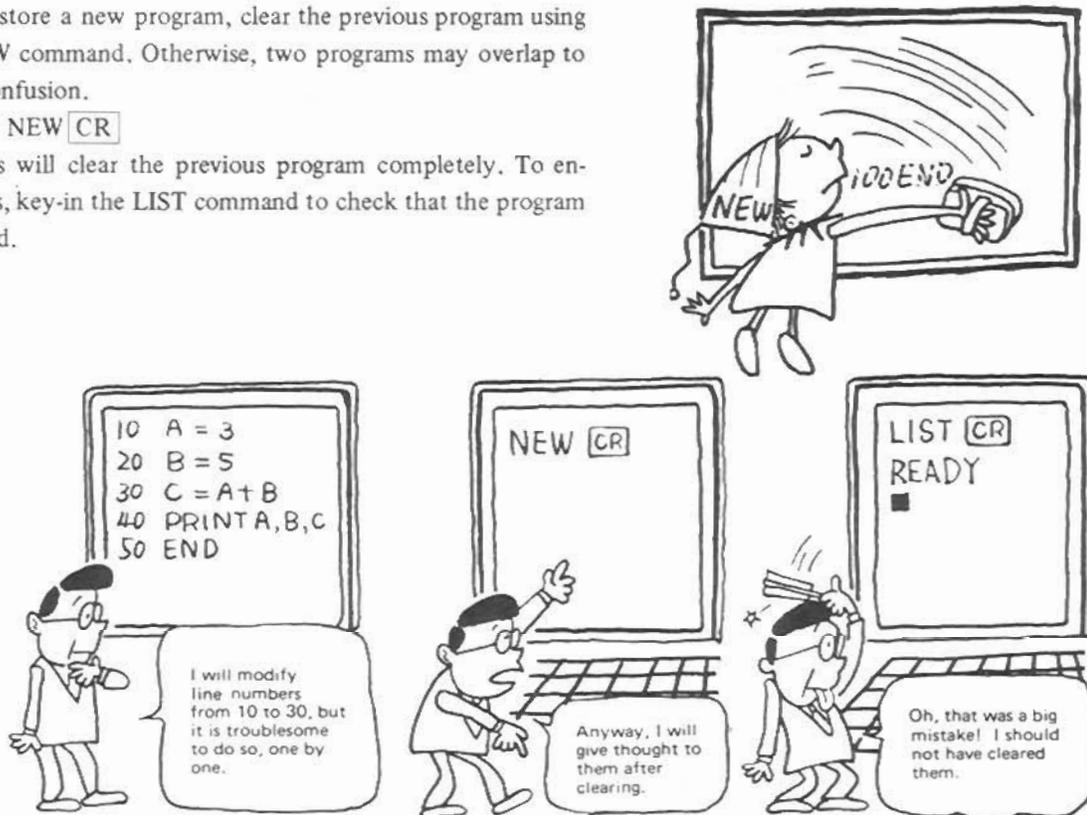

■ Error Puts the Computer in Confusion

```

10 A = 3
20 B = 5
30 C = A + B
40 PRINT A, B, C
50 END

```

This is the same program as used before. Did it run well? If there is an error in any statement, the computer tells you about it. For example,

```
50 EMD
```

If you make a mistake of M for N, the computer executes the program up to line number 40 as instructed, but it does not know what EMD is all about. The computer tells you about a syntax error, as follows:

```
* Error 1 in 50
```

Then, key-in correctly as 50 END. For two statements identical in statement number, if any, the computer takes up the one that was keyed-in later. With this, is your program complete?

If so, try to make a mistake in line number 20, for example.

```
20 5 = B
```

With this, the statement in line number 20 must be revised. Sure? Use the LIST command to check the revision.


```

10 A = 3
20 B = 5
30 C = A + B
40 PRINT A, B, C
50 END
205 = B

```

Oh, something funny occurs. Line number 20 is not revised. On top of that, a strange statement with line number 205 lists out. This results because the computer ignored a space (blank part) between 20 and 5 and arranged them as a line number. A space to the computer is entirely insignificant and ignored.

Note: The interpreter notifies the operator of occurrence of an error during program execution or operation in the direct mode with the corresponding error number. Refer to the Error Message Table; page 120.

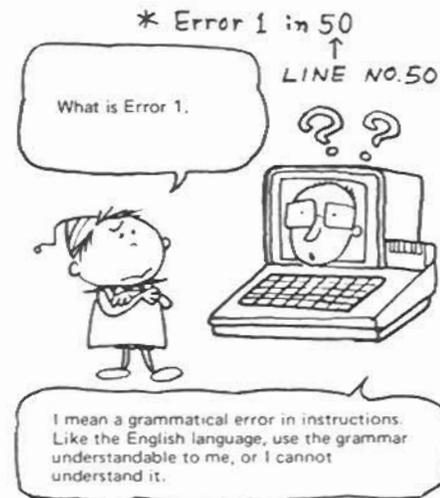

Collect the Statement ???

If you want to do the following about your program which has been stored in the computer;


- To correct errors,
- To modify for a better statement,
- To modify for a separate statement,
- To modify part of a complete statement and to generate a new statement,
-

Let's study about statement modification, insertion and deletion when the above are required.

Cursor Shift

To revise the characters in a statement, the cursor must be shifted to the respective character positions. Now, let's revise 5 of the statement $B = 5$ in line number 20 to 7. Refer to the diagram at right for the shift procedure.

With this, the program displayed on the CRT screen has been modified. In fact, however, this has not yet modified the program stored in the computer. To modify the stored contents, the CR key must be pressed. What? Did you key-in 6 instead of 7? To modify the character to the left of the cursor, there are two methods available.

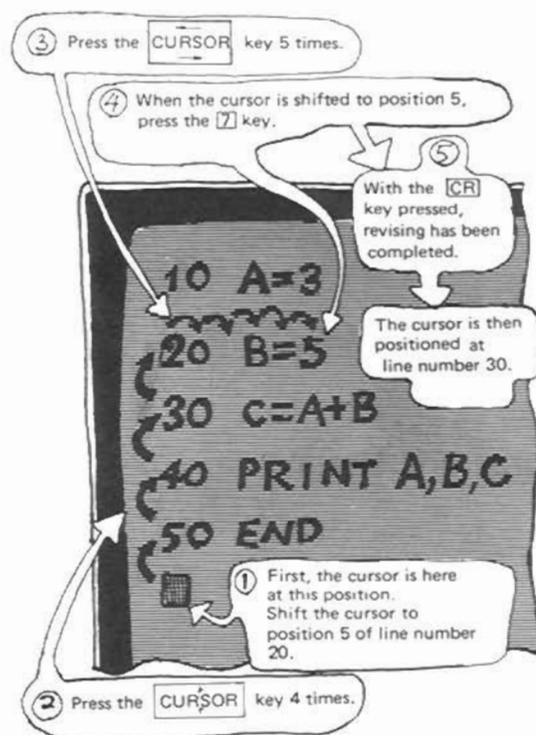

Method 1 Pressing the **INST·DEL** key.

With the **INST·DEL** key held down, the cursor shifts to the left by one character space, deleting the character next to it on the left. Press the **7** key again. Needless to say, the **CR** key must be pressed finally.

Method 2 Shifting to the left using the **CURSOR** key.

While pressing **SHIFT** key, depress the **CURSOR** key. The cursor shifts to the left by the number of times the key is pressed.

Then, press the **7** key again. The **CR** key must be pressed finally.

Correct the Statement!

Character Insertion

To modify the program on page 18 for the statement in line number 30, as follows,

30 D = 100 + A + B ← Do not press the **CR** key yet.

shift the cursor to character A. Then press the keys as shown below.

With the **SHIFT** key depressed, press the **INST-DEL** key 4 times.

There must be a space for just 4 characters to add 100+. Key-in 100+ to this space. No more description is required for the revision of C to D. Since the statement has been modified so far, why not modify the line number from 30 to 35, and press the **CR** key. Modify line number 40 as shown below.

40 PRINT A, B, C, D

Then type RUN **CR**

```
RUN
3      5      8      108
```

Character Deletion

35 D = 100 + A + B

Let's modify this statement. To modify it to the following,

35 D = A + B + C

Shift the cursor to character A and press the **INST-DEL** key 4 times. This shifts the cursor until A + B portion comes right next to mark =

```
RUN
3      5      8      16
```

```
10 A=3
20 B=5
35 D=100+A+B
40 PRINT A,B,C,D
50 END
```

Portions in the squares have been modified.

This has cleared the statement in line number 30 on the CRT screen.

Just to make sure, type in LIST. Oh, line number 30 still remains there.

```
10 A=3
20 B=5
30 C=A+B
35 D=100+A+B
40 PRINT A,B,C,D
50 END
```

This is because no command was given to delete line number 30.


If you wish to delete it, key-in 30 **CR**.

Don't forget the **CR** key for modification.

Further Study of Comma and Semicolon

For review, the following example is taken again.

```
10 A = 3
20 B = 5
30 C = A + B
40 PRINT A, B, C
50 END
```



This space before the number is for the plus or minus sign.

You remember this, don't you? In other words, when using commas between A, B and C, a numeral is displayed 10 character space away. Generate a program with new statements inserted, and run it. Statements to be inserted are the following:

```
32 D = B ↑ A
34 E = B * A
36 F = B / A
45 PRINT D, E, F
```

```
RUN
 3   5   8
125  15  1.6666667
```

With the comma (,) revised to semicolon (;) for line numbers, 40 and 45, run the program once more. To modify the program, type in LIST and use the cursor in as smart a manner as possible.

```
RUN
 3 5 8
125 15 1.6666667
```

Space for plus/minus signs

Semicolon (;) has a function that combines the characters or symbols on display together. Add semicolon (;) to the end of line number 40 then RUN, in order to make sure of this fact.

```
40 PTINT A;B;C;
RUN
 3 5 8 125 15 1.6666667
```

The following is replaced for line number 40...

```
40 PRINT A
41 PRINT B
42 PRINT C
RUN
```

```
3
5
8
```

Pay attention to the vertical column.



There is the difference between , and ;.

Add a comma (,) or semicolon (;) to the ends of line numbers 40 and 41.

$B \uparrow A$ means B to the Ath power.

$$B^A = B \uparrow A$$



Colon and it's use

Use of Colon

```

10 A = 3
20 B = 5
30 C = A + B
32 D = B ↑ A
34 E = B * A
36 F = B / A
40 PRINT A; B; C
45 PRINT D, E, F
50 END

```

This program consists of short statements. A program in this length can be processed under one line number, if required.


```

100 A = 3 : B = 5 : C = A + B : D = B ↑ A : E = B * A : F = B / A : PRINT
A; B; C : PRINT D, E, F : END
RUN 100

```



Colon (:) is a symbol to be used when more than 2 statements are inserted in one line number. This kind of statement is called a "multi-statement". A statement with 2 lines can be described in one line number. 1 line consists of 40 characters, making it possible to use 76 characters including a line number.

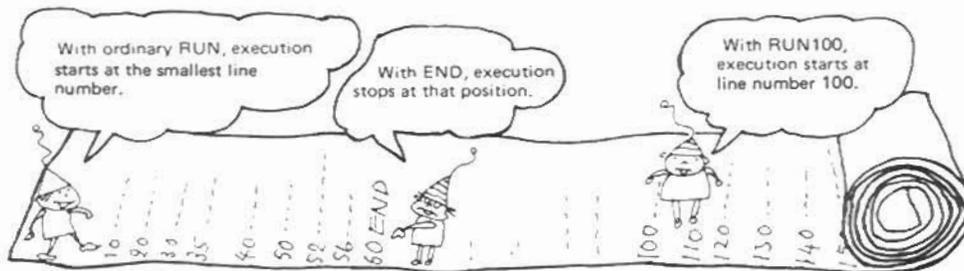

How Much Left ? SIZE

It is natural for you to desire to know how much storage capacity is left at your disposal as programs are stored in the computer one after another.

For this, the following is done:

```
PRINT SIZE
```

In response to this, the computer tells you about the remaining storage capacity in bytes.



Does "A=B" Equal "B=A"?

Now let's give attention to the = sign we have often used so far. Try the following execution.

```

10 A = 1
20 PRINT A,
30 A = A + 2
40 PRINT A
50 END
RUN
1      3

```

1 and 3 are on display. $A = A + 2$ is for line number 30. If this is an equation, A is subtracted from both expressions making $0 = 2$, resulting in a contradiction. It is not an equation.

Sign = means that the result of the right expression is substituted by symbol A prepared on the left expression.



In line number 10, value 1 is substituted by symbol A, and at the right expression of line number 30, the value in symbol A and 2 are added and substituted by symbol A using symbol =.

At this time, value 1 previously put in A does not exist any more.

The following 2 programs produce different results which proves that "A = B" does not equal "B = A".

```

10 A = 5
20 B = 7
30 PRINT A, B
40 A = B
50 PRINT A, B
60 END
RUN
5      7
7      7←

```



```

10 A = 5
20 B = 7
30 PRINT A, B
40 B = A
50 PRINT A, B
60 END
RUN
5      7
5      5←

```





Variables the Computer is Very Fond of

The variables used in the computer statements are different in usage from the mathematical variables. The statement-used variables are the names given to the boxes designed to accommodate values.


$B = 5$

This means that value 5 should be substituted by box B. Therefore, the use described under the "Error Puts Computer in Confusion" results in a difficult statement for the computer, though it cannot be mistaken as a line number. Because it says to put box B into 5.

```
10 A = 3
20 B = 5
30 A = A + B
40 PRINT A
50 END
RUN
8
```

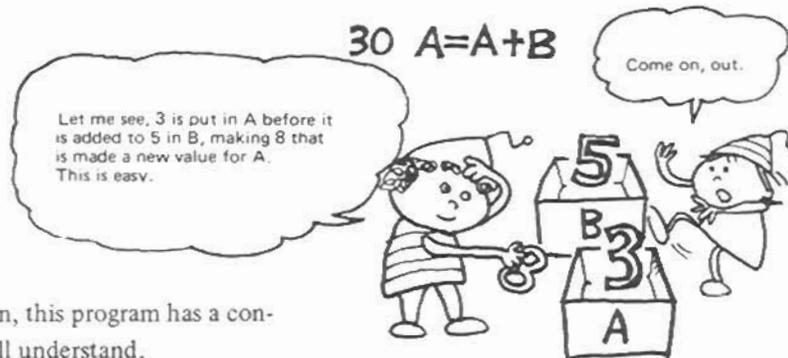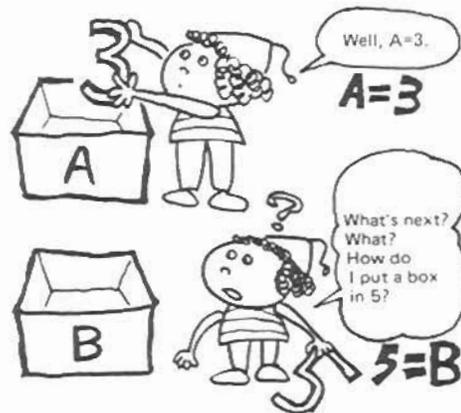

From the mathematical definition, this program has a contradiction, however, the computer will understand.

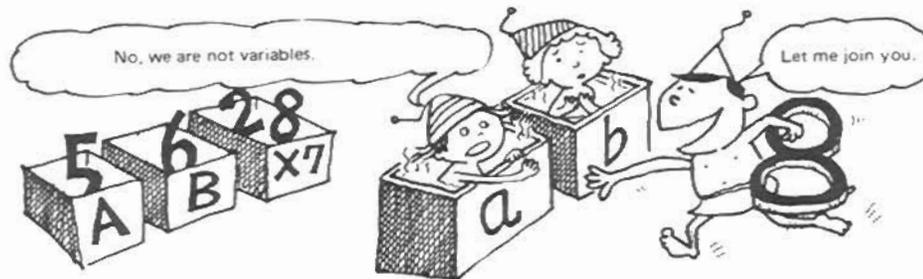

Characters subject to Variables

1. A variable should be a combination of two or less characters. Any variable over 2 characters can be stored, but the characters after the second are neglected in computer processing. For example, ABC and ABD can be displayed. In processing, however, they are regarded as the same variables as AB.
2. The following are the characters for use as variables:
 - (1) A to Z. Alphabetical 26 ways.
Example: A, M, Z
 - (2) 260 characters with numeral of 1 figure (0 to 9) added to the alphabet.
Example: A0, K5, Z9
 - (3) Characters with two alphabetical characters combined.
Example: AA, BK, XZ

However, some variables, such as IF, ON, TO, etc in BASIC reserved words, should not be used.

■ Computing the Earth

The prince of a star takes accurate observation of the earth. "The earth is a blue planet over there in the Solar System. Though slightly distorted, the earth is approximately 13,000 kilometers in diameter. From orbit calculation, its mass is about 6×10^{18} thousand tons."

The prince went to his computer to generate the following program for calculations of volume VE, surface area SE and mean density ZE of the earth.



```

10 DE = 13000 ..... Substitute the earth's diameter for variable DE.
20 WE = 6E + 18 ..... Substitute the earth's mass for variable WE.
30 SE = 4 * π * (DE/2) ↑ 2 ..... This substitutes the surface area for variable SE.
40 VE = 4 * π * (DE/2) ↑ 3/3 ..... This substitutes the earth's volume for variable VE.
50 ZE = WE/VE * (1E - 2) ..... This substitutes the mean density for variable ZE.
60 PRINT "EARTH DIAMETER" ; DE ; "KILOMETERS"
70 PRINT "EARTH SURFACE AREA" ; SE ; "SQUARE KILOMETER"
80 PRINT "EARTH VOLUME" ; VE ; "CUBIC KILOMETER"
90 PRINT "EARTH MASS" ; WE ; "THOUSAND TONS"
100 PRINT "EARTH MEAN DENSITY" ; ZE ; "KILOGRAM/CUBIC METER"
110 END

```

The prince of a star understands slightly the size of the earth. Pay much attention to the units used in the calculations. Further attention is focused on the sequence of calculations when the arithmetic expression contains $*$, $+$ or \uparrow . The operation priority is shown below:

- 1 \uparrow (Power)
- 2 $-$ (Minus sign)
- 3 $*$, $/$ (Multiplication and Division)
- 4 $+$, $-$ (Addition and Substraction)

The expressions below are complex in combination. Do you see any difference between the expressions?

$$\square 2 + 3 \uparrow 2 = 11$$

$$\square (2 + 3) \uparrow 2 = 25$$

$$\square 12/3 * 2 = 8$$

$$\square 12/(3 * 2) = 2$$

$$\square 2 * 2 \uparrow 3 = 16$$

$$\square (2 * 2) \uparrow 3 = 64.000001$$

$$\square 12/3 \uparrow 2 = 1.3333333$$

$$\square (12/3) \uparrow 2 = 16$$

■ Archimedes and the Mysterious Soldier

The sum of the interior angles of a triangle is 180° . With a flash of inspiration, Archimedes sat on the road and drew a triangle. There came a mysterious soldier with his spear pointing at Archimedes.

Soldier: Archimedes, your life is finished. Be prepared to die!

Archimedes: Wait a minute, I will finish this calculation.

Soldier: What? Angle A is 30° and angle B is a right angle.

It's easy to determine angle C. 60° . If side CA length is known, side AB and BC lengths or even the area of the triangle can be easily determined.


Archimedes: Don't be silly.

Soldier: All that needed is to generate a BASIC program. Let me see, Oh, Yes, it's good with CA = 12.

```

10 A = 30 : B = 90 : CA = 12
20 AB = CA * COS (A * π/180)
30 BC = CA * SIN (A * π/180)
40 S = AB * BC/2
50 C = 180 - A - B
60 PRINT "AB=" ; AB, "BC=" ; BC, "CA=" ; CA
70 PRINT "AREA S=" ; S
80 PRINT "A=" ; A, "B=" ; B, "C=" ; C
90 END

```

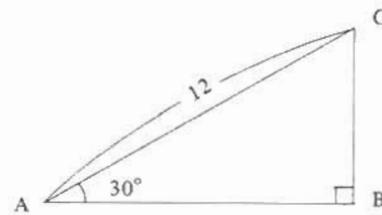

Using the inverse tangent ATN, let's determine the size of angle C from the side AB and BC lengths known. This requires the following to be keyed-in.

```
50 C = ATN (AB/BC) * 180/π
```

The result is in the unit of degree. The same result is obtained, isn't it?

■ The Function Family Members

Introduced here are more functions, such as SIN (X). Such functions are used with parentheses, in which constants, variables or arithmetic expressions can be placed.

Function	BASIC Symbol	Calculated Value	Example
Integer	INT (X)	Maximum integer within X	INT (3.14) = 3 INT (0.55) = 0 INT (-7.9) = -8
Absolute value	ABS (X)	Absolute value of X	ABS (2.9) = 2.9 ABS (-5.5) = 5.5
Sign	SGN (X)	1 if X is greater than 0. 0 if X is equal to 0. -1 if X is less than 0.	SGN (500) = 1 SGN (0) = 0 SGN (-3.3) = -1
Exponent function	EXP (X)	e^x ($e = 2.7182818$)	EXP (1) = 2.7182818 EXP (0) = 1
Common logarithm	LOG (X)	$\log_{10} X$ Provided X is greater than 0.	LOG (3) = 0.47712125
Natural logarithm	LN (X)	$\log_e X$ Provided X is greater than 0.	LN (3) = 1.0986123
Square root	SQR (X)	\sqrt{X} Provided X is greater than or equal to 0.	SQR (9) = 3 SQR (0) = 0

Is PRINT 2 * 2 Identical to PRINT 2 ↑ 2?

Well $934 \uparrow 2$ results in fractions of 872355.99, but $934 * 934$ results 872356. This is correct as an arithmetic expression, but calculations are done in a limited number of figures, involving unexpected errors. For example, $2 \uparrow 2$ is done using the formula called a progression expansion.

$$2 \uparrow 2 = 1 + \frac{2 \ln 2}{1!} + \frac{(2 \ln 2)^2}{2!} + \dots + \frac{(2 \ln 2)^n}{n!} + \dots$$

This part is cut off, causing an error.

This calculation may cause the computer to scream. The computer will produce certain types of errors. These errors are, however of little concern.

Free Definition of Function.....DEF FN

Various functions have been described, and here is an explanation of DEF FN defined as a new function combining such various functions. Some definition examples are listed below:

DEF FNA (X) = $2 * X \uparrow 2 + 3 * X + 1 \dots \dots \dots 2X^2 + 3X + 1$ is defined as FNA (X).

DEF FNB (X) = $\text{SIN}(X) \uparrow 2 + \text{COS}(X) \uparrow 2 \dots \dots \dots \sin^2 X + \cos^2 X$ is defined as FNB (X) this is always 1.

DEF FNE (V) = $1/2 * M * V \uparrow 2 \dots \dots \dots 1/2MV^2$ is defined as FNE (V).

DEF represents "define". New functions are named with FN suffixed. X or V in the parenthesis is called the argument. For example, the third function (seems to be motion energy) is used.

```
10 DEF FNE (V) = 1/2 * M * V ↑ 2
```

```
20 M = 5.5 : V = 3.5
```

```
30 PRINT FNE (V), FNE (V * 2), FNE (V * 3)
```

```
40 END
```

Motion energy at initial velocity V and motion energy with velocity doubled or tripled are displayed. DEF FN command is very convenient particularly when the same functions are often used in a long program.

Fall from an altitude of 10,000 meters!

How do you think the velocity and altitude of a fall from an altitude of 10,000 meters changes per second?

Function FNV (T) in the program is the fall velocity after a lapse of time T, and FNH (T) is the altitude at the same time.

Acceleration of gravity G, atmospheric resistance factor K and altitude H when a fall occurs are assigned by line number 20.



```
10 ? " ☐ " : T = 0
```

```
20 G = 9.8 : K = 0.15 : H = 10000
```

```
30 DEF FNV (T) = G/K * (1 - EXP (- K * T))
```

```
40 DEF FNH (T) = H - FNV (T) * T
```

```
50 ? " ☐ "
```

```
60 PRINT "TIME      "; T : MUSIC "+ A0" ..... Instruction with beep to be explained on page 76.
```

```
70 PRINT "VELOCITY" ; FNV (T)
```

```
80 PRINT "ALTITUDE" ; FNH (T)
```

```
90 T = T + 1 : GOTO 50 ..... This is a shift instruction for the program to be shifted to line No. 50.
```

☐ and ☐ are entered with the CLR
HOME key pressing in the graphic mode.

■ This is INPUT, Answer Please

To inform the computer of variables' values, we have so far taken the method where the value is first determined, as follows:

```
10 A = 3
20 B = 5
.....
```

There are several methods available for informing the computer of the values of variables. One of them uses a command called INPUT.

```
10 INPUT A, B, C
20 D = A + B + C
30 PRINT A, B, C, D
40 END
RUN
? ❏
```

This is new display, isn't it? ? ❏ is making an inquiry to you about the value of first variable A following the INPUT command. In response to this inquiry, key-in the value and press the **CR** key to inform the computer that everything is O.K.





Look! The same display is there. This is the inquiry about the value of the second variable B. If there are 3 variables, the computer asks question 3 times. If you reply using any key other than 0 to 9 by mistake, and press the CR key, the following is displayed.

* Error 4 in 10 Data type mismatch

The computer will then make inquiries about the values all over again.

```
10 INPUT A, B, C, D
20 INPUT E, F, G, H
30 PRINT H, G, F, E
40 PRINT D, C, B, A
50 END
```

```
10 INPUT "A = ?" ; A
20 INPUT "B = ?" ; B
30 INPUT "C = ?" ; C
40 S = A + B + C
50 M = S/3
60 PRINT "TOTAL" ; S, "MEAN" ; M
70 END
```

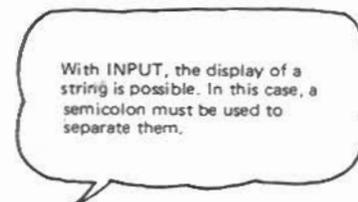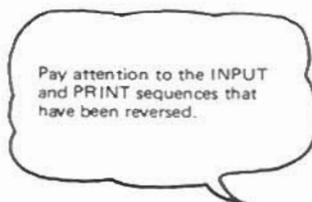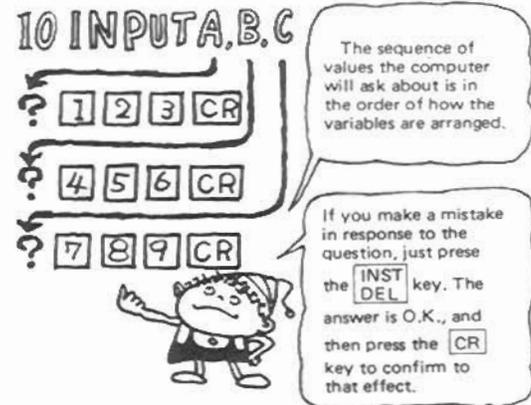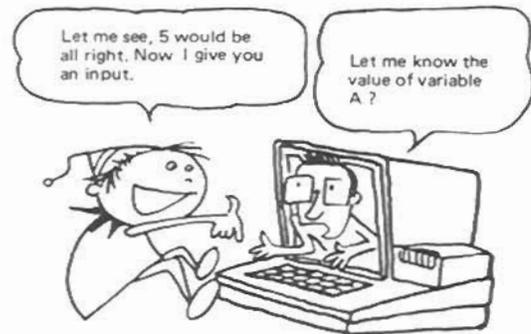

■ Yes or No in Reply to a Proposal?

On a sunny Sunday, a gentleman and a lady sit face to face in a nice coffee shop. He is 43 years old, and she is 22 years old.

Gentleman: I love you at first sight. Can you marry me?

Lady: Yes, if you love me so much. I don't care about the age difference. But not now. You have to wait until my age is half of yours.

Presume his age is A, hers is B and the number of years she asked him to wait is X. After X years, he is A + X years while she is B + X. Since her age is then half of his, the condition of $A + X = 2(B + X)$ is required. To solve the equation for X, the following is obtained.

$$X = A - 2B.$$

```

10 PRINT "WHAT IS HIS AGE ?"
20 INPUT A
30 PRINT "WHAT IS HER AGE ?"
40 INPUT B
50 X = A - 2 * B
60 PRINT "WAIT" ; X ; "YEARS!"
70 END
RUN
WHAT IS HIS AGE?
? 43 CR
WHAT IS HER AGE ?
? 22 CR
WAIT - 1 YEARS!
```



It is impossible to wait for - 1 year. In other words, they could have been married a year ago. Asked suddenly about a question, the computer may be confused at what variable you are talking about. In this program, a string indicating inquiry contents is inserted in line numbers 10 and 30. The string for an answer is also used in line number 60.

The INPUT method in this program can be simplified. Modify line numbers 10 and 30 as described below, deleting line numbers 20 and 40 from the program.

```

10 INPUT "WHAT IS HIS AGE ?" ; A
30 INPUT "WHAT IS HER AGE ?" ; B
```

Those that follow line number 50 are identical to the above program.

```

RUN
WHAT IS HIS AGE? 43 CR
WHAT IS HER AGE? 22 CR.
WAIT - 1 YEARS!
```



DATA and READ go hand in hand

Another method to inform the computer of variables.

```
10 READ A, B, C, D
20 X = A + B + C + D
30 PRINT X
40 DATA 3, 5, 7, 9
RUN
24
```

This program picks up values which are then used for calculation.

Two types of commands, READ and DATA, are used in this method.




READ A, B, C, D	Some variables are arranged.
DATA 10, 11, 12, 13	Number of values identical to that of variables that follow READ.

Similar to the INPUT command, the arrangements of variables and values must be matched.

It is unexpectedly easy to generate programs to determine rectangular, circle and triangle areas using the READ and DATA commands.

```
10 READ A, B
20 S1 = A * B
30 PRINT "RECTANGLE =" ; S1
40 READ C
50 S2 = π * C ↑ 2
60 PRINT "CIRCLE =" ; S2
70 READ D, E
80 S3 = D * E / 2
90 PRINT "TRIANGLE =" ; S3
100 DATA 2, 4, 6, 8, 10
110 END
```

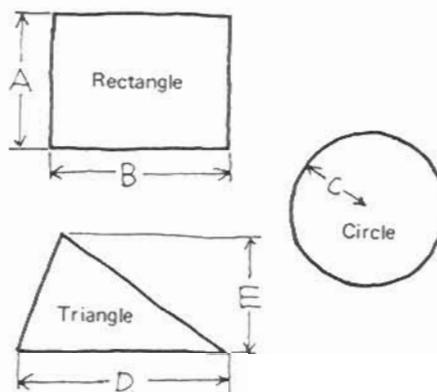


There seems to be room for improvements in the program.
Try various ways yourself.

■ Don't Oppose GOTO

For programs described so far, the computer executes them in the correct sequence from small to large line numbers. In fact, however, execution requires the sequence to be changed on some occasions. On such occasions, GOTO statements are very effective. GOTO means that an unconditional branch is made to the line number specified.

```
10 N = 1
20 PRINT N
30 N = N + 1
40 GOTO 20
50 END
RUN
1
2
3
```

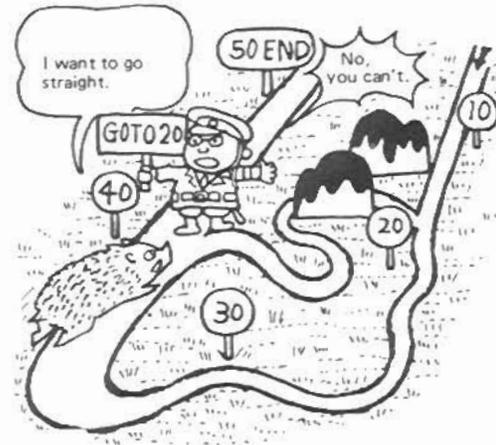

Not stopped? Press the **SHIFT** key, then **BREAK** key to stop.

Once upon a time, the great Knight Sir Lancelot of the Lake did a great deed for King Arthur of Camelot. King Arthur was so grateful to Sir Lancelot he said, "I would like to give you any prize you care to ask for".

Sir Lancelot replied "Thank you my Lord, I would like to have 1 Ginea today, 2 Gineas tommorrow, 4 Gineas on the 3rd day, 8 Gineas on the 4th day and so on until the 30th day". King Arthur was so surprised by such a small request that he agreed immediatly.

Let us make the program below to find out how much King Arthur must pay.

```
10 D = 1 : F = 1 : S = 1
20 PRINT "DAYS", "GINEAS", "TOTAL"
30 PRINT D, F, S
40 D = D + 1 ..... This is for adding oneday to each day.
50 F = 2 * F ..... This is for multiplying oneday's total by two.
60 S = S + F ..... This shows the total by adding to previous day total.
70 IF D = 31 THEN 90
80 GOTO 30
90 END
RUN
```

DAYS	GINEAS	TOTAL
1	1	1
2	2	3
⋮	⋮	⋮
10	512	1023
⋮	⋮	⋮
20	524288	1048575
⋮	⋮	⋮
30	.53687091E + 09	.10737418E + 10

On the 10th day he was given 1023 Gineas, on the 20th day he was given 1048575 on the 30th day he asked for about 1000000000 Gineas.

■ IF.....THEN

IF ~ THEN

```
10 IF  $\triangle\triangle$  THEN  $\square\square$ 
20 ■■■
```

If $\triangle\triangle$ conditions are satisfied, then $\square\square$ jobs can be executed. If not, omit $\square\square$ and go to ■■■ of the next line number. This is the IF ~ THEN statement. If $\square\square$ is a numeral, a jump is made to the line number of the numeral.

```
10 READ A
20 IF  $A \geq 0$  THEN PRINT "A ="; A
30 GOTO 10
40 DATA -10, 20, 5, -9, 8, -6, 5
50 END
RUN
A = 20
A = 5
A = 8
A = 5
```


Positive numbers alone are displayed.

The general form of IF THEN statements is as follows:

IF conditions THEN statement or line number

The conditions herein referred to are "greater than" or "less than" expressions using equal sign and unequal sign.

Sign Conditions	How to Use
=	$A = B$
<	$A < B + C$
>	$A > B + C$
<=	$A + B \leq C$
or = <	
>=	$A \geq B$
or = >	
< >	$A < > B$
or > <	

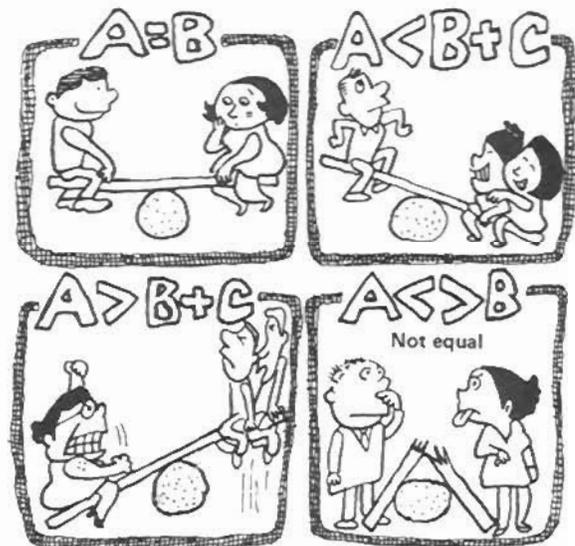


IF.....THEN and its Associates

If ... conditions are true (Yes), statement after THEN is executed. If they are false (No), execution is advanced to the next line number. Here is an introduction to its associates.

```

IF ..... THEN GOTO or IF ..... GOTO
IF ..... THEN PRINT or IF ..... THEN ?
IF ..... THEN A = 5 * 7 substitutional statement
IF ..... THEN INPUT
IF ..... THEN READ
IF ..... THEN GOSUB
IF ..... THEN RETURN
IF ..... THEN STOP
IF ..... THEN END
    
```

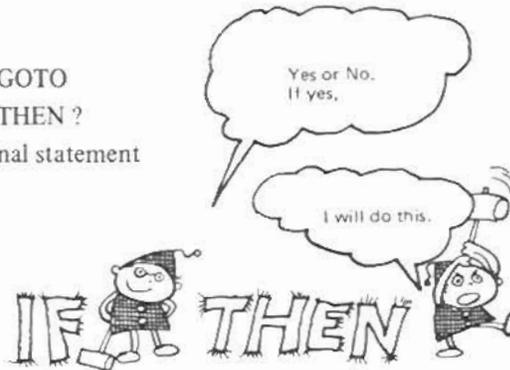

```

10 PRINT " [C] "
20 PRINT "INSERT OPTIONAL FIGURE FROM 1 TO 9."
25 PRINT "INSERT 0 WHEN YOU STOP."
30 L = 0 : M = 0 : N = 0
40 INPUT A
50 IF A = 0 THEN 90
60 IF A <= 3 THEN L = L + 1 : GOTO 40
70 IF A <= 6 THEN M = M + 1 : GOTO 40
80 N = N + 1 : GOTO 40
90 PRINT "YOU INSERTED FIGURES FROM 1 TO 3" ; L ; "TIMES" ;
100 PRINT "FROM 4 TO 6" ; M ; "TIMES" ;
110 PRINT "AND FROM 7 TO 9" ; N ; "TIMES"
120 END
    
```

A new symbol [C] is used in line number of 10. Display of [C] is possible when CLR HOME key is pressed, with the SHIFT key depressed in the graphic mode. This command will clear all the character on the CRT screen and shift the cursor to the top left corner of the CRT screen.

In addition, when the CLR HOME key alone is pressed in the graphic mode, symbol [H] appears.

This symbol functions only to shift the cursor to the top left corner.

If these are not clear, check with PRINT " [C] " or PRINT " [H] ".



■ Leave Any Decision to IF

IF can select Even numbers

Let's consider a program for selecting even numbers only, out of many numerals, using IF . . . GOTO statement. IF has great ability to select numbers.

```

10 READ X : IF X = -9999 THEN STOP
20 IF X/2 <> INT (X/2) GOTO 10
30 PRINT X ; : GOTO 10
40 DATA 2, 13, 56, 55, 4, 78, 31
50 DATA 6, 22, 15, 19, 80, 11, -9999
RUN
2 56 4 78 6 22 80

```

INT (X/2) in line number 20 is the statement for picking integers alone. Therefore, if X is even, $X/2 \neq \text{INT}(X/2)$ is impossible, with execution advancing to line number 30. If it is possible, it's regarded as odd, reading the next value.

To test your progress, let's try an exercise. How can you decide the multiple of 3 or 4? You've got it, haven't you? The answer is this.

Modification for the multiple of three

```
20 IF X/3 <> INT (X/3) GOTO 10
```

Modification for the multiple of four

```
20 IF X/4 <> INT (X/4) GOTO 10
```

IF can select Maximum and Minimum

```

10 S = 999 : L = -999
20 READ X : IF X = -9999 THEN 80
30 IF X > L THEN L = X
40 IF X > S THEN S = X
50 GOTO 20
60 DATA 2, -5, 91, 256, -43
70 DATA 87, 321, -76, -9999
80 PRINT "MAXIMUM VALUE =" ; L
90 PRINT "MINIMUM VALUE =" ; S
100 END
RUN
MAXIMUM VALUE = 321
MINIMUM VALUE = -76

```



Line number 10 is very important. Put as large a number as possible in variable S for substitution of the minimum value, and as small a number as possible in variable L for substitution of the maximum value. What about the execution results? Variable L and S come out as true maximum and minimum values. This is a good example of the use of IF . . . THEN.

■ Password Found for Numbers

The greatest common divisor (GCD) is a password for two integers. For example, presuming that two numbers are 10 and 20, divisible numbers for 10 and 20 are four numbers that are 1, 2, 5 and 10. Of these numbers, the maximum value, namely, 10 is the greatest common divisor for numbers 10 and 20.

Now, let's generate a program.

```


10 PRINT "X", "Y", "PASSWORD"
20 READ X, Y
30 PRINT X, Y
40 Q = INT (X/Y)
50 R = X - Q * Y
60 X = Y : Y = R
70 IF R > 0 THEN 40
80 PRINT X : GOTO 20
90 DATA 63, 99, 1221, 121, 64, 658
100 DATA 12345678, 987654321
110 END
RUN

```

Comma (,) following Y is very convenient for continuous display on the CRT screen.

Exposure of a Trick for this Program !

Long ago, a Greek mathematician, Euclid, developed this method of solution.

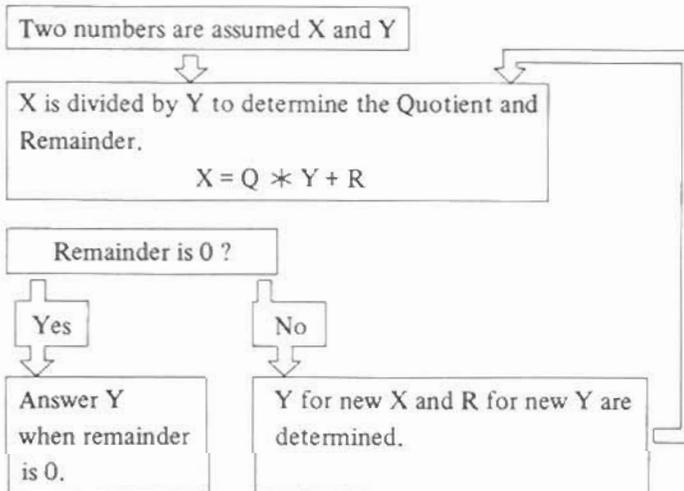

Using IF , try as many as possible.

```

10 IF SGN (X) = -1 THEN ? "MINUS"
20 IF SGN (X) = 0 THEN ? "ZERO"
30 IF SGN (X) = 1 THEN ? "PLUS"

```




■ FOR.....NEXT is an Expert of Repetition

The FOR NEXT statement is an instruction used for repetition of a sequence of program statements. Let's have a look at a simple program, first.

```
10 FOR N = 1 TO 5
20 PRINT N ;
30 NEXT N
40 END
RUN
1 2 3 4 5
```

The execution of this statement is illustrated as follows:

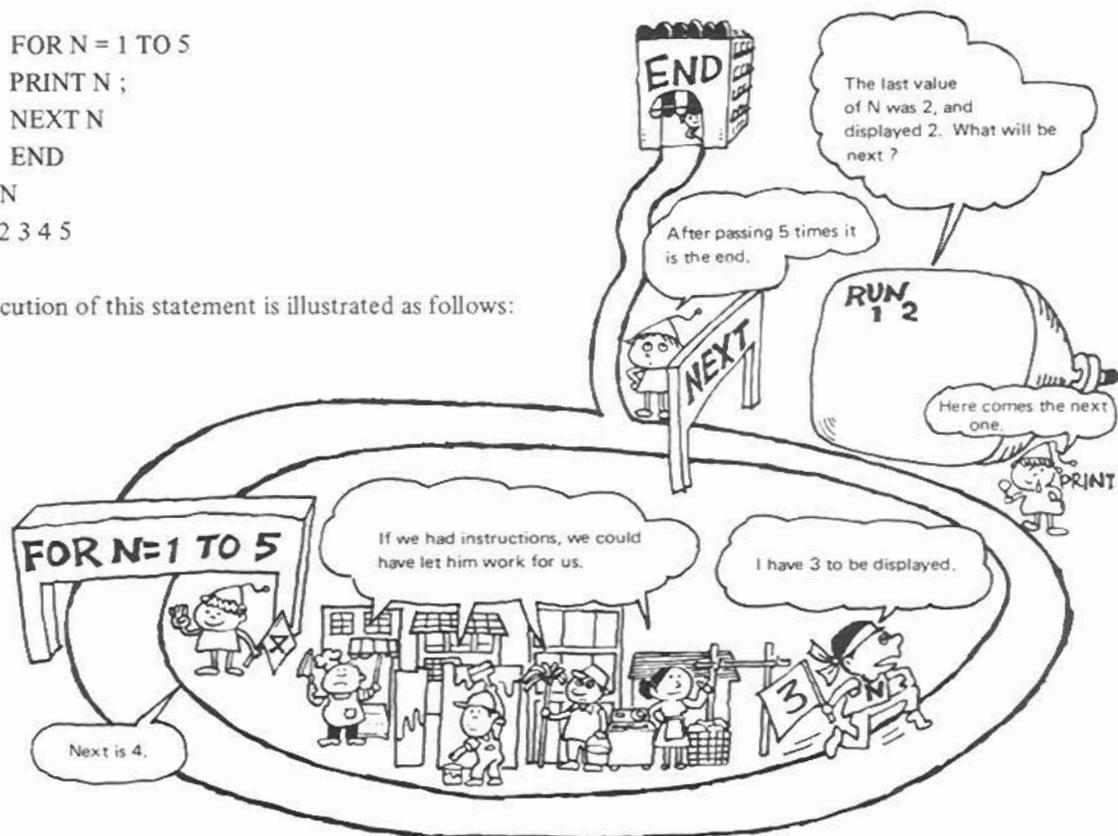

The variation of N is not only increased by 1, but can be increased, for example, by 0.5 or decreased by 2. The variation at this time is assigned by the word of STEP.

To increase in 0.5 increments:

```
10 FOR N = 1 TO 5 STEP 0.5
```

To decrease in 2 decrements:

```
10 FOR N = 5 TO 1 STEP -2
```

The general form of FOR NEXT statement is as follows:

```
FOR variable = Initial Value TO Last Value STEP Variation
Repeated Program
NEXT Variable
```

The initial value, final value and variation may be either a variable, constant or expression.

Loop in a loop

Alice is doing her homework. She is preparing a multiplication table using the computer, and a program which contains double FOR . . . NEXT statements.

```

10 FOR X = 1 TO 9
20 FOR Y = 1 TO 9
30 PRINT X * Y ;
40 NEXT Y
50 PRINT
60 NEXT X
  
```


Loop Y

Loop X



In the FOR . . . NEXT loop for variable X, the FOR . . . NEXT loop for variable Y is included. Variables X and Y vary from 1 to 9, respectively, and 1 is substituted for variable X to execute variable Y loop. In other words, with variable X remaining at 1, variable Y varies 1, 2, 3, . . . to 9, and each time, the multiplication product with variable X is displayed at line number 30. When variable Y reaches 9, a line feed is executed at line number 50, and at line number 60, variable X is then 2.

The FOR . . . NEXT loop can be used double, triple, etc., up to 15. What must be observed, however, is that loops are never crossed and no jump into the loop by means of GOTO is allowed.

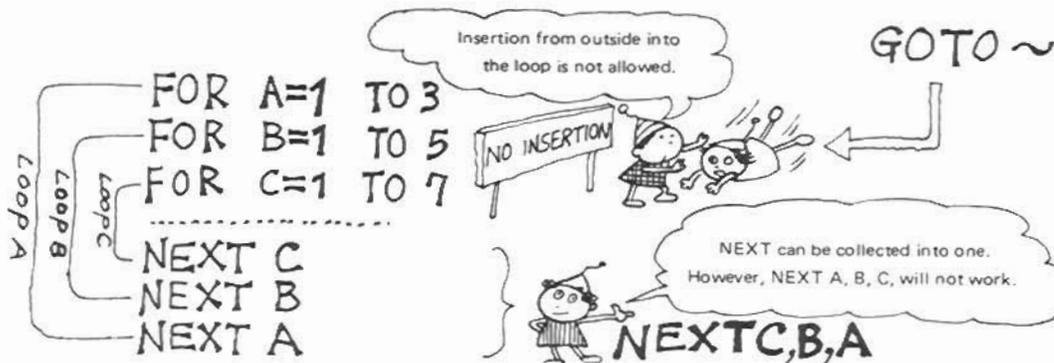

Thus, loop C is completely included in loop B, while loop B is completely included in loop A. As shown on the right, one word NEXT can be used for all three loops.

Line up in Numerical Order


With 4 numerals selected at random and keyed-in, the computer can arrange them in numerical order. This is a program for such a function. Use the INPUT command.

```

10 PRINT " "
20 PRINT "TELL ME VALUES OF 4 NUMERALS" : PRINT
30 INPUT A, B, C, D
40 IF A <= B THEN K = A : A = B : B = K
50 IF B <= C THEN K = B : B = C : C = K
60 IF C <= D THEN K = C : C = D : D = K
70 IF A < B GOTO 40
80 IF B < C GOTO 40
90 IF A < C GOTO 40
100 PRINT A, B, C, D
110 PRINT : PRINT "ONCE MORE PLEASE" : PRINT
120 GOTO 30

```

Give attention to line number 40. Using another variable K, after the THEN statement, the job is being done by changing the values of A and B. If A = 3 and B = 5 in the initial state;

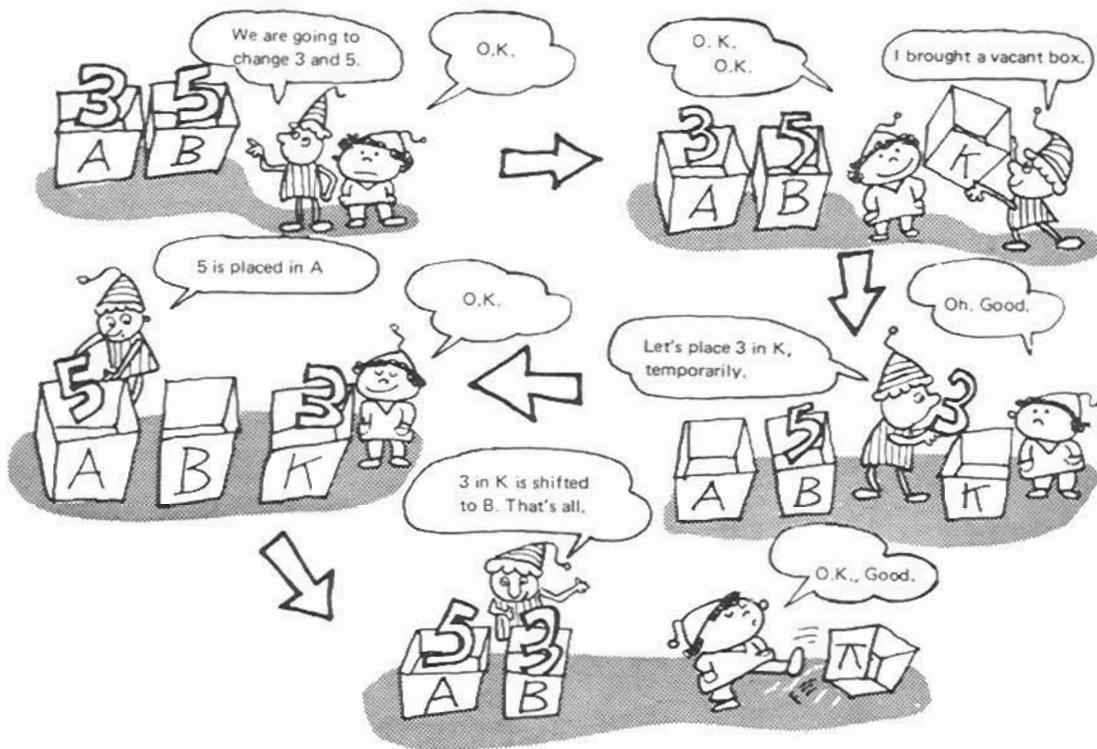

By the above job, A = 5 and B = 3 are obtained. Similar processing is executed at line numbers 50 and 60. Line numbers 70 through 90 are prepared for the repetition of the changing job.

How Many Right Triangles are Possible?

Now, let's generate a program that picks up positive integers from 1 to 20 to meet the Pythagorean theorem $A^2 = B^2 + C^2$.

```

10 PRINT " C "
20 PRINT "  \ "
30 PRINT "   \ "
40 PRINT "  B \ A"
50 PRINT "   \ "
60 PRINT "  L - - - \ "
70 PRINT "                   "
80 PRINT "                   C"
90 PRINT : PRINT "POSITIVE INTEGERS TO MEET PYTHAGOREAN THEOREM"
110 PRINT : PRINT " A", " B", " C"
120 FOR A = 1 TO 20
130 FOR B = 1 TO 20
140 FOR C = 1 TO 20
150 IF A * A - B * B - C * C = 0 THEN PRINT A, B, C
160 NEXT C, B, A
180 END

```




Using the graphic patterns try to draw a fine triangle on the CRT screen. Don't forget quotation marks after drawing.

You already know the meaning of line number 10. Try to draw carefully so that a fine triangle is formed between line numbers 20 through 80. At line numbers 120 through 160, the FOR . . . NEXT loop is triple. The equation shown at line number 150 is repeated 8000 times ($20 \times 20 \times 20$) with C from 1 to 20 at A = 1 and B = 1, and with C from 1 to 20 at A = 1 and B = 2, and so on.

This operation requires a considerable period of time for its completion.

Triple FOR~NEXT

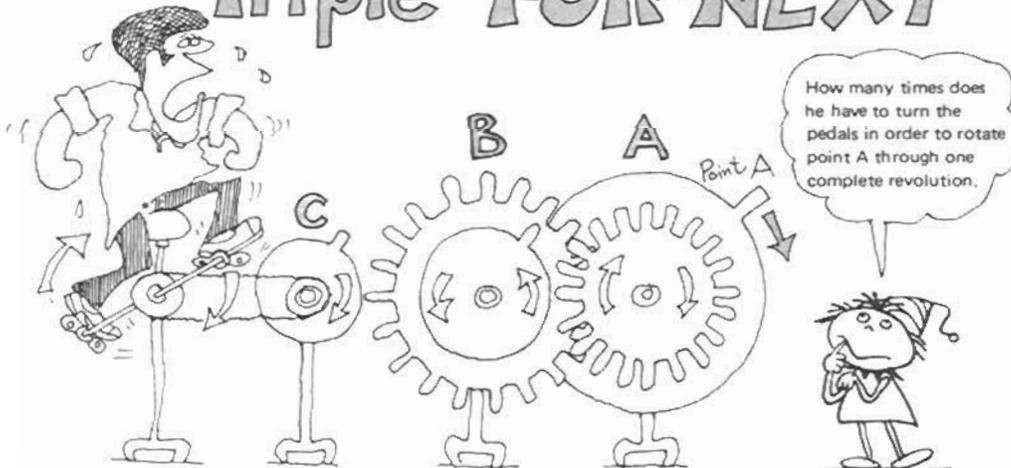

■ TAB() is Versatile

It is possible to assign where to start writing the characters or symbols of a string on the CRT screen. The TAB() is used to do so.

Using PRINT TAB (8) ; "ABC", string ABC is displayed at the number in the parenthesis counted from the left hand side, namely, starting at the 9th position.

The numbers to be assigned for the parenthesis are from 0 to 78, and variables may be used if defined as numerals.



PRINT TAB (8) ; "ABC" starts at 8 + 1.



Let's operate an example of a simple program combined with the FOR . . . NEXT statements.

```
10 FOR X = 1 TO 20
20 PRINT TAB (X) ; " * "
30 NEXT X
```

```
10 FOR Y = 1 TO 20
20 PRINT TAB (20 - Y) ; " * "
30 NEXT Y
```

Now, let's try a little more complex program.


```
10 PRINT " ■ " : PRINT SPACES (8) ;
20 FOR X = 1 TO 22 : PRINT " * " ; : NEXT X : PRINT
30 FOR Y = 1 TO 20
40 PRINT TAB (8) ; " * " ; TAB (29 - Y) ; " ■ " ; TAB (29) ; " * " : NEXT Y : PRINT SPACES (8) ;
50 FOR Z = 1 TO 22 : PRINT " * " ; : NEXT Z
```

A new statement is there at line numbers 10 and 40. When this SPACES () is substituted for TAB, exactly same result is obtained. However, there is the difference shown below between the SPACES and TAB.

TAB (8) shifts the cursor by 8 character space from the left hand on CRT screen.



SPACES (8) displays space (blank) for 8 character space.

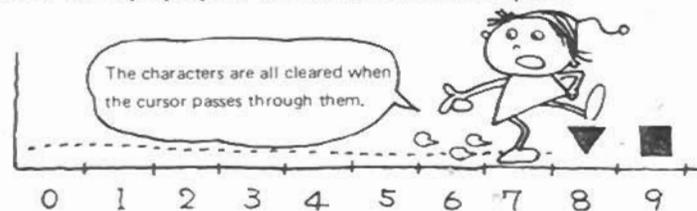

■ Grand Prix using RESTORE


Challenge of a Car Race

How about the simplest car race program ?

```

10 X = 33 * RND (1)
20 FOR A = 1 TO 5
30 READ MS
40 PRINT TAB (0) ; " ♦ " ; TAB (X) ; MS ;
50 PRINT TAB (37) ; " ♦ "
60 NEXT A
70 Y = 10 * RND (1)
80 FOR A = 1 TO Y
90 PRINT TAB (0) ; " ♦ " ;
100 PRINT TAB (37) ; " ♦ " : NEXT
110 RESTORE : GOTO 10
120 DATA " ▴ ▽ ▴ " , " ● ● ● ● ● "
130 DATA " ● ● ● ● ● " , " ● ● ● ● ● "
140 DATA " ▽ ▽ ▽ "

```

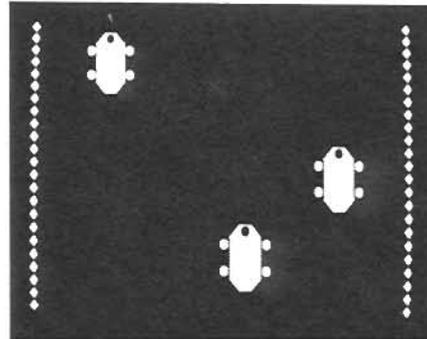

TAB (X) at line number 40 determines where to display automobiles on the road, particularly from the left side. What distance between the automobiles ? For this, random numbers from 1 to 9 are generated at line number 70, and at line numbers 80 through 100, automobiles are controlled so that they do not collide. By the way, RESTORE at line number 110 is not a familiar command, is it ?

RESTORE Returns to the Start of Data

No matter where it may be, or no matter how it may be scattered, DATA statement is read by READ statement.

O.K.

```

10 DATA 27
20 READ A, B, C
30 DATA 10
40 .....
50 DATA 9, 13
60 READ D
70 END

```

NO

```

10 READ A, B
20 READ C
30 DATA 27, 10, 9
40 READ D
50 END

```

Why No ? Because variable D has no value of DATA to be read.

Then what about this ?

```

10 READ A, B
20 READ C
30 DATA 27, 10, 9
35 RESTORE ..... RESTORE statement enables the reading of the first data in the
40 READ D ..... first DATA statement of the program.
50 END

```

■ Talkative Strings

The computer should generate a language understandable to human beings and should talk to us To make such a desire come true, string variables are absolutely necessary.

```

10 AS = "MIKE" : BS = "PAUL"
20 CS = "TONY" : DS = "PETE"
30 ES = "DENIS" : FS = "MARTIN"
40 GS = "PHILIP"
50 IS = "JACK" : JS = "HARRY"
60 KS = "BILL" : LS = "DAVID"

```

Ordinary variable symbols with \$ (dollar sign) suffixed are called string variables. Processing, very similar to that of ordinary variables is possible. Let's look at some examples to see their characteristics.

```

70 PRINT BS
80 PRINT AS
RUN
PAUL
MIKE

```

Using " ; ", connects string variables.

```

100 PRINT BS ; CS ; AS ; ES ; LS ; DS ; KS
RUN 100
PAULTONYMIKEDENISDAVIDPETEBILL

```

What will happen if " , " is used in place of " ; " ?

```

120 PRINT BS, AS, IS
RUN 120
PAUL      MIKE      JACK
  ←-----*-----*-----*-----→
  10 character space

```

To combine string variables to generate a new string, add string variables together using "+".

```

140 XS = BS + CS + DS + JS + GS
150 YS = AS + CS + BS + FS + IS + GS
160 PRINT XS
170 PRINT YS

```

With this, a new string variable is possible.



■ Another type of INPUT

Combine string variables and INPUT statement in a program to create a poem.

```

10 INPUT AS, BS, CS
20 PRINT AS ; " " ; BS ; " " ; CS
30 GOTO 10
RUN
? A FROG JUMPS
? INTO A POND
? WITH A SPLASH OF WATER.
A FROG JUMPS INTO A POND WITH A SPLASH OF WATER.

```

Space for syllable separations.



Using INPUT statement, the input of a string can be keyed-in, requiring no quotation marks " ".

Another example of this is shown below.

```

10 PRINT "TYPE IN ANYTHING AT ALL"
20 INPUT AAS
30 PRINT "YOU HAVE JUST TYPED" ; AAS
40 GOTO 10

```

String variables, when combined with READ and DATA statements, can be generated into a program.

```

10 READ X1$, X2$
20 PRINT X1$ ; "LIKE CREAM" ; X2$
30 DATA DO YOU, CAKES ?
RUN
DO YOU LIKE CREAM CAKES ?

```

Note that quotation marks are not required when READ statement is used.



LEFT\$, MID\$, RIGHT\$

LEFT \$ (), MID \$ () and RIGHT \$ () are statements to generate new strings by taking out part of strings.

```
10 AS = "AQUARIUS PISCES ARIES LEO"
20 BS = LEFTS (AS, 15)
30 PRINT BS
RUN
AQUARIUS PISCES
```

Character up to the 15th from the left hand side.

LEFT \$ (AS, 15) selects the characters up to the 15th out of the string AS in order to generate a new string. The string variable BS has been defined for the new string.

To select some characters when counted from the right hand side of a string, RIGHT \$ () is used.


```
40 CS = RIGHTS (AS, 9)
50 PRINT CS
RUN
ARIES LEO
```

Selects the last 9 characters from AS

To select characters in the center of a string, MIDS () is used.

```
60 DS = MIDS (AS, 10, 12)
70 PRINT DS
RUN
PISCES ARIES
```

Selects 12 characters starting at position 10 of AS

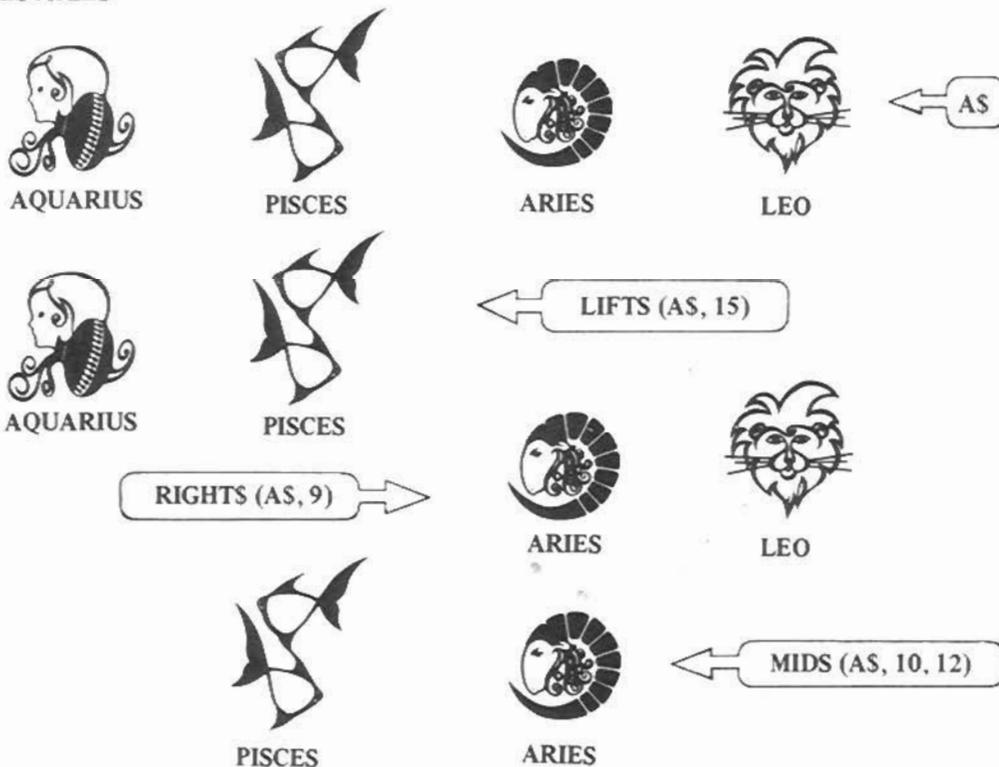

■ LEN is a Measurement for Strings

LEN () is used to discover the character count of a string.

A simple example of this statement is as follows:

```
10 AS = "ABCDEFGH"
20 PRINT LEN (AS)
RUN
7
```

The character count of a string variable AS, namely "7" is displayed.

Here is a program using LEN () statement for drawing a square.

```
10 PRINT "☐" : PRINT "TYPE HORIZONTAL SIDE USING * KEY"
20 INPUT AS
30 FOR J = 1 TO LEN (AS) - 2
40 PRINT TAB (2) ; " * " ; SPACES (LEN (AS) - 2) ; " * "
50 NEXT J
60 PRINT TAB (2) ; AS : GOTO 20
```

Vary the values of * input. The computer performs square drawing by using LEN (). Then, drawing is made possible by characters or symbols other than "*". Using LEFT \$ (), line numbers 20 and 40 of the previous program are modified.

```
20 INPUT AS : AAS = LEFT $ (AS, 1)
40 PRINT TAB (2) ; AAS ; SPACE $ (LEN (AS) - 2) ; AAS
```

The use of LEN makes a string parade possible.

```
10 SS = "SHARP BASIC"
20 FOR M = 1 TO LEN (SS)
30 PRINT LEFT $ (SS, M)
40 NEXT M
RUN
S
SH
SHA
SHAR
SHARP
SHARP
SHARP B
SHARP BA
SHARP BAS
SHARP BASI
SHARP BASIC
```

```
10 SS = "SHARP BASIC"
20 FOR M = 1 TO LEN (SS)
30 PRINT RIGHT $ (SS, M)
40 NEXT M
RUN
C
IC
SIC
ASIC
BASIC
BASIC
P BASIC
RP BASIC
ARP BASIC
HARP BASIC
SHARP BASIC
```



■ ASC and CHR\$ are Relatives

ASC

```

10 PRINT ASC ("A");
20 PRINT ASC ("ABC");
30 TS = "Z" : PRINT ASC (TS)
40 END
RUN
   65 65 90
Ready

```

With strings in the parenthesis () of ASC, when PRINT is keyed-in the result always shows numerals. Actually, this shows the ASCII code. All characters used with the computer are based on the ASCII code. For its table, refer to page 210. ASC () picks up the ASCII code for the first character of string in the parenthesis (). This gives a clear clue to the reason why the same result is obtained although the strings in the parentheses differ between line numbers 10 and 20. The ASCII code is for characters up to 255.

CHR\$

If characters can be converted to the ASCII code, it is natural that there is a statement to reverse the conversion. That's right. CHR\$ statement does that job.

```

PRINT CHR$ (65), CHR$ (ASC ("K"))
A      K
Ready


```

A cipher is generated using the numerals. Let CHR\$ read it.

```

10 FOR J = 1 TO 24 : READ A
20 BS = CHR$ (A)
30 PRINT BS ; : NEXT : END
40 DATA 73, 32, 83, 84, 85, 68
50 DATA 89, 32, 66, 65, 83, 73
60 DATA 67, 32, 79, 70, 32, 77
70 DATA 90, 45, 56, 48, 65, 46
RUN
I STUDY BASIC OF MZ - 80A.
Ready

```

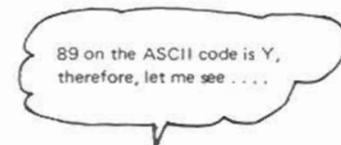

■ STR\$ and VAL are Numeral Converters

STR \$

```

10 A = 12 : B = 3 : C = A + B
20 CS = STR$ (A) + STR$ (B)
30 PRINT C, CS
40 END
RUN
    15      123
Ready

```

The value of variable A is converted to a string of characters by STR\$ (A) and string-processed. The reason why CS contents are 123 is clear to you. In the following program, use STR\$ to match the “.” of data.

```

10 FOR X = 1 TO 5
20 READ A
30 L = 5 - LEN (STR$ (INT (A)))
40 PRINT TAB (L) ; A
50 NEXT : END
60 DATA 1. 2 3 4 5 6, 12. 3 4 5 6
70 DATA 123. 4 5 6, 1234.5 6
80 DATA 12345. 6

```



The results of the program on the left are as follows.

```

          1. 2 3 4 5 6
          12. 3 4 5 6
         123. 4 5 6
        1234. 5 6
       12345. 6
      READY

```

VAL

VAL statement has a function opposite to STR \$ statement. In other words, it converts a string of characters to a numeral.

```


10 AS = "1 2 3 4 5 6"
20 B = VAL (AS)
30 C = 6 5 4 3 2 1 + B
40 PRINT AS
50 PRINT B
60 PRINT C
80 END
RUN

```

```

1 2 3 4 5 6 ..... Not a numeral but a string.
 1 2 3 4 5 6 ..... Numeral, so there is a space for ± (plus/minus sign) to be placed
 7 7 7 7 7 ..... before the most significant digit of the numeral. For a netagive
READY                                     numeral, a minus sign is placed in the space.

```

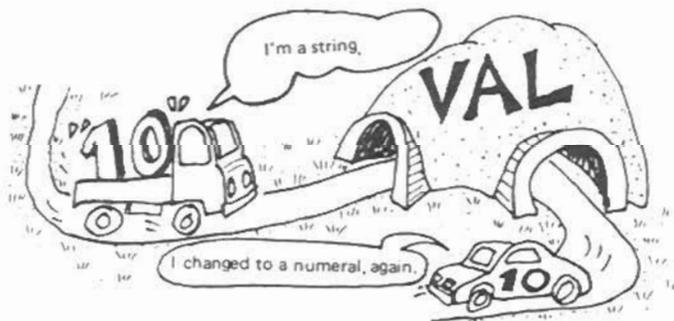

Print out as £123,456,789.....


This program reads an integer of an optional figure under the INPUT statement, and writes it adding commas (,) to every 3 figures from the right. Given 0 as an integer, the program terminates.

```

10 PRINT "INPUT INTEGER" ;
20 INPUT XS
30 IF XS = "0" THEN END
40 PRINT "£" ;
50 FOR Y = 1 TO LEN (XS)
60 PRINT MIDS (XS, Y, 1) ;
70 Z = LEN (XS) - Y
80 IF Z/3 <> INT (Z/3) GOTO 110
90 IF Z = 0 GOTO 110
100 PRINT " , " ;
110 NEXT Y
120 PRINT : PRINT : GOTO 10
RUN
INPUT INTEGER ? 1 2 3 4 5 6 7 8 9
£ 123,456,789


INPUT INTEGER ? 1 2 3 4
£ 1,234

```

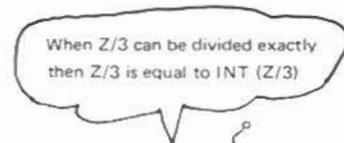

IF Z/3 <> INT(Z/3)
GOTO 110

Line number 80 checks to see if Z (Character position counted from the right) is a multiple of 3. If so, a comma “ , ” is placed at line number 100. For example, presuming that the input integer is a number of 9 figures, the following is obtained.

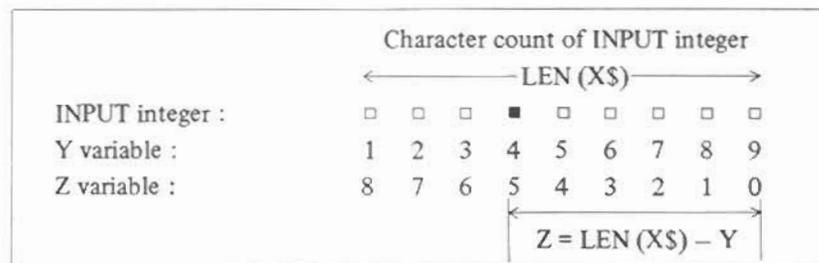

Take a number consisting of figures 1 to 4, and another number of the same figures but with a reverse arrangement to the former, then add up these two numbers. You will thus find that the sum is the same whether it is counted from the right or from the left.

```

10 PRINT " ☑ ENTER SOME NUMBER COMPOSED OF FIGURES 1 TO 4 (WITHIN 8 DIGITS)"
20 Z$ = "" : INPUT XS
30 FOR K = LEN (XS) TO 1 STEP - 1
40 Y$ = MIDS (XS, K, 1)
50 Z$ = Z$ + Y$ : NEXT K : X = VAL (XS) + VAL (Z$)
60 PRINT X : PRINT : GOTO 20

```

■ Difference between the Simple and Compound Interests

£ 10,000 is deposited in a bank, and one year later, £ 10,600 is drawn. Interest rate, in this case, is found to be $600/1000 = 0.06$ or 6%. Then, what is the interest when deposited for 2 years. There are two methods available for interest calculation. One is simple interest calculation based on the fact that the interest of £ 600 for the first year doubles for the second year, amounting to £ 1200. The other is compound interest calculation based on the idea that a deposit at the beginning of the second year is £ 10,600 with interest of £ 636 ($£ 10,600 \times 0.06$) added to make £ 1236 for two years. Compound interest calculation is slightly better in interest rate. For a larger sum of money deposited for longer terms, the difference in interest rate between the two methods must be noticeable. The following is the equation for determining interest included for the n year in each calculation method.

Interest included by simple calculation (n year with rate R)

$$B = X (\text{principal}) + n \cdot X \cdot R$$

Interest included by compound calculation (n year with rate R)

$$C = X \cdot (1 + R)^n$$

Based on the above equations, the following program is generated to calculate interest included both in simple and compound interests.

```

10 PRINT "PRINCIPAL"
20 INPUT X
30 PRINT "INTEREST RATE %"
40 INPUT R
50 PRINT "NUMBER OF YEARS"
60 INPUT Y : PRINT : PRINT
70 PRINT "PRINCIPAL =" ; X
80 PRINT "INTEREST RATE =" ; R ; "% "
90 PRINT "YEARS" ; TAB (6) ; "SIMPLE" ;
100 PRINT TAB (17) ; "COMPOUND" ;
110 PRINT TAB (30) ; "DIFFERENCE"
120 FOR A = 1 TO Y
130 B = X + A * X * (R/100)
140 C = INT (10 * X * (1 + R/100) ^ A) / 10
150 D = C - B
160 PRINT A ; TAB (6) ; B ;
170 PRINT TAB (15) ; C ; TAB (30) ; D
180 NEXT A
190 PRINT : PRINT : GOTO 10

```

The following is an example of program execution:

```

PRINCIPAL = 10000
INTEREST RATE = 6%

```

YEARS	SIMPLE	COMPOUND	DIFFERENCE
1	10600	10600	0
2	11200	11236	36
3	11800	11910.1	110.1
4	12400	12624.7	224.7
5	13000	13382.2	382.2
6	13600	14185.1	585.1
7	14200	15036.3	836.29999

■ Annuity if Deposited for 5 years

In the previous example, we looked at the difference in interest between the simple and compound interest calculations for money deposited. Actually, however, monthly deposit, like fixed deposit, is more familiar to us. If a fixed amount of money X is deposited monthly, the interest included increases with $X(1+R)$ for the first year, $X(1+R)^2$ for the second and so on. In addition, when sum X is deposited yearly, the money to be deposited the year after, 2 years from now, will be $X(1+R)$. Such an increase of deposits is shown below in equations:

Interest included a year after (Principal X and interest R)

$$M_1 = X(1+R)$$

Interest included 2 years after

$$M_2 = X(1+R)^2 + X(1+R)$$

Interest included 3 years after

$$M_3 = X(1+R)^3 + X(1+R)^2 + X(1+R)$$

Based on the above, the interest included is calculated in the following equation for n years.

$$M_n = X(1+R)^n + X(1+R)^{n-1} + \dots + X(1+R)$$

This is simplified as follows:

$$M_n = X((1+R)^{n+1} - (1+R))/R$$

Here's the program generated to indicate what is the interest included for any desired year with the same amount of money deposited each year. Even though the same amount is deposited, this program is designed to allow inputs of minimum and maximum amounts.

```

10 PRINT "INTEREST RATE %";
20 INPUT R
30 PRINT "ENTER AMOUNTS"
40 PRINT "MINIMUM" ;: INPUT L
50 PRINT "MAXIMUM" ;: INPUT H
60 PRINT "NUMBER OF YEARS" ;
70 INPUT Y : PRINT : PRINT
80 PRINT "RATE" ; R ; "%"
90 PRINT "EACH YEAR" ; TAB(12) ; Y ; "YEARS"
100 R = R/100 : PRINT
110 FOR A = L TO H STEP 10000
120 B = INT (A * ((1 + R) ^ (Y + 1) - (1 + R))/R)
130 PRINT A ; TAB(12) ; B
140 NEXT A
150 PRINT : PRINT : GOTO 10

```

The Result of Program Execution

```

INTEREST RATE %? 10
ENTER AMOUNTS
MINIMUM? 50000
MAXIMUM? 100000
NUMBER OF YEARS? 7

RATE 10%
EACH YEAR      7YEARS
50000          521794
60000          626153
70000          730512
80000          834871
90000          939229
100000         1043588

INTEREST RATE %? ■

```


■ Stop, Check and Continue

The computer does not always work as desired when operated with a program generated. This requires a STOP statement to be inserted to check the contents of variables at the stop position. For example, in the following program, the STOP statement is inserted.

```
10 READ A, B
20 X = A * B
30 STOP
40 Y = A/B
50 END
60 PRINT X, Y
70 DATA 15, 5
80 END
RUN
Stop in 30 ←
```

At the time, the display of variables is made in direct mode as follows:

```
PRINT A,B,X CR
```

This enables you to check the program. To re-start the program, give a command to the computer as follows:

```
CONT CR
```

The computer restarts execution from the stop position. With the END statement at line number 50, the computer displays the "Ready" and stops again. Then, print in the direct mode, as follows:

```
X = 3 : Y = 5 CR
```

The computer will then continue program execution when the CONT command is given, displaying 3 and 5 for variables X and Y.

The following program continues to display a triangle of * marks, indefinitely.

```
10 A = 0 : B = 38 : C = 1
20 FOR X = A TO B STEP C
30 FOR Y = 0 TO X
40 PRINT " * " ;
50 NEXT Y : PRINT : NEXT X
60 K = A : A = B : B = K
70 C = -C : GOTO 20
```

With the **BREAK** key pressed while holding down the **SHIFT** key, program execution stops. Then, insert the following in the program and give the CONT command.

```
100 END
```

This is followed by the display below.

```
* Error 17 .....CONT command cannot be executed.
```

The CONT command cannot be used when a program is edited using a line number after program execution has been stopped with the STOP statement, END statement or **BREAK** key operation. This requires special attention.

The CONT command is used when ;


- Program execution is stopped with the **SHIFT** - **BREAK** keys.
- Program execution is stopped by the STOP or END statement.
- Inputs are stopped at the INPUT statement using the **SHIFT** - **BREAK** keys.

The CONT command cannot be used ;

- Before program has been executed using the RUN command.
- When program is edited after execution has been stopped.
- If an error occurs during execution. Program returns to the "Ready".
- To stop cassette tape operation, cassette tape operation is stopped with the **SHIFT** + **BREAK** keys.
- When the MUSIC command for music sound is stopped.

Jump in masse Using the ON GOTO Statement

You have learnt much about the GOTO statement. Description here is given of the On GOTO statement, an extended function of the GOTO statement.

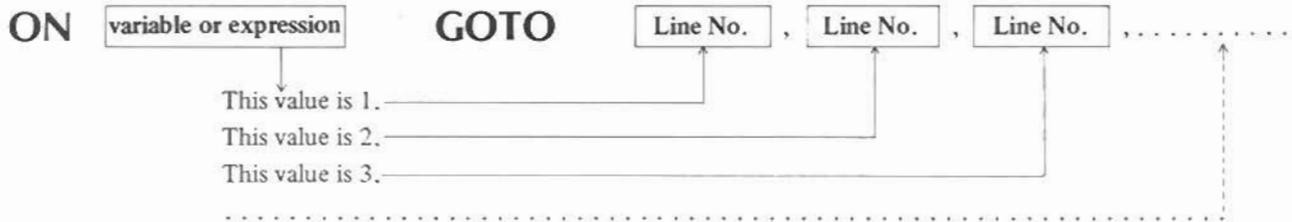

For example, when the value of a variable or expression after ON is 3, a jump is effected to the third line number that follows GOTO. In other words, it is possible to assign the branch of a program in accordance with the values of variables.

```
10 INPUT "NUMBER (1 - 3) ?" ; A
20 ON A GOTO 50, 60, 70
50 PRINT "X X X" : GOTO 10
60 PRINT "Y Y Y" : GOTO 10
70 PRINT "Z Z Z" : GOTO 10
RUN
NUMBER (1 - 3) ? 1
X X X
NUMBER (1 - 3) ? 2
Y Y Y
NUMBER (1 - 3) ? 3
Z Z Z
```

Given 1, 2, for example, integer 1 is processed, cutting off any place of decimals.


Let's play a joker-pick game using the ON GOTO statement. A joker is included in 5 cards. The place of the joker is unknown, of course. Guess where the joker is to compete with the computer for a win. When asked "Do you pass?" in the program, key-in 1 for pass, 2 for not pass and 3 if the game is not to be played. Three passes are allowed.

```
10 R = INT (5 * RND (1)) + 1
20 N = N + 1 : IF N = 6 THEN 120
30 INPUT "DO YOU PASS?" ; X
40 ON X GOTO 60, 90, 50
50 PRINT "GAME NOT PLAYED !!!" : GOTO 120
60 NP = NP + 1
70 IF NP >= 4 THEN NP = NP - 1 : N = N - 1 : PRINT "NO PASS ALLOWED"
80 GOTO 20
90 NR = NR + 1
100 IF R = NR + NP THEN PRINT "UNLUCKY ! YOU HAVE SELECTED THE JOKER" : GOTO 120
110 PRINT "LUCKY ! YOU HAVE NOT SELECTED THE JOKER" : GOTO 20
120 END
```



ON....GOSUB is the Use of a Subroutine Group

The ON GOSUB statement is very similar in function to the ON GOTO statement.

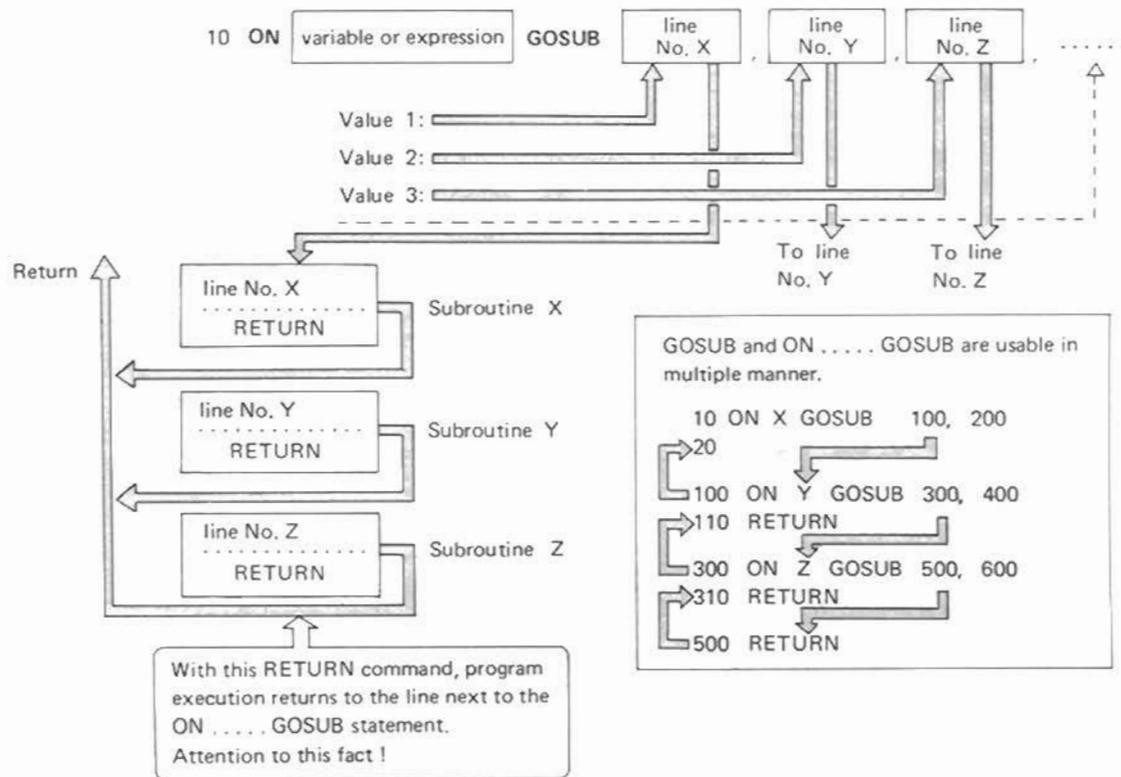

Now, let's consider the program for a time table to check your progress. Most important in the following program is that subroutines are called at line number 180, despite the jump made at line number 90 to line number 170 through 190 of subroutines.

Thus, the GOSUB and ON GOSUB statement can be used in a convenient, multiple manner.

```

10 AS = "FRENCH " : BS = "MATHEMATICS" : CS = "ENGLISH"
20 DS = "SCIENCE " : ES = "MUSIC      " : FS = "ATHLETICS"
30 GS = "SOCIAL STUDIES" : HS = "ART          " : IS = "TECHNOLOGY"
40 JS = "RELIGION  " : KS = "ECONOMICS"
50 PRINT "WHAT DAY OF THE WEEK ? "
55 PRINT "(1 - MON, 2 - TUE, 3 - WED, 4 - THU, 5 - FRI, 0 - ALL)"
60 INPUT XS : X = ASC (XS) - 47
70 FOR Y = 0 TO 3 : PRINT TAB (3 + 8 * Y) ; Y + 1 ;
80 NEXT Y : PRINT
90 ON X GOSUB 170, 110, 120, 130, 140, 150
100 PRINT : GOTO 50
110 PRINT "MON : " ; AS ; CS ; DS ; BS : RETURN
120 PRINT "TUE : " ; HS ; HS ; ES ; BS : RETURN
130 PRINT "WED : " ; AS ; CS ; JS ; KS : RETURN
140 PRINT "THU : " ; DS ; AS ; ES ; FS : RETURN
150 PRINT "FRI : " ; AS ; DS ; IS ; GS : RETURN
170 FOR Y = 1 TO 5
180 ON Y GOSUB 110, 120, 130, 140, 150
190 PRINT : NEXT Y
200 RETURN
  
```




Primary Array has the Strength of 100 Men

Now, consider the substitution of variables for 100 items of data. The use of variables A1 and A2 makes the following possible.

```
10 A1 = 5
20 A2 = 30
30 A3 = 12
.....
```

Just a minute. This is terribly hard work for writing 100 statements! For this, the primary array is available as a new type of variable, which makes program generation very convenient. Now, let's look at what the primary array is all about.

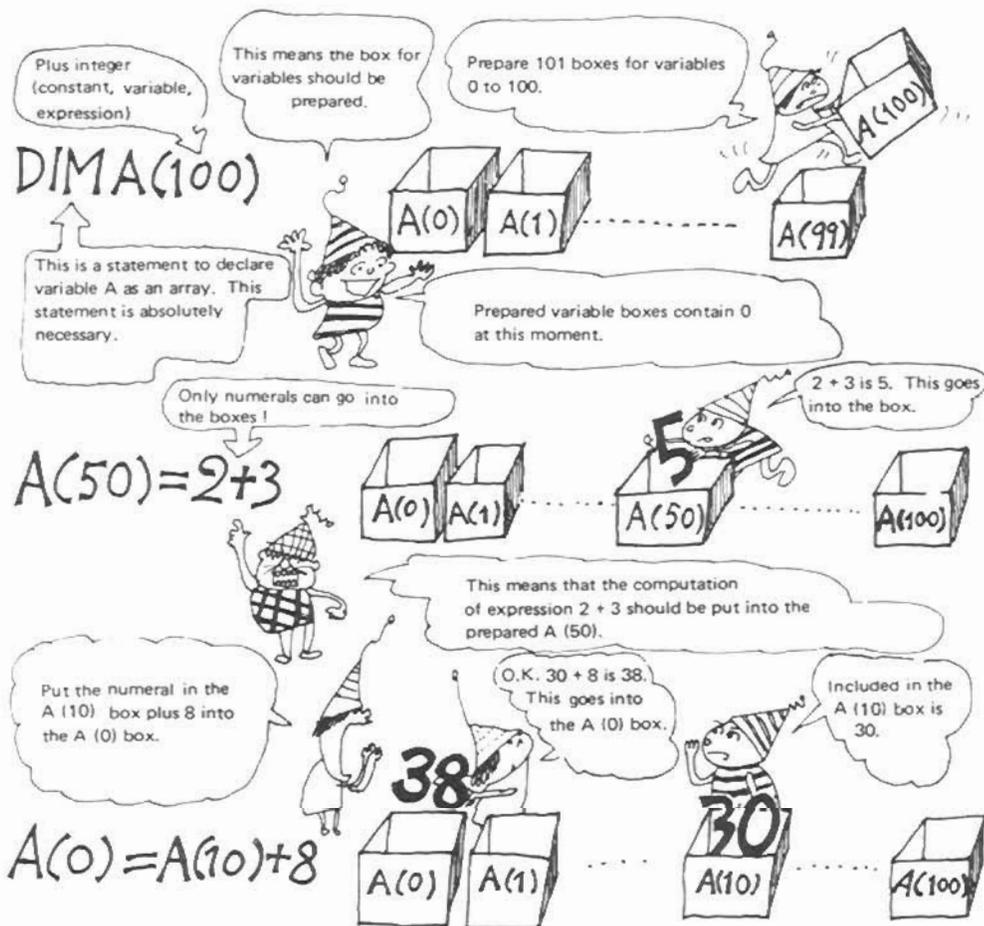

Now, you have understood what the primary array is, haven't you?


Using the primary array, the program has been generated as follows:

```
10 DIM A (100)
20 FOR J = 1 TO 100
30 READ A (J)
40 NEXT J
50 DATA 5, 30, 12, .....
```

See, the program is very short. As is clear from this example, variables in the form of an array can assign the parenthesis of subscribed variables, such as A (J), with variable J. This is the main feature of the primary array.

■ Array is also Available for String Variables

Since an array is available for numeral variables, there must be an array available even for string variables. Here's an introduction to what the primary array for string variables is all about.

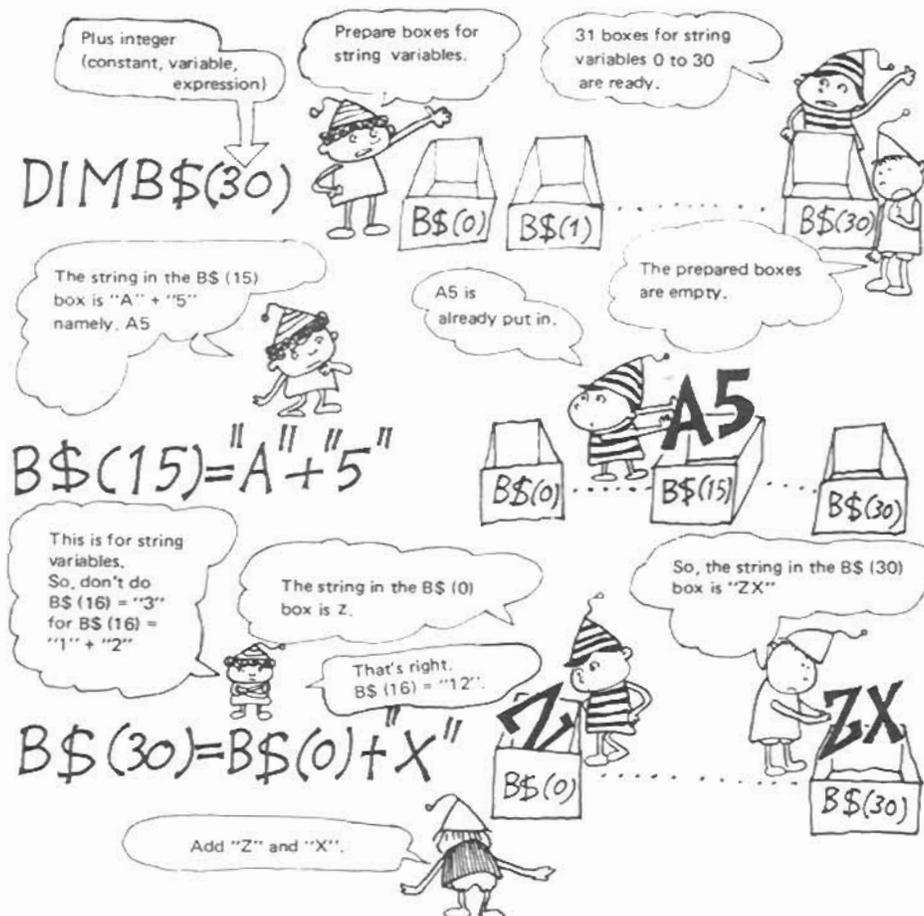

Let's generate a simple program. Just a look at this. Keeping variable strings in the form of arrays eliminates the labour of writing whenever they are used. The program itself is neat and simple.

```

10 DIM AS (2), BS (2), CS (2)
20 FOR J = 1 TO 2 : READ AS (J), BS (J)
30 CS (J) = AS (J) + " " + BS (J)
40 PRINT AS (J), BS (J), CS (J)
50 NEXT J
60 END
70 DATA YOUNG, GIRL, WHITE, ROSE

RUN
YOUNG      GIRL      YOUNG GIRL
WHITE      ROSE      WHITE ROSE
Ready

```

■ Array is the Master of File Generation

Some teachers say that testing is all right but putting test results in order is really hard. If so, some students insist testing should be stopped. A good method is available for teachers who are subject to giving tests to students.

The use of an array helps them solve the problem! The following shows student identification and marks for mathematics.

Student No.	20	15	12	40	23	16	31	45	26	11
Marks	75	51	28	56	100	81	60	43	66	48

Generate a file program arranged in the order of merit.


```

10 DIM A (10), B (10)
20 FOR J = 1 TO 10
30 READ A (J), B (J) : NEXT
40 FOR K = 1 TO 9 : M = 0
50 FOR J = K TO 10
60 IF B (J) <= M THEN 80
70 M = B (J) : L = J
80 NEXT J
90 B (L) = B (K) : B (K) = M
100 A1 = A (L) : A (L) = A (K) : A (K) = A1
120 NEXT K
130 PRINT " ☑ "
140 PRINT "ORDER OF MERIT (MATHEMATICS)"
150 PRINT
160 PRINT "STUDENT NO." ; TAB (14) ;
170 PRINT "MARKS"
180 FOR J = 1 TO 10
190 PRINT A (J) ; TAB (14) ; B (J) : NEXT J
200 END
210 DATA 20, 75, 15, 51, 12, 28, 40, 56, 23, 100
220 DATA 16, 82, 31, 60, 45, 43, 26, 66, 11, 48
RUN
ORDER OF MERIT (MATHEMATICS)

```

STUDENT No.	MARKS
23	100
16	81
20	75
26	66
31	60
40	56
15	51
11	48
45	43
12	28

Ready

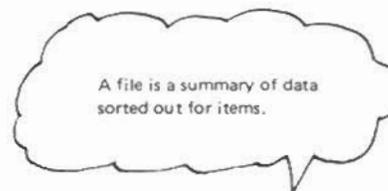

■ Challenge of French Study

We used to study french words using word-notebooks. Smart and more simplified word-notebooks are available using the computer. French words and their meanings are contained in separate files. The computer gives two types of questions; one asking about the meanings of French words retrieved from the file and the other asking English to be translated to French. In the program, the primary string array is used as the files containing French words and their meanings. Executing the following program, try to test your French vocabulary, answering a variety of questions the computer will ask you.

```

10 DIM AS (10), BS (10), CS (10)
20 FOR J = 1 TO 10
30 READ AS (J), BS (J)
40 CS (J) = AS (J) + BS (J)
50 NEXT J
60 K = INT (10 * RND (1)) + 1
70 PRINT "  WHAT IS MEANING OF THE WORD ? "
80 PRINT AS (K),
90 INPUT XS
100 AXS = AS (K) + XS
110 IF CS (K) = AXS THEN PRINT "O.K.!!" : FOR M = 1 TO 3000 : NEXT M : GOTO 150
120 PRINT "WRONG" : FOR M = 1 TO 1000 : NEXT M
130 PRINT "  " ; SPACES (10) : PRINT "   " ; TAB (12) ; SPACES (25)
140 PRINT "  " : GOTO 80
150 K = INT (10 * RND (1)) + 1
160 PRINT "  TRANSLATE TO FRENCH"
170 PRINT BS (K),
180 INPUT YS
190 YBS = YS + BS (K)
200 IF CS (K) = YBS THEN PRINT "O.K.!!" : FOR M = 1 TO 3000 : NEXT M : GOTO 60
210 PRINT "WRONG" : FOR M = 1 TO 1000 : NEXT M
220 PRINT "  " ; SPACES (10) : PRINT "   " ; TAB (12) ; SPACES (25)
230 PRINT "  " : GOTO 170
240 END
250 DATA CHAT, CAT, PORTE, DOOR, MAISON, HOUSE, CHIEN
260 DATA DOG, CANARD, DUCK, POISSON, FISH, MAIN, HAND
270 DATA FENETRE, WINDOW, FILLETTE, GIRL, FEMME
280 DATA WIFE
RUN
WHAT IS MEANING OF THE WORD ?
POISSON      ?

```



In this case, the question about the meaning of poisson is answered by keying-in that English. Display of O.K.!! is on the CRT screen to indicate you are correct. For any other answer, error display is made. Conversely, furthermore, there is the case when you answer "POISSON" when asked about translation.

Secondary Array is More Powerful

Let's look at this table (bottom right) which is an improvement on the test result table (bottom left) of mathematics, English and French for 3 students.

Name	John	Peter	Paul
Subject			
Mathematics.	92	75	72
English	70	94	78
French	65	60	95

Student	John	Peter	Paul	
Subject	N			
M	1	2	3	
Mathematics.	1	A (1, 1)	A (1, 2)	A (1, 3)
English	2	A (2, 1)	A (2, 2)	A (2, 3)
French	3	A (3, 1)	A (3, 2)	A (3, 3)


M = 1 ... Mathematics
 M = 2 ... English
 M = 3 ... French
 N = 1 ... John
 N = 2 ... Peter
 N = 3 ... Paul

In the table at right, the subject, student and marks are expressed as M (1 - 3), N (1 - 3) and A (M, N), respectively. This is very convenient, for example, as is evident in the following:

A (2, 3) M = 2 means English, N = 3 means Paul English marks of Paul

Simple! Writing A (2, 3) alone gives a clear description of the English mark of Paul. M and N in the A (M, N) represent separate items. Writing A (M, N) using two items is called the secondary array. Two items used mean secondary array. The primary array previously described has one item.

Now, look at how this secondary array can be used in the program for the computer.

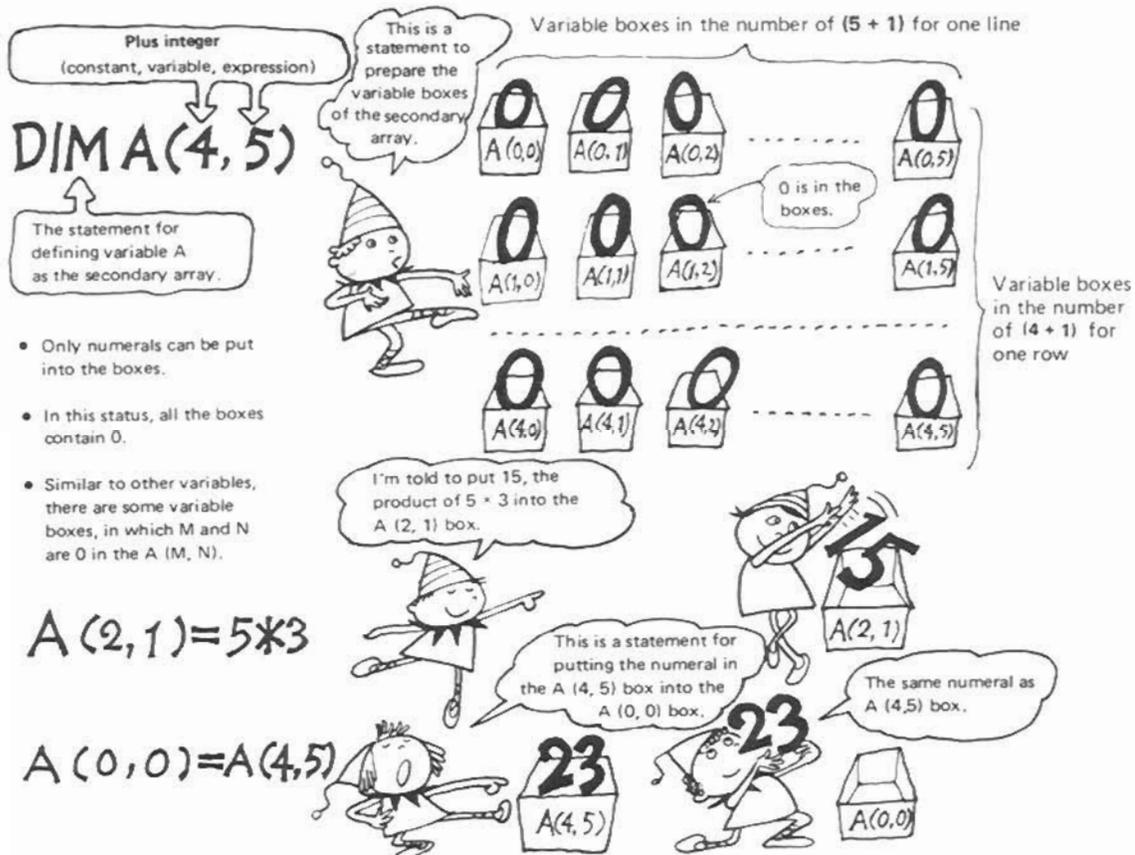

Two Exercises

Determine the value and curve of SIN when an angle varies from 0 degree to 180 degrees with 10 degree increments.

```

10 PRINT "  " ; TAB (5) ; "SIN"
20 PRINT
30 FOR K = 0 TO 180 STEP 10
40 X = K * π/180 ..... Value in degree unit is
50 S = SIN (X)           changed to radian.
60 A = INT (10 * S)
70 PRINT K ; TAB (4) ;
80 PRINT S ; TAB (18 + A) ;
90 FOR J = 0 TO A
100 PRINT " * " ;
110 NEXT J
120 PRINT
130 NEXT K
140 END

```



Execute the above program. This graph is rather rough. As for drawing graphs, a lot of examples will be described later so that you can learn more about them.

Now, let's generate a program to determine the prime numbers. A prime number is the one that cannot be divided by any integer smaller than itself, except for 1. Since the first prime number is 2, the multiples of 2, namely, even number larger than 2 are not prime numbers. To use variables with subscripts effectively, even numbers are excluded from the start.

```

10 DIM P (255)
20 FOR J = 0 TO 255
30 P (J) = J * 2 + 3 : NEXT J
40 FOR K = 0 TO SQR (255)
50 IF P (K) = 0 THEN 90
60 KK = K + P (K)
70 FOR L = KK TO 255 STEP P (K)
80 P (L) = 0 : NEXT L
90 NEXT K
100 PRINT 2 ;
110 FOR M = 0 TO 255
120 IF P (M) = 0 THEN 140
130 PRINT P (M) ;
140 NEXT M
150 END

```

Substitute 256 odd numbers from 3 to 513 for the parenthesis of variable P with a subscript.

Find prime numbers from the small in value and substitute 0 for the values of the multiples in the parenthesis of P.

The only even number "2" is first displayed, and then the values of P () which are not 0, namely, prime numbers are on display.

This program is a bit complex, isn't it? Note that the multiples of the prime number are excluded from the start. Details on structured programming of prime numbers will be described later.

■ Here's Advice on how Lists can be made

Names are sorted out when making a list of members. The use of a convenient program, if any, facilitates listing of any kind.

Here you learn how to sort strings for address books, telephone numbers or housekeeping account books.

```

10 PRINT "HOW MANY PERSONS ARE SORTED?"
20 INPUT X
30 DIM N$(X)
40 PRINT "KEY - IN NAMES ONE BY ONE"
50 PRINT "BUT IF 0, JOB DISCONTINUED!"
60 FOR A = 1 TO X : AS = STR$(A)
70 PRINT "NAME PLEASE "; "(" ; AS ; ")"
80 INPUT N$(A)
90 IF N$(A) = "0" THEN 110
100 NEXT A
110 A = A - 1
120 FOR B = 1 TO A - 1
130 FOR C = 1 TO A - B
140 D = LEN(N$(C)) : E = LEN(N$(C + 1)) : F = 1 : IF D < E THEN E = D
142 X = ASC(MID$(N$(C), F, 1))
143 Y = ASC(MID$(N$(C + 1), F, 1)) : IF X > Y THEN 150
144 IF X < Y THEN 180
145 IF (E = F) * (D = E) THEN 180
146 IF (E = F) * (D > E) THEN 150
148 F = F + 1 : GOTO 142
150 K$ = N$(C)
160 N$(C) = N$(C + 1)
170 N$(C + 1) = K$
180 NEXT C, B
190 PRINT
200 FOR B = 1 TO A
210 PRINT N$(B)
220 NEXT B
230 PRINT : END

```

Name is keyed-in.

The order is substituted.

Result is displayed.

Original List (Keyed-in)

TOM BROWN
 HAROLD GREEN
 JIM JONES
 ANNE MILLER
 TOM CARTER
 ELICE THOMAS



Sorted List

ANNE MILLER
 ELICE THOMAS
 HAROLD GREEN
 JIM JONES
 TOM BROWN
 TOM CARTER



■ Cards if Dealt by a Poker Player

The computer deals cards for you. It shuffles them correctly using random numbers, causing no trickery to occur.

```

10 DIM X (4, 13)
20 C = 0
30 PRINT : FOR A = 1 TO 5
40 GOSUB 90 : PRINT : NEXT A : PRINT
50 PRINT "IS YOUR HAND ALRIGHT WITH THESE CARDS?"
60 INPUT "ALL RIGHT (1), GIVE ME NEXT (2) ?" : A
70 ON A GOTO 400, 30
80 GOTO 50
90 C = C + 1 : IF C = 51 THEN 500
100 M = INT (4 * RND (1)) + 1
110 N = INT (13 * RND (1)) + 1
120 IF X (M, N) = -1 THEN 100
130 X (M, N) = -1
140 IF N = 1 THEN PRINT "ACE : " : GOTO 180
150 IF N = 10 THEN PRINT N ; TAB (5) ; " : " : GOTO 180
160 IF N < 10 THEN PRINT N ; TAB (5) ; " : " : GOTO 180
170 ON N - 10 GOTO 200, 210, 220
180 ON M GOTO 300, 310, 320, 330
200 PRINT "JACK : " : GOTO 180
210 PRINT "QUEEN : " : GOTO 180
220 PRINT "KING : " : GOTO 180
300 A$ = "♦" : GOTO 340
310 A$ = "♥" : GOTO 340
320 A$ = "♦" : GOTO 340
330 A$ = "♣" : GOTO 340
340 FOR B = 1 TO N
350 PRINT A$ ;
360 NEXT B
370 RETURN
400 PRINT
410 PRINT "THEN I RESHUFFLE."
420 FOR M = 1 TO 4 : FOR N = 1 TO 13
430 X (M, N) = 0
440 NEXT N, M : GOTO 20
500 PRINT
510 PRINT "TWO CARDS REMAIN ... DO YOU CONTINUE ?"
520 INPUT "YES (1), NO (2) ?" : B
530 ON B GOTO 400, 550
540 GOTO 510
550 END


```




Points of the program:

Line number 100 and 110	Turning up a new card.
Line number 120	If a newly turned up card has been previously turned up, another card is to be turned up.
Line number 130	Mark dealt cards with "-1".
Line numbers from 420 to 440	All cards are collected and their marks are returned to "0".

■ Program Recording (SAVE)

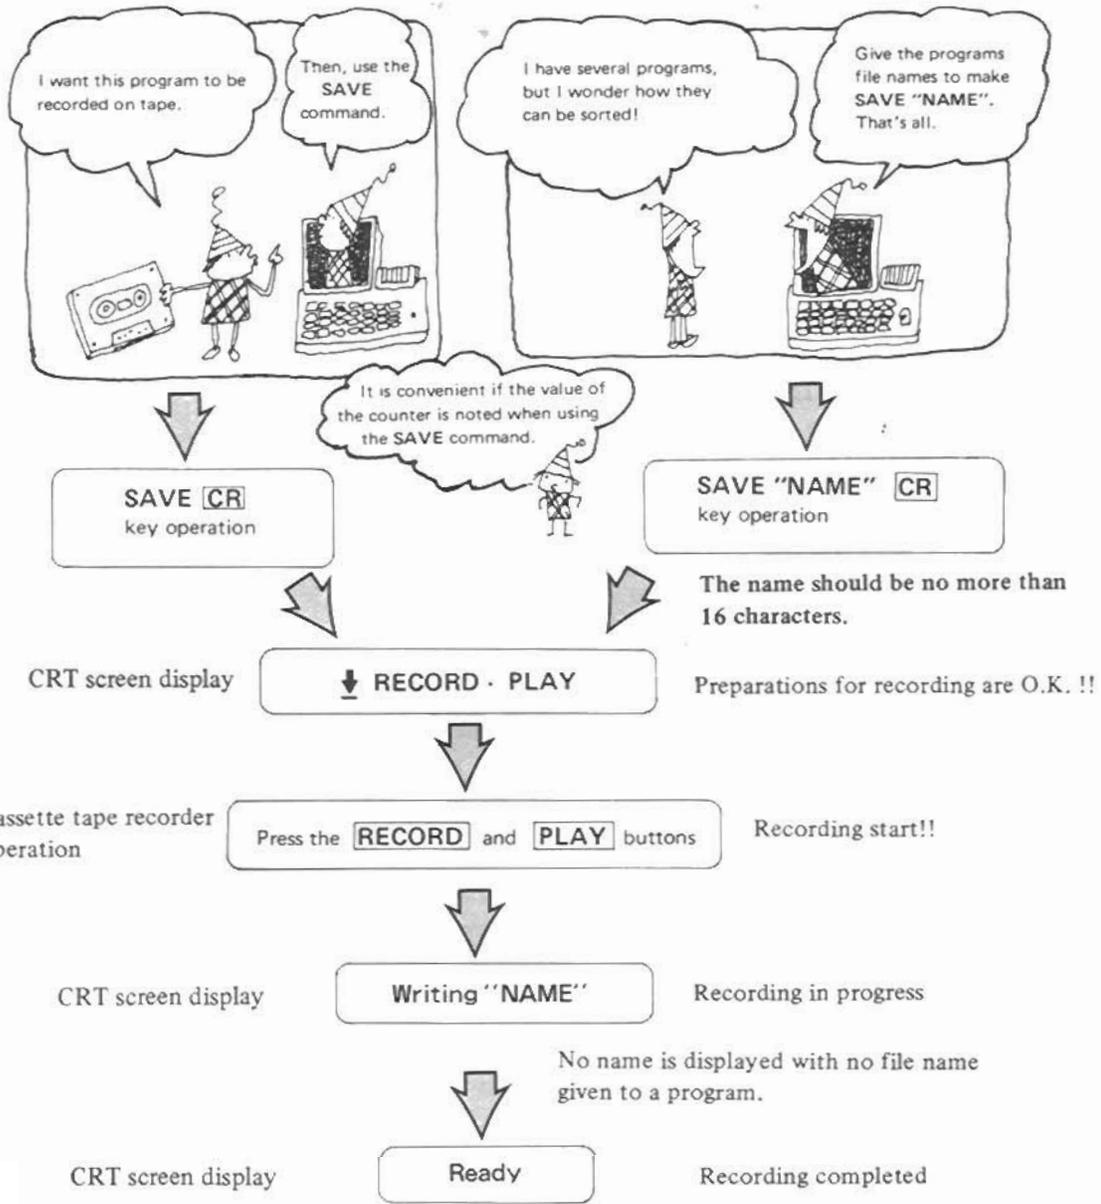


I'll take good care of my programs.

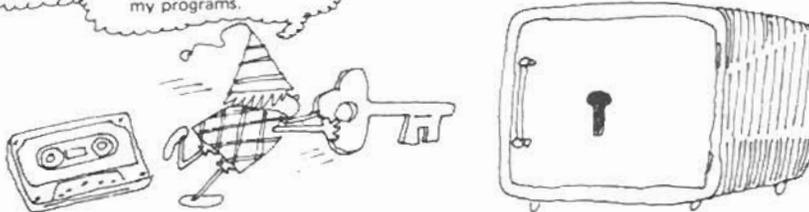


■ Use of VERIFY and LOAD Commands

Verify

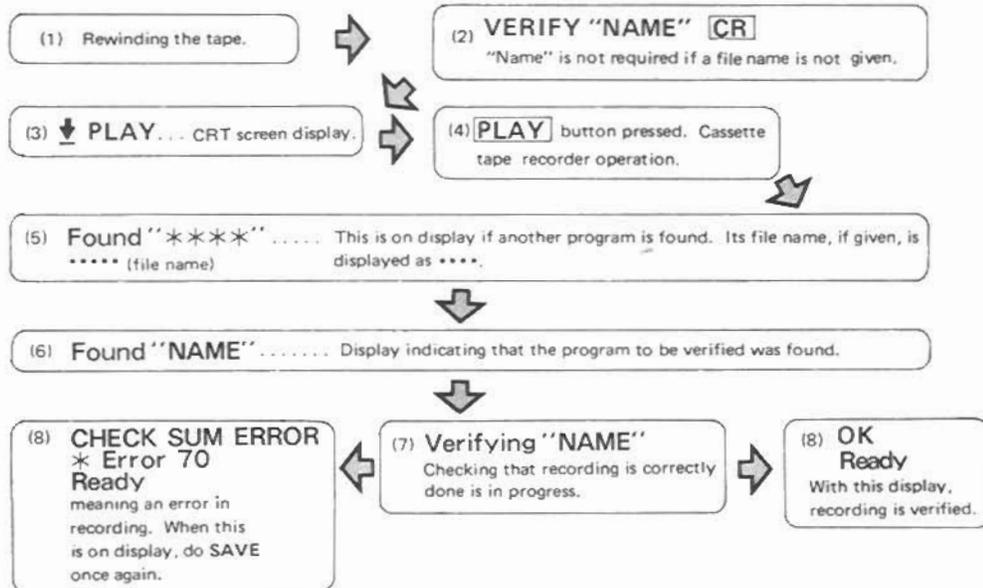

Load

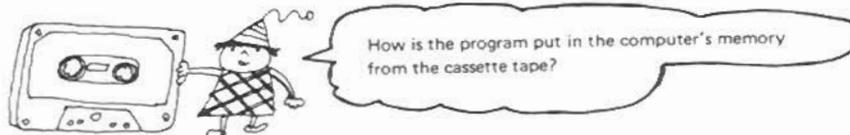

- (1) **LOAD "NAME" CR**
- (2) **PLAY**
- (3) Press the **PLAY** button.
- (4) Found "*****"
- (5) Found "NAME"
- (6) Loading "NAME"
- (7) Ready
- Display and operation are same as the steps (3) to (6) of the VERIFY command.
- Transfer to the computer in progress (loading).
- Loading completed.

■ Data can also be Stored on Cassette Tape

Data storage is also required if programs can be stored

To do so, 5 more statements must be learned. Then, a cassette tape can be used as a storage of data.

- WOPEN/T** This prepares for data writings. It also serves to name a group of data.
PRINT/T Identical in use to the PRINT statement, this writes data on a cassette tape.
ROPEN/T This statement prepares for data readouts. It serves to find a data group with the name given.
INPUT/T Identical in use to the INPUT statement, this reads data out of the cassette tape.
CLOSE/T This statement must be executed before ROPEN if WOPEN is executed or before WOPEN if ROPEN is executed.

To store data, numerals from 1 to 99 are first written on a cassette tape. The "DATA" at line number 10 is the name given to a group of data to be written. A maximum of 16 characters can be used to name a group of data. Of course, it is unnecessary to have a name if so desired.

```
10 WOPEN/T "DATA"
20 FOR X = 1 TO 99
30 PRINT/T X
40 NEXT X
50 CLOSE/T
60 END
```

Now, it is time to read the data which has just been written. First, rewind the cassette tape, then execute the following:

```
10 WOPEN/T "DATA"
20 FOR X = 1 TO 99
30 INPUT/T A
40 PRINT A
50 NEXT X
60 CLOSE/T
70 END
```



Why not execute the above program again with 100 substituted for 99 at line number 20? An error will occur this time. Because the 100th data was not originally written. It is impossible to memorize the written data counts. For this, a numeral, for example, -99999999 unrelated to that use for data is written as a mark at the end of written data.

```
10 WOPEN/T "DATA"
20 FOR X = 1 TO 99
30 PRINT/T X
40 NEXT X
50 PRINT/T -99999999
60 CLOSE/T
70 END
```

```
10 ROPEN/T "DATA"
20 FOR X = 1 TO 200
30 INPUT/T A
40 IF A = -99999999 THEN 70
50 PRINT A
60 NEXT X
70 CLOSE/T
80 END
```

■ Technique to Memorize a Music History

Statements for data storage and readouts can also be used for strings.

The five composer's names are written on the cassette tape and read out of it.

```

10 DIM N$ (5)
20 N$ (1) = "BACH"
30 N$ (2) = "MOZART"
40 N$ (3) = "BEETHOVEN"
50 N$ (4) = "CHOPIN"
60 N$ (5) = "BRAHMS"
70 WOPEN/T "GREAT MUSICIANS"
80 FOR J = 1 TO 5
90 PRINT/T N$ (J)
100 NEXT J
110 CLOSE/T
120 END


```

This is identical to numeric data writing. Then, readouts are done as follows:

```

200 DIM M$ (5)
210 ROPEN/T "GREAT MUSICIANS"
220 FOR K = 1 TO 5
230 INPUT/T M$ (K)
240 PRINT M$ (K)
250 NEXT K
260 CLOSE/T

```

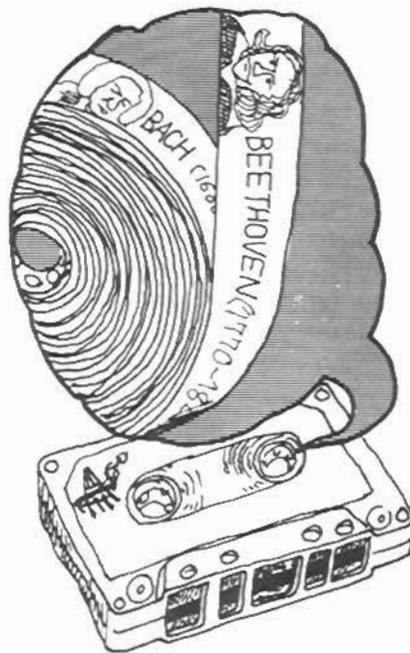

With this, writing and readout are completed. As you may have noticed, the name of string variable N\$ used for writing is different from that of string variable M\$ used for readouts. Since the value itself is written in the cassette tape as data, it has nothing to do with the name of the substituted variable. This makes it possible to change the variable name in the program as long as the string data is read by the string variable and the numeral data by the numeral variable.

Now, from what you have learnt so far, let's generate a data file with mixed numeric and string data. To also write the years when the previous composers died, for example, the following statements should be modified from the previous program.

```

15 DIM D (5)
65 D (1) = 1750 : D (2) = 1791 : D (3) = 1827
67 D (4) = 1849 : D (5) = 1897
90 PRINT/T N$ (J), D (J)

```

It is clear from the above that the generated file stores string and numeric data in alternate sequence. Accordingly, the readouts of the file must match the alternate sequence, for which line numbers 200, 230 and 240 should be modified as follows:

```

200 DIM M$ (5), T (5)
230 INPUT/T M$ (K), T (K)
240 PRINT M$ (K), T (K)

```

With those statements remaining unmodified, the numeric data is transferred to the string variable M\$ (), causing an error to occur.

List of School Work Results

This is a program for recording the results of French, English and science for a certain class.

```

10 INPUT "HOW MANY STUDENTS IN THE CLASS? "; N
20 DIM N$(N), K(N), E(N)
30 DIM R(N)
40 AS = " (MARKS) "
50 FOR X = 1 TO N
60 PRINT : PRINT X
70 INPUT "NAME PLEASE ? "; N$(X)
80 PRINT "FRENCH "; AS ;; INPUT K(X)
90 PRINT "ENGLISH"; AS ;; INPUT E(X)
100 PRINT "SCIENCE"; AS ;; INPUT R(X)
120 NEXT X
130 WOPEN/T " RESULT "
140 PRINT/T N
150 FOR X = 1 TO N
160 PRINT/T N$(X), K(X), E(X), R(X)
170 NEXT X
180 CLOSE/T

```



← For writing a data group named "RESULT".
 ← Writing the number of students in the class.
 ← Writing the marks for students.
 ← Writing completed.

Now, let's read the written data of results, and calculate the mean of individual students' points and the mean of each subject.

```

10 ROPEN/T " RESULT "
20 INPUT/T N
30 DIM N$(N), K(N), E(N)
40 DIM R(N)
50 FOR X = 1 TO N
60 INPUT/T N$(X), K(X)
70 INPUT/T E(X), R(X)
80 NEXT X
90 CLOSE/T
100 PRINT TAB(12); " FRENCH ";
110 PRINT TAB(19); " ENGLISH ";
120 PRINT TAB(27); " SCIENCE ";
130 PRINT TAB(34); " MEAN "
140 FOR X = 1 TO N
150 PRINT N$(X); TAB(11); K(X);
160 PRINT TAB(18); E(X);
170 PRINT TAB(26); R(X);
190 PRINT TAB(33); INT(10/3 * (K(X) + E(X) + R(X))) / 10
200 K(0) = K(0) + K(X) : E(0) = E(0) + E(X)
210 R(0) = R(0) + R(X)
220 NEXT X : PRINT " MEAN " ;
230 PRINT TAB(11); INT(10 * (K(0) / N)) / 10 ;
240 PRINT TAB(18); INT(10 * (E(0) / N)) / 10 ;
250 PRINT TAB(26); INT(10 * (R(0) / N)) / 10
260 END

```

← For finding the data group named " RESULT ".
 ← Readouts of the number of students in the class.
 ← Readouts of the name and marks for French.
 ← Readouts of marks for English and science.
 ← Readouts completed.

■ Music Library Kept on Tapes

This data file is indispensable to generate a "Music Library" as discussed in the paragraph "MUSIC Statement".

Data for tunes is string data consisting of various symbol groups. If a data group is named per tune, any tune can be picked out of those recorded on the tape when its name is designated.

For example, a tune can be picked up from this music library for use in the music box of your timer, with some modifications. The tunes in the music library can also be used for programs of games and graphics, providing a number of applications.

Molto Vivace



F. Chopin "Puppy Waltz"

To write the etude of F. Kroepsch used on page 79 into a data file, the following changes must be made:

```
300 WOPEN/T "ETUDE"
310 PRINT/T J1$, J2$, J3$, N1$, N2$, N3$
320 CLOSE/T
```

Attention is required to the fact that the character count for data writing should be within 255 characters. If written as follow;

```
305 MAS = J1$ + J2$ + J3$ : MBS = N1$ + N2$ + N3$
310 PRINT/T MAS, MBS
```

the contents of string variables MAS and MBS exceed 255 characters, which make data writing incomplete.

The length of string data may vary with each tune, therefore it is necessary to write data indicating the end of each tune so that a data error does not occur in data readouts. End mark of tune " ■■ ", for example makes each tune consist of string data within 100 characters for execution give below:

```
500 ROPEN/T "PUPPY WALTZ"
510 FOR A = 1 TO 100
520 INPUT/T MS (A)
530 IF MS (A) = " ■■ " THEN 550
540 NEXT A
550 CLOSE/T
```


This can read the "Puppy Waltz" completely.



■ Data Dank is a Computer's Speciality

The computer's splendid memory makes it easy to compile a list with a number of items. The sequence of items as data, for example, name, age, date of birth, present address and permanent address, is brought into memory. This is called a data bank.

This data bank makes it simple to retrieve and sort out items depending on the type of program. Retrieving is made for all the data related to any required items assigned. For example, a blood type is assigned to retrieve all people of the same blood type, and this is called "retrieving by blood type". In addition, with an eye to a certain item, names are arranged in ABC order, for example, or ages are arranged in the order of the young to the old. This is called "sorting".

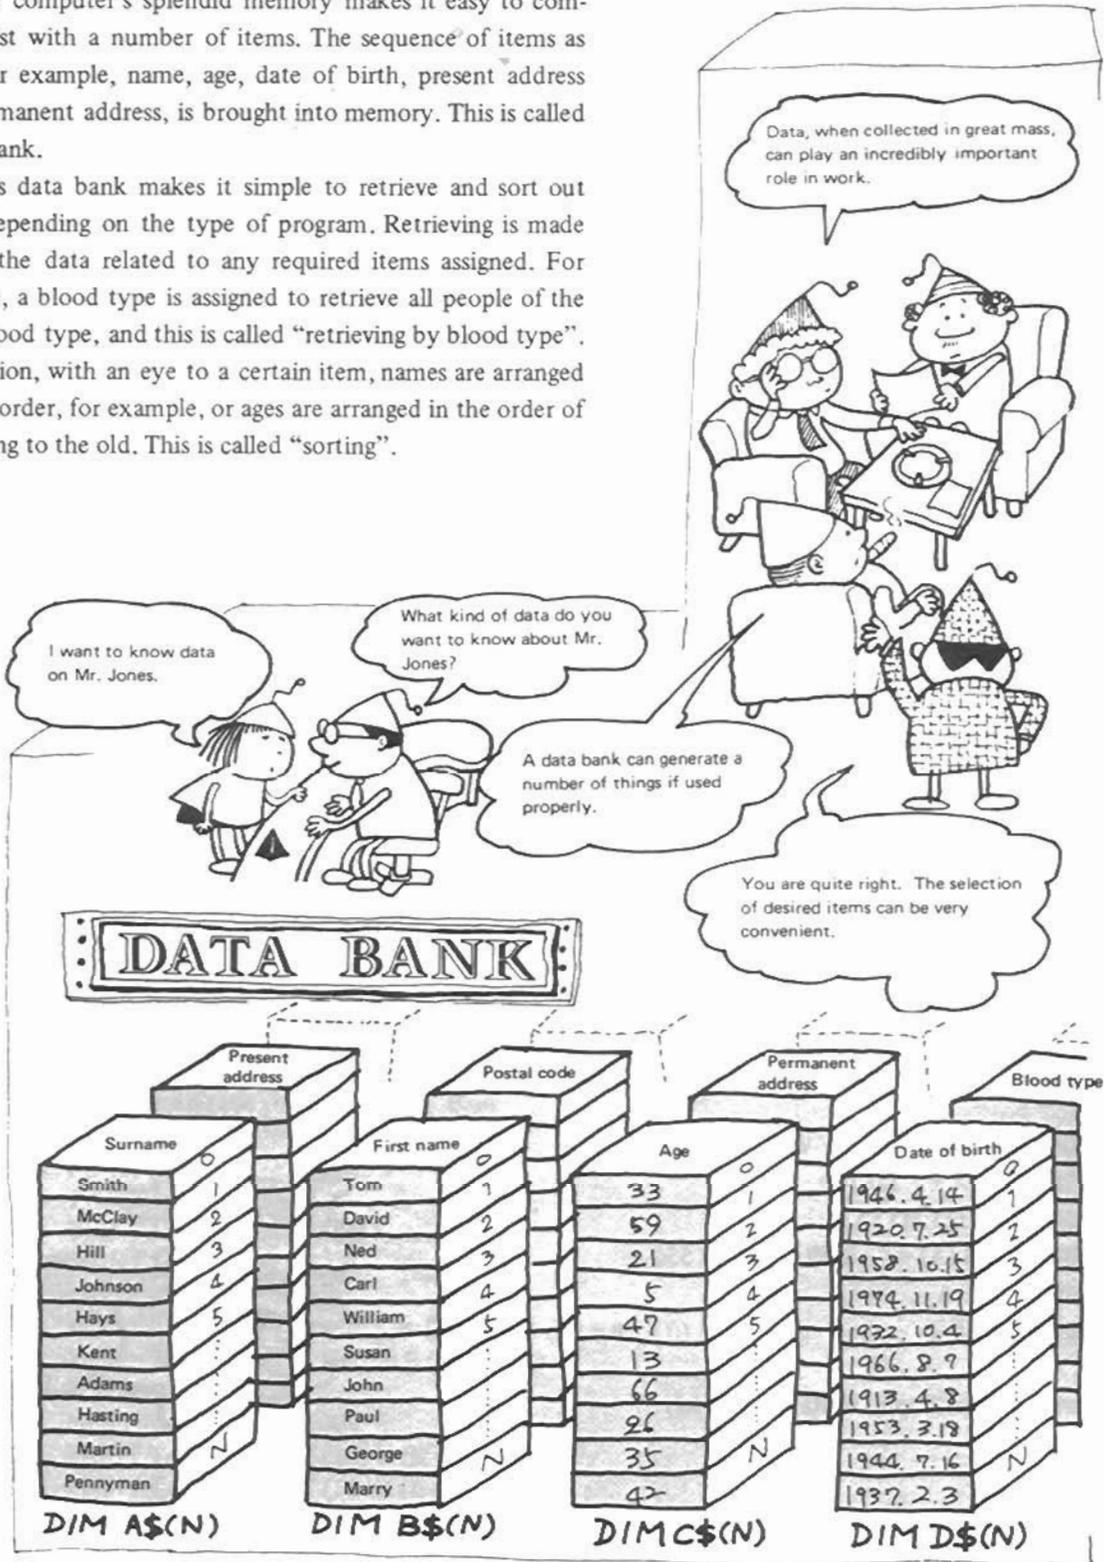

■ Telephone Number List is also a Data Bank

With the above understood, a summary is made of the program in which string data is put into the memory of the DATA statement. Based on this program, modifications are possible so that the address and postal code are also available.

```

10 N = 12
20 DIM MS (N) ..... Surname
30 DIM NS (N) ..... First name
40 DIM AS (N) ..... Home dialling code
50 DIM BS (N) ..... Home telephone number
60 DIM CS (N) ..... Work dialling code
70 DIM DS (N) ..... Work telephone number
80 DIM F (N)
90 FOR K = 1 TO N
100 READ MS (K), NS (K)
110 READ AS (K), BS (K)
120 READ CS (K), DS (K)
130 NEXT K
140 PRINT : PRINT : X = 0
150 PRINT "WHAT IS THE SURNAME" ;
160 INPUT XS ..... Key-in the name to be retrieved.
170 FOR K = 1 TO N
180 IF MS (K) = XS THEN X = X + 1 : F (X) = K .. Retrieving by use of the surname.
190 NEXT K
200 IF X <> 0 THEN 240
210 PRINT "NO RELEVANT PERSON FOUND !"
220 PRINT "PLEASE RE - ENTER"
230 GOTO 140
240 PRINT : PRINT
250 FOR K = 1 TO X
260 L = F (K) ..... For display of persons with the same surname.
270 PRINT "NAME" ; TAB (11) ; " : " ; NS (L) ; " " ; MS (L)
280 PRINT "HOME NUMBER : " ;
290 PRINT "(" ; AS (L) ; ")" ; BS (L)
300 PRINT "WORK NUMBER : " ;
310 PRINT "(" ; CS (L) ; ")" ; DS (L) : PRINT
320 NEXT K
330 GOTO 140
340 DATA JONES, JOHN, 01, 364, 9617, 01, 969, 3678
350 DATA DAVIS, PETER, 021, 396, 2137, 01, 323, 6146
360 DATA SMITH, PAUL, 0449, 73246, 0449, 71277
370 DATA JONES, DAVID, 061, 631, 1235, 061, 312, 1975
380 DATA RICHARDS, ROBIN, 0273, 61976, 0903, 47216
390 DATA SMITH, HARRY, 01, 638, 2174, 29, 147636
400 DATA LAKE, COLIN, 4967, 13642, 4967, 32132
410 DATA WATSON, JOHN, 01, 961, 2431, 0427, 21369
420 DATA CARTER, DAVID, 6317, 21974, 01, 316, 2638
430 DATA HOMLES, FRANK, 2238, 76194, 2238, 78352
440 DATA JONES, FRED, 9743, 61665, 01, 424, 6913
450 DATA WILSON, JAMES, 01, 692, 5687, 0374, 68421
460 END

```



■ SOS in Morse Code

The Morse code was invented by Samuel F. Breese Morse, an American artist, in 1838, and is one of the most important communications media even today.

The principle is simple. It sets up the ratio of times when a specified wave of frequency is produced and not produced.

Prolonged sound—— Transmission of sound 3 times as long as short sound.

Short sound—


Pause No sound for the same period of time as short sound.

The Morse code is based on the combination of these three sounds to represent the necessary symbols. Shown below is part of the Morse code, according to which try to strike SOS. Very difficult? The Morse code requires practice until your fingers move naturally and quickly without thinking of where to press.

To make this easy, the program for the Morse code is generated in the following section. Line numbers 20 to 270 are strings to generate signals from A to Z, and line numbers 290 to 380 for those from 0 to 9. Brief description is given of the program.

- +A5 ——> Sound A (1a) in the high frequency range with its tonal length of 5 (equivalent to the prolonged signal of the Morse code).
- +A2 ——> Sound A (1a) in the high frequency range with its tonal length of 2 (equivalent to the short signal of the Morse code).
- R2 ——> Pause with no sound with its length of 2.

A	—	G	— — —	N	— ·	T	—	Z	— — — ·	6	— · · ·
B	— · ·	H	— · · ·	O	— — —	U	— —	1	— — — —	7	— · · ·
C	— · — ·	J	— — — —	P	— · — ·	V	— · · —	2	— — — —	8	— · — ·
D	— · —	K	— — —	Q	— — · —	W	— — —	3	— · — —	9	— · — ·
E	·	L	— · ·	R	— · ·	X	— · — ·	4	— · — ·	0	— — —
F	— · — ·	M	— —	S	— · ·	Y	— — —	5	— · · ·	1	—

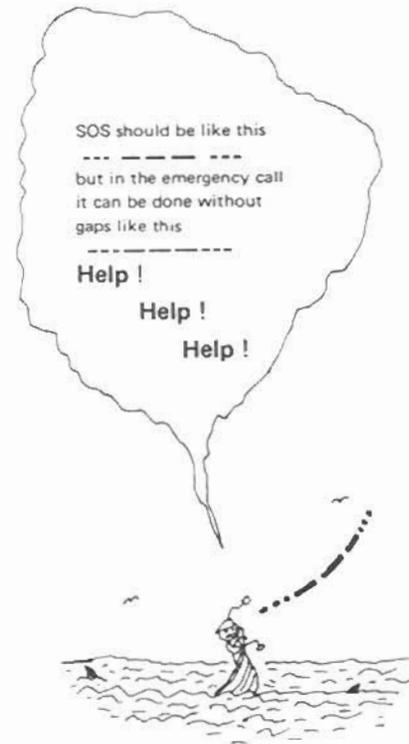

■ Signals in Dots and Dashes

```

10 DIM A1 (100), M$ (127)
20 M$ (65) = "+A2R2+A5"
30 M$ (66) = "+A5R2+A2R2+A2R2+A2"
40 M$ (67) = "+A5R2+A2R2+A5R2+A2"
50 M$ (68) = "+A5R2+A2R2+A2"
60 M$ (69) = "+A2"
70 M$ (70) = "+A2R2+A2R2+A5R2+A2"
80 M$ (71) = "+A5R2+A5R2+A2"
90 M$ (72) = "+A2R2+A2R2+A2R2+A2"
100 M$ (73) = "+A2R2+A2"
110 M$ (74) = "+A2R2+A5R2+A5R2+A5"
120 M$ (75) = "+A5R2+A2R2+A5"
130 M$ (76) = "+A2R2+A5R2+A2R2+A2"
140 M$ (77) = "+A5R2+A5"
150 M$ (78) = "+A5R2+A2"
160 M$ (79) = "+A5R2+A5R2+A5"
170 M$ (80) = "+A2R2+A5R2+A5R2+A2"
180 M$ (81) = "+A5R2+A5R2+A2R2+A5"
190 M$ (82) = "+A2R2+A5R2+A2"
200 M$ (83) = "+A2R2+A2R2+A2"
210 M$ (84) = "+A5"
220 M$ (85) = "+A2R2+A2R2+A5"
230 M$ (86) = "+A2R2+A2R2+A2R2+A5"
240 M$ (87) = "+A2R2+A5R2+A5"
250 M$ (88) = "+A5R2+A2R2+A2R2+A5"
260 M$ (89) = "+A5R2+A2R2+A5R2+A5"
270 M$ (90) = "+A5R2+A5R2+A2R2+A2"
280 REM NO.
290 M4 (48) = "+A5R2+A5R2+A5R2+A5R2+A5"
300 M$ (49) = "+A2R2+A5R2+A5R2+A5R2+A5"
310 M$ (50) = "+A2R2+A2R2+A5R2+A5R2+A5"
320 M$ (51) = "+A2R2+A2R2+A2R2+A5R2+A5"
330 M$ (52) = "+A2R2+A2R2+A2R2+A2R2+A5"
340 M$ (53) = "+A2R2+A2R2+A2R2+A2R2+A2"
350 M$ (54) = "+A5R2+A2R2+A2R2+A2R2+A2"
360 M$ (55) = "+A5R2+A5R2+A2R2+A2R2+A2"
370 M$ (56) = "+A5R2+A5R2+A5R2+A2R2+A2"
380 M$ (57) = "+A5R2+A5R2+A5R2+A5R2+A2"
390 REM "SPACE"
400 M$ (32) = "R5"
1000 INPUT "TYPE IN A MESSAGE "; AS
1010 FOR J = 1 TO LEN (AS)
1020 A1 (J) = ASC (MIDS (AS, J, 1))
1030 NEXT J
1040 FOR J = 1 TO LEN (AS)
1050 MUSIC M$ (A1 (J)), "R5"
1060 NEXT J
1070 GOTO 1000

```



Key in alphabet from A to Z and munerals from 0 to 9. For example, when you key-in "I LOVE YOU", the Morse code will be generated accordingly. Using the Morse code, you can declare your love to your sweetheart!

■ Unending "Time".....

At the end of this introduction to the BASIC Language, the program for the "Perpetual Calendar" is introduced. It requires no detailed explanation. Our "time" continues eternally.

```

5  DIM M$(12), W$(7)
10 FOR K = 1 TO 12 : READ M$(K) : NEXT K
20 FOR K = 1 TO 7 : READ W$(K) : NEXT K
30 INPUT "YEAR PLEASE ? " ; Y : INPUT "MONTH PLEASE ? " ; MT
40 H = MT : GOSUB 400 : K2 = YB + 1
50 H = MT + 1 : GOSUB 400 : K1 = YB + 1
60 N = K1 - K2 : IF N >= 0 THEN L = 28 + N : GOTO 70
65 L = 35 + N
70 IF MT = 12 THEN L = 31
75 PRINT " ☐ " : GOSUB 190
80 PRINT TAB(8) ; Y ; " " ; M$(MT) : PRINT : T = 4
90 FOR N = 1 TO 7 : PRINT TAB(T) ; W$(N) ; : T = T + 4 : NEXT N : PRINT
100 T = 0 : IF K2 = 0 THEN 120
110 FOR N = 1 TO K2 : PRINT TAB(T) ; : T = T + 4 : NEXT N : T = T - 4
120 FOR N = 1 TO L : N$ = STR$(N) : J = LEN(N$)
130 PRINT TAB(T + 5 - J) ; N$ ; : T = T + 4
140 IF T = 28 THEN T = 0 : PRINT
150 NEXT N
160 IF T <> 0 THEN PRINT
170 GOSUB 190
180 PRINT " ☐ " : GOTO 30
190 FOR Z = 1 TO 31 : PRINT " * " ; : NEXT Z : PRINT : RETURN
200 DATA JAN, FEB, MAR, APR, MAY, JUN
210 DATA JUL, AUG, SEP, OCT, NOV, DEC
220 DATA SUN, MON, TUE, WED, THU, FRI, SAT
230 END
400 X = Y
410 N = H - 3 : J = 12 : GOSUB 600 : MM = Z
420 IF MM > 9 THEN X = X - 1
430 N = X : J = 400 : GOSUB 600 : X = Z
440 X4 = INT(X/4) : X1 = INT(X/100)
450 KY = X + X4 - X1
460 N = MM : J = 5 : GOSUB 600 : MZ = Z
470 M5 = INT(MM/5) : M2 = INT(MZ/2)
480 N = MZ : J = 2 : GOSUB 600 : P = Z
490 KM = 13 * M5 + 5 * M2 + 3 * P
500 N = KY + KM + 3 : J = 7 : GOSUB 600 : YB = Z
510 RETURN
600 REM Z = N, J
610 K = INT(N/J)
620 Z = N - K * J
630 IF Z < 0 THEN Z = Z + J
640 RETURN

```




1988 JAN						
SUN	MON	TUE	WED	THU	FRI	SAT
		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		

YEAR PLEASE ■						

■ Miniature Space Dictionary

If you are interested in space, including astronomy and man-made satellites, you might like to try calculations and graphic drawings by using the computer. Shown below are equations and values required for such attempts.

Unlike the earth, the movement of objects in space should mathematical calculations without any complexity caused by atmospheric resistance. For more accurate values, however, consideration must be given to the effects by the planets, the perturbation caused by strains in the form of the earth and gas pressure in space, even though rarefied. There is air of 10^{-9} mmHg at an altitude of 800 km in space, for example. In addition, a man-made satellite stationed at an altitude of approx. 36,000 km tilts approximately 1 degree per year in its orbit being affected by other heavenly bodies.

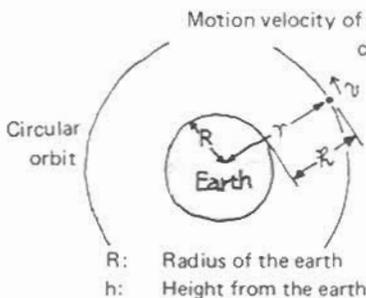

Motion velocity of a satellite in circular orbit : $v = \sqrt{\frac{G \cdot M}{r}}$ (m/s)

Period : $T = 2\pi \sqrt{\frac{r^3}{G \cdot M}}$ (s)

$G = 6.67 \times 10^{-11}$ (N · m²/kg²)
 Universal gravitation constant
 M : Mass of the earth (kg)
 r : Distance from the earth's center to satellite (m)

R: Radius of the earth
 h: Height from the earth surface

Motion velocity of a satellite in oval orbit : $v = \sqrt{G \cdot M \left(\frac{2}{r} - \frac{1}{a} \right)}$ (m/s)


Period : $T = 2\pi \sqrt{\frac{a^3}{G \cdot M}}$ (s)

Long radius : $a = \frac{h_1 + h_2 + 2R}{2}$ (m)

Short radius : $b = \sqrt{a^2 - (a \cdot e)^2}$ (m)

Eccentricity : $e = \frac{OF}{OP} = \frac{\sqrt{a^2 - b^2}}{a}$

$r_p = a(1 - e)$ (m)
 $r_a = a(1 + e)$ (m)

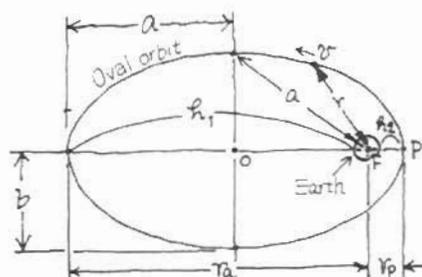

	Mass (1 for the Sun)	Equatorial radius	Eccentricity	Averaged distance from the Sun (a)
Sun	1.000	696 000 km	—	—
Mercury	0.166×10^{-6}	2 440	0.20563	0.57910×10^8 km
Venus	2.448×10^{-6}	6 056	0.00678	1.08210 "
Earth	30.034×10^{-7}	6 378	0.01672	1.49600 "
Mars	3.227×10^{-7}	3 390	0.09338	2.27944 "
Jupiter	95.479×10^{-5}	71 400	0.04829	7.7834 "
Saturn	2.856×10^{-4}	60 400	0.05604	14.2700 "
Uranus	4.373×10^{-5}	23 700	0.04613	28.7103 "
Neptune	5.178×10^{-5}	25 110	0.01004	44.971 "
Pluto	0.552×10^{-6}	3 400	0.24842	59.136 "
Moon	3.694×10^{-8}	1 738	0.0549*	384 400 km*

■ A solution of simultaneous equation

Introduction to methodological study of programming [1]

Solution of systems of simultaneous linear equations is a basic data processing problem associated with all science and engineering problems. In this section, we will try to construct a basic subroutine which is used to solve systems of simultaneous linear equations in n unknowns.

Although there are a number of algorithms for solving simultaneous linear equations, we here employ the elimination method which is familiar to you from your school days.

■ Approach to the problem

Consider the problem of solving the system of simultaneous linear equations shown in (1) below.

$$\begin{cases} a_{11}x_1 + a_{12}x_2 + \dots + a_{1n}x_n = b_1 \\ a_{21}x_1 + a_{22}x_2 + \dots + a_{2n}x_n = b_2 \\ \dots \\ a_{n1}x_1 + a_{n2}x_2 + \dots + a_{nn}x_n = b_n \end{cases} \quad (1)$$

Multiplying both sides of the second equation in (1) by a_{11}/a_{21} and subtracting the result from the first equation, we obtain

$$\left(a_{12} - a_{22} \frac{a_{11}}{a_{21}}\right) x_2 + \left(a_{13} - a_{23} \frac{a_{11}}{a_{21}}\right) x_3 + \dots + \left(a_{1n} - a_{2n} \frac{a_{11}}{a_{21}}\right) x_n = b_1 - b_2 \frac{a_{11}}{a_{21}} \quad (2)$$

This means that we obtain an equation in which x_1 is eliminated. Performing this process up through the n th equation, we obtain a set of simultaneous linear equations in which x_1 is not included, that is, one unknown is eliminated. Rewriting the coefficients of all equations as $a'_{22}, a'_{2n},$ and so on, we obtain

$$\begin{cases} a_{11}x_1 + a_{12}x_2 + \dots + a_{1n}x_n = b_1 \\ a'_{22}x_2 + \dots + a'_{2n}x_n = b'_2 \\ \dots \\ a_{n2}x_2 + \dots + a_{nn}x_n = b_n \end{cases} \quad (3)$$

The process of creating the set of equations in (3) from the set of equations in (1) is called elimination using the first row and column as a pivot.


Performing the elimination process on the set of equations in (3) using the second row and column as a pivot, we find a system of simultaneous linear equations whose third to n th equations do not contain the term x_2 . Repeating the elimination process by pivoting $n - 1$ times, we obtain

$$\begin{cases} a_{11}x_1 + a_{12}x_2 + \dots + a_{1n}x_n = a_{1n+1} \\ a'_{22}x_2 + \dots + a'_{2n}x_n = a'_{2n+1} \\ \dots \\ a''_{nn}x_n = a''_{nn+1} \end{cases} \quad (4)$$

The value of x_n is obtained by the n th equation in (4), then the value of x_{n-1} is obtained from the $(n-1)$ th equation, and so on.

Although this method seems simple, if you solve by hand, it will take a lot of labor and scratch paper if 5 or 6 unknowns are involved. You will lose interest in solving the problem by hand if the number of unknowns is 10 or 20.

It is best to use a computer to perform repetitions of such simple operations. The computer can eliminate obstacles in a lump and give us the correct answer immediately.

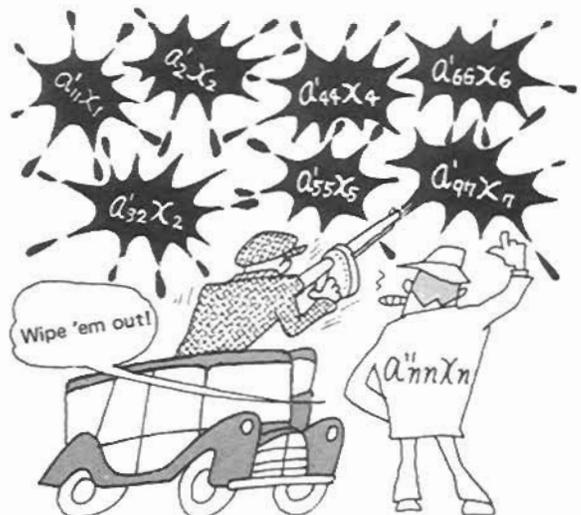

■ Programming

Let's formulate an algorithm for solving systems of simultaneous linear equations.

- | | |
|---|--|
| 1 | Assign the number of unknowns to variable N.
Prepare a 1-dimensional array X(N) to store the value of the unknowns.
Prepare a 2-dimensional array A(N, N+1) and to it assign the coefficients of the equations in (1). |
| 2 | Call the subroutine for solving systems of simultaneous linear equations. |
| 3 | Print the values of the unknowns (that is, the contents of X(1) to X(N)) on the CRT display unit. |

Subroutine (for solving systems of simultaneous linear equations)

- | | |
|---|--|
| 4 | Perform the elimination process N-1 times to change the contents of array A to the coefficients of the equations in (4). |
| 5 | Find the values of the unknowns in sequence and assign them to X(N) through X(1). |

In this manner, we can clearly identify the subroutine (for solving systems of simultaneous linear equations) as a basic module which takes the value of variable N as the number of unknowns and the contents of 2-dimensional array A(N, N+1) as the coefficients of the equations in (1), finds values of the unknowns, and assign them to array X(N) from X(N) to X(1).

First, let's consider step [4] which is the most important elimination step. As seen from the equations in (2), the k th ($k = 1$ to $N-1$) elimination process is carried out basically by repetitions of assignment

$$a_{ij} \leftarrow a_{ij} - a_{ij} \frac{a_{kk}}{a_{ik}} \quad (\leftarrow \text{denotes assignment.}) \quad (5)$$

for coefficient a_{ij} . This can be accomplished by executing the 2-level loop

<pre>FOR i=k+1 TO N FOR j=k+1 TO N+1 a_{ij} ← a_{ij} - a_{ij} $\frac{a_{kk}}{a_{ik}}$ NEXT j NEXT i</pre>	
--	--

Step [4] can be programmed in this way using variables K, I, and J as follows:

```
FOR K=1 TO N-1
  FOR I=K+1 TO N
    FOR J=K+1 TO N+1
      A(I, J) = A(K, J) - A(I, J) * A(K, K) / A(I, K)
    NEXT J
  NEXT I
NEXT K
```

These statements can be combined to one as NEXT J, I, K.

Now proceed to step [5], where the values of the unknowns are found in sequence. To find the value of unknown x_i , all that is required is to assign x_{i+1} through x_n to the set of equations in (5). Consequently, we obtain

```
FOR j=i+1 TO N
  ai,N+1 ← ai,N+1 - aij xj
NEXT j
xi ← ai,N+1 / aii
```

Although the program code

```

FOR I=N TO 1 STEP -1
  FOR J=I+1 TO N
    A(I, N+1)=A(I, N+1)-A(I, J)*X(J)
  NEXT J
  X(I)=A(I, N+1)/A(I, I)
NEXT I

```

seems satisfactory, in this program, when $I = N$, J has a value of $N + 1$ and the computer executes the statement within the loop controlled by J . As it stands, a dimensional overflow would occur at $X(J)$ or an incorrect answer would result (even when $X(N+1)$ is defined) if its content is nonzero. We can avoid such errors by placing the step for finding the value of unknown x_n outside of the loop; that is, by changing the I -controlled loop as follows:

```

X(N)=A(N, N+1)/A(N, N)
FOR I=N-1 TO 1 STEP -1
.....
NEXT I

```

We can complete the subroutine for solving systems of simultaneous linear equations by adding a RETURN statement to the end of the above program code.

The essential problem in step [1] is in how to assign the unknowns and the coefficients of the simultaneous linear equations in question to variable N and 2-dimensional array $A(N, N+1)$. Many methods are possible, such as using the READ and DATA statements; however, we have decided here to enter them one at a time from the keyboard.

In step [3], we decided to display the values of the unknowns on the CRT display unit in the format:

```

X1 = .....
X2 = .....
.....

```

These steps can be coded without difficulty. Finally, we obtain a complete program as follows:

```

5  REM ..... Read data
10 INPUT "Number of unknown numbers ="; N
20 DIM A(N, N+1), X(N)
30 FOR S1=1 TO N: FOR S2=1 TO N+1
40 INPUT A(S1, S2)
50 NEXT S2, S1
100 GOSUB 1000
195 REM ..... Print Xi
200 FOR J=1 TO N
210 PRINT "X": STR$(J); "=" ; X(J)
220 NEXT J
230 END
995 REM ..... Elimination
1000 FOR K=1 TO N-1
1010 FOR I=K+1 TO N
1020 FOR J=K+1 TO N+1
1030 A(I, J)=A(K, J)-A(I, K) * A(K, K)/A(I, K)
1040 NEXT J, I, K
1095 REM ..... Find Xi
2000 X(N)=A(N, N+1)/A(N, N)
2010 FOR I=N-1 TO 1 STEP -1
2020 FOR J=I+1 TO N
2030 A(I, N+1)=A(I, N+1)-A(I, J) * X(J)
2040 NEXT J
2050 X(I)=A(I, N+1)/A(I, I)
2060 NEXT I
2070 RETURN

```


■ Find 1000 prime numbers

Introduction to methodological study of programming [2]

It is essential to always keep the objective and the procedure for accomplishing it in mind when formulating a program. Most programmers, however, are seldom conscious of this problem and create complicated, inscrutable programs in their own style. Frequently, such programs can hardly be understood even by those who wrote them, much less by others.

Such problems arise because the programmer does not clarify the relationship between the structure of the problem and the algorithm for solving it when the program is written. Consideration of this problem has led to active methodological study of programming itself. E.W. Dijkstra is one of the leaders in this field, and has written many outstanding books on this subject. In one of these books†, he introduced his own idea about programming (called structured programming), using the problem of finding prime numbers as an example. In this section, we briefly explain his concepts using the same problem.

Problem:

Print 1000 prime numbers 2, 3, 5, 7, 11, in increasing order of magnitude.

■ Approach to the problem


Many different programs could be used to solve this problem. The first major proposition, however, is that the program constructed must be a practical one. An extreme approach might be as follows.

“Find and print prime numbers starting at the smallest one? 2 is the smallest prime number, so, let’s print 2 first. Next is 3, next is 5, next is 7. All we have to do is to print them using the PRINT statement. . . .”

This is not, however, an efficient method of using the BASIC interpreter, and cannot truly be regarded as programming.

According to Dijkstra, many decisions must be made until a program is completed. We should make such decisions only when they are actually required, rather than making them without discipline. In other words, programming should be conducted in stages.

The first decision to be made in our problem is whether the 1000 prime numbers are to be found first, then printed all at once, or whether they are to be printed as they are found. By deciding on the former method, we place the program in perspective as follows.

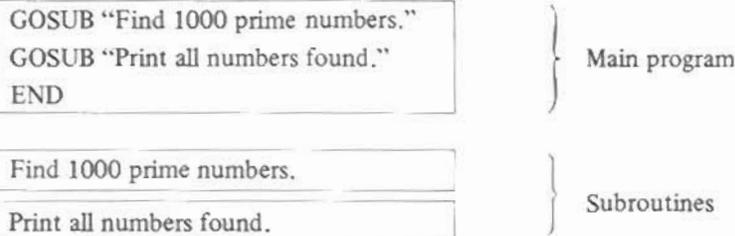

†) Dijkstra, Hoar, Dahr: Structured Programming, 1969 ALGOL is used as the programming language in this publication.

Notice that the problem has been divided neatly into a main program and two subroutines. This is one of the basic principles of structured programming suggested by Dijkstra.

Now, proceed to the next step. Since we are to find 1000 prime numbers before printing them, we need to store them somehow in a storage location. The next step is to determine the method of storing the prime numbers.

It would be unwise to declare a numeric array of 1000 elements simply because 1000 prime numbers must be memorized. It is possible to define a string array and place T's (true) in locations in the string designated by subscripts which happen to be prime numbers and F's (false) in other locations. Another possible method is to record the prime numbers in a data file on cassette tape. It is easy to identify prime numbers if they are stored in a string array and identified by the characters "T" and "F"; and it is possible to store prime numbers for a long time if they are recorded on cassette tape. What method should be used?

For an algorithm in which unprocessed numbers are divided by the prime numbers already found to identify prime numbers, the first method is most appropriate; that is, to prepare a numeric array of 1000 elements. Accordingly, we declare a numeric array of 1000 elements at the beginning of the main program. DIM "Numeric array of 1000 elements".

```
DIM "Numeric array of 1000 elements"
```

Next, the structure of the array must be determined. We can use PRIM as the array name (though the array name is identified only by the first two characters) and use a 2-dimensional numeric array. This is because, since the maximum subscript value for 1-dimensional arrays is 255, it is not possible to identify all array elements with a 1-dimensional array. Since all array elements must be identified within the subscript range of 255, we use an array structure such that the 1000 elements are grouped into 10 subarrays of 100 elements each. The DIM statement for the required array is as follows:

```
DIM PRIM (9 , 99)
```

With this decided, we can go on to determine the format for display of the 1000 prime numbers.

There are many ways of outputting the results, such as displaying them on the CRT display unit or printing them on the printer. As for format, one prime number may be printed on one line or they may be printed in a tabular form; and so on. We will use the simplest format; that is, sequentially printing the numbers on the CRT screen without formatting them. The following subroutine ("Print all numbers found") will be adequate for this purpose:

```
FOR M=0 TO 9 : FOR N=0 TO 99
  PRINT PRIM (M , N) :
NEXT N , M
```

Now we have finished that main program and the subroutine "Print all numbers found." The remaining task is to formulate the subroutine "Find 1000 prime numbers." Since we are going to use the array described above, it is natural to find the prime numbers sequentially, starting with the smallest one, and to place them into the array in increasing order of its subscripts.

Assuming that we have a subroutine "Find the next prime number" which, given parameter I, examines I + 1, I + 2, . . . in sequence, places the first prime number found into I, and returns control to the calling program, we can form the subroutine "Find 1000 prime numbers" as follows:

```
I←1
FOR M=0 TO 9 : FOR N=0 TO 99
  GOSUB "Find the next prime number"
  PRIM (M , N)←I
NEXT N , M
RETURN
```

Now we are approaching the nucleus of the program for finding prime numbers. The subroutine "Find the next prime number" must find and assign to I the smallest prime number which is greater than I. A simple algorithm which you will think of immediately is to divide I by 2, 3, 4, 5, ..., I-1, and identify I as a prime number when I is indivisible by any of them. With this algorithm, you must perform 99 divisions using divisors from 2 to 100 to recognize 101 as a prime number. You will soon recognize that this algorithm wastes a great amount of time. It is apparent that numbers which are indivisible by 2 are also indivisible by multiples of 2 (e.g., 4, 6, 8, ...), numbers which are indivisible by 3 are also indivisible by multiples of 3, and so on. Since our goal is to find prime numbers sequentially starting with the smallest one, to determine whether a number is a prime or not we need only to determine whether it is divisible by any of the prime numbers which have been found so far. For example, to determine whether 101 is a prime number or not, we need only divide it by a total of 25 prime numbers, i.e., 2, 3, 5, 7, 11, 13, 17, 19, 23, 29, 31, 37, 41, 43, 47, 53, 59, 61, 67, 71, 73, 79, 83, 89, and 97.

Even this algorithm wastes a considerable amount of time. For example, we need not divide 101 by 11. When a number p can be divided by a number other than itself, it can be expressed as $p = f \cdot g$. Assuming that f is not greater than g ($f \leq g$), we find $f^2 \leq f \cdot g = p$. Accordingly, we need only to examine integers which are not greater than \sqrt{p} . For 101, we need only divide it by four prime numbers (2, 3, 5, and 7), if it is not indivisible by these numbers, we can regard 101 as a prime number. This fact affects programming efficiency greatly. In fact, to determine whether 10100 (which is 100 times greater than 101), is a prime number or not, we only need to divide it by 25 prime numbers from 2 to 97. Otherwise, as you will see later, you would have to divide it by far more than 1000 prime numbers.

Taking the above into consideration, we can formulate the algorithm for the subroutine "Find the next prime number" as follows:

```

11 I ← I + 1 : X ← 0 : Y ← 0
12 While (PRIM (X, Y))2 < I
    Divide I by PRIM (X, Y)
    If divisible GOTO 11
    Otherwise
        Determine the subscripts X and Y of the array element containing the next prime number
        GOTO 12
Return

```

The above algorithm is coded as follows:

```

1500 REM --- Find the next prime number ---
1510 I=I+1 : X=0 : Y=0
1520 IF PRIM(X , Y)*PRIM(X , Y)>I THEN RETURN
1530 L=I/ PRIM(X , Y)
1540 IF L- INT(L)=0 THEN 1510
1550 Y=Y+1
1560 IF Y<100 THEN 1520
1570 X=X+1 : Y=0 : GOTO 1520

```

The statement on line 1520 determines whether the square of the prime number by which the parameter I is to be divided exceeds I.

The reason the power operator is not used in this statement is that an expression containing the power operator is inappropriate as a condition clause for the IF statement because evaluation of expressions containing the power operator are internally conducted by approximation.†

Now let's finish the program. Do not forget, however, to assign the first prime number (i.e., 2) to PRIM (0, 0). This is because the subroutine "Find the next prime number" assumes that there is a preceding prime.

†) If the power operator is to be used on line 1520, the line must be coded as follows:

```
1520 IF INT (PRIM (X, Y) † 2 + 0.00000001) > I THEN RETURN
```

```
10 REM ..... 1000 prime numbers
20 DIM PRIM (9,99)
30 PRIM (0,0) = 10
40 GOSUB 1000
50 GOSUB 3000
60 END
1000 REM ..... Find 1000 prime numbers
1010 I = 1
1020 FOR M = 0 TO 9 : FOR N = 0 TO 99
1030 GOSUB 2000
1040 PRIM (M, N) = I
1050 NEXT N, M
1060 RETURN
2000 REM ..... Find the next prime number
2010 I = I + 1 : X = 0 : Y = 0
2020 IF PRIM (X, Y) * PRIM (X, Y) > I THEN RETURN
2030 L = I / PRIM (X, Y)
2040 IF L - INT (L) = 0 THEN 2000
2050 Y = Y + 1
2060 IF Y < 100 THEN 2020
2070 X = X + 1 : Y = 0 : GOTO 2020
3000 REM ..... Print 1000 prime numbers
3010 FOR M = 0 TO 9 : FOR N = 0 TO 99
3020 PRINT/P PRIM (M, N),
3030 NEXT N, M
3040 RETURN
```

Print listing of 1000 prime numbers on the line printer MZ-80P5.

2	3	5	7	11	13	17	19
23	29	31	37	41	43	47	53
59	61	67	71	73	79	83	89
97	101	103	107	109	113	127	131
137	139	149	151	157	163	167	173
179	181	191	193	197	199	211	223
227	229	233	239	241	251	257	263
269	271	277	281	283	293	307	311
313	317	331	337	347	349	353	359
367	373	379	383	389	397	401	409
419	421	431	433	439	443	449	457
461	463	467	479	487	491	499	503
509	521	523	541	547	557	563	569
571	577	587	593	599	601	607	613
617	619	631	641	643	647	653	659
661	673	677	683	691	701	709	719
727	733	739	743	751	757	761	769
773	787	797	809	811	821	823	827
829	839	853	857	859	863	877	881
883	887	907	911	919	929	937	941
947	953	967	971	977	983	991	997
1009	1013	1019	1021	1031	1033	1039	1049
1051	1061	1063	1069	1087	1091	1093	1097
1103	1109	1117	1123	1129	1151	1153	1163
1171	1181	1187	1193	1201	1213	1217	1223


.....
 omitted

6143	6151	6163	6173	6197	6199	6203	6211
6217	6221	6229	6247	6257	6263	6269	6271
6277	6287	6299	6301	6311	6317	6323	6329
6337	6343	6353	6359	6361	6367	6373	6379
6389	6397	6421	6427	6449	6451	6469	6473
6481	6491	6521	6529	6547	6551	6553	6563
6569	6571	6577	6581	6599	6607	6619	6637
6653	6659	6661	6673	6679	6689	6691	6701
6703	6709	6719	6733	6737	6761	6763	6779
6781	6791	6793	6803	6823	6827	6829	6833
6841	6857	6863	6869	6871	6883	6899	6907
6911	6917	6947	6949	6959	6961	6967	6971
6977	6983	6991	6997	7001	7013	7019	7027
7039	7043	7057	7069	7079	7103	7109	7121
7127	7129	7151	7159	7177	7187	7193	7207
7211	7213	7219	7229	7237	7243	7247	7253
7283	7297	7307	7309	7321	7331	7333	7349
7351	7369	7393	7411	7417	7433	7451	7457
7459	7477	7481	7487	7489	7499	7507	7517
7523	7529	7537	7541	7547	7549	7559	7561
7573	7577	7583	7589	7591	7603	7607	7621
7639	7643	7649	7669	7673	7681	7687	7691
7699	7703	7717	7723	7727	7741	7753	7757
7759	7789	7793	7817	7823	7829	7841	7853
7867	7873	7877	7879	7883	7901	7907	7919

■ 701,260 Hours


You have mastered your computer to use it as if it were part of your brains, haven't you? What did you say? You are too busy to have time for that. Indeed, we are living in this busy world, aren't we?

By the way, let's predict, using the computer, what a busy life you are leading. Calculations are made for a life of 80 years that is a little longer than the English average. For education 16 years are spent at infant school, primary school, high school and university or college. 245 days a year are for going to school and 5 hours a day for lessons. After school, 1.5 hours are for home work every day throughout the year. After graduation from university, 8 hours a day for 245 days a year are for work as a salaried man with 8 hours a day for sleep. 365.24 days a year are assumed. Based on the above, calculations are made, with results as follows:

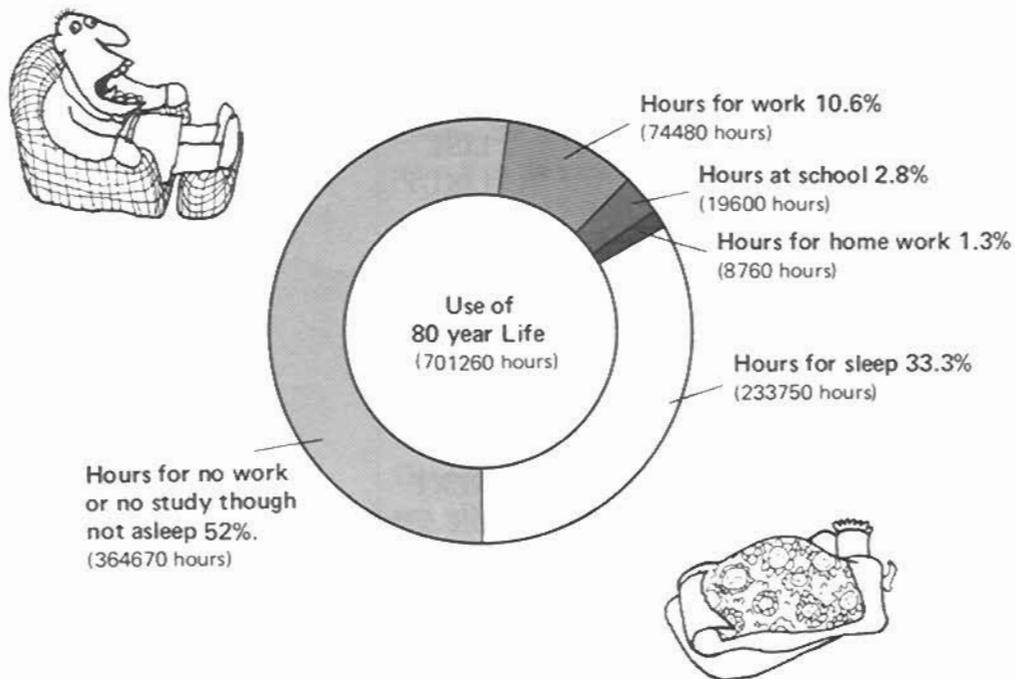

How did you enjoy the calculations? During a life of 80 years, studying accounts for 4.1% and working 10.6%. Why not analyze and predict the use of your own time for your future reference and consideration?

Don't forget to add your time working on your computer.

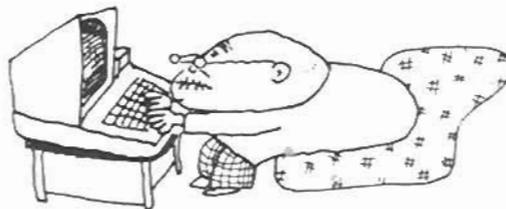

1.4 Reserved word

A BASIC sentence is composed of reserved words—also called key words—which include statements, built-in functions and special signs (and also commands), and other elements, such as constants, variables, arrays and expressions. Table 1.1 shows all reserved words of the BASIC interpreter SA-5510.

[A]	ABS		INT		RETURN
	ASC	[L]	LEFTS		RIGHTS
	ATN		LEN		RND
	AUTO		LET		ROPEN/T
[C]	CHARACTERS		LIMIT		RUN
	CHRS		LIST	[S]	SAVE
	CLOSE/T		LIST/P		SET
	CLR		LN		SGN
	CONT		LOAD		SIN
	COPY/P		LOG		SIZE
	COS	[M]	MIDS		SPACES
	CSRH		MON		SQR
	CSRV		MUSIC		STEP
	CURSOR	[N]	NEW		STOP
[D]	DATA		NEXT		STR\$
	DEF FN	[O]	ON		STRINGS
	DIM		OUT	[T]	TAB
[E]	END	[P]	PAGE/P		TAN
	EXP		PEEK		TEMPO
[F]	FOR		POKE		THEN
[G]	GET		PRINT		TIS
	GOSUB		PRINT/P		TO
	GOTO		PRINT/T	[U]	USR
[I]	IF	[R]	READ	[V]	VAL
	INP		REM		VERIFY
	INPUT		RESET	[W]	WOPEN/T
	INPUT/T		RESTORE		

TABLE 1.1 All reserved words of the BASIC interpreter SA-5510

1.5 List of BASIC interpreter SA-5510 commands, statements and functions

1.5.1 Commands

LOAD	LOAD "A"	Loads the BASIC text assigned the file name "A" from the cassette tape into the text area.
	LIMIT \$A000: LOAD "B"	To load a machine language program file to be linked with a BASIC text, the BASIC area of memory must be partitioned from the machine language area by the LIMIT statement. Note: When a LOAD command is executed for a BASIC text file, the text area is cleared of any programs previously stored.
SAVE	SAVE "C"	Assigns the file name "C" to the BASIC text in the text area and stores it on the cassette tape. File name is valid up to 16 characters.
RUN	RUN	Executes the BASIC text in the text area from the top. Note: The RUN command clears all variables (fills them with 0 or null string) before running text.
	RUN 1000	Executes the BASIC text starting at line number 1000.
VERIFY	VERIFY "C"	This command compares the program contained in the BASIC text area with its equivalent text assigned the file name "C" in the cassette tape file.
AUTO	AUTO	Automatically generates and assigns line numbers 10, 20, 30 during creation.
	AUTO 200, 20	Automatically generates line numbers at intervals 20 starting at line 200. 200, 220, 240 An AUTO command is terminated by pressing the BREAK key.
LIST	LIST	Displays all lines of BASIC text currently contained in the text area.
	LIST -500	Displays all lines of BASIC text up through line 500.
LIST/P	LIST/P	Prints out all lines contained in the BASIC text area on the line printer.
NEW	NEW	Clears the text area and variable area. Further, disestablishes the machine language program area set by a LIMIT statement by removing the partition.

CONT	CONT	Continues program execution which was halted by a STOP statement or the BREAK key, starting at the statement following the STOP statement or the statement halted by the BREAK key.
MON	MON	Transfers system control from the BASIC interpreter to the MONITOR. (To transfer system control from the MONITOR to the BASIC interpreter, execute monitor command J.)

1.5.2 Assignment statement

LET	<LET> A = X + 3	Substitutes X + 3 into numeric variable A. LET may be omitted.
-----	-----------------	--

1.5.3 Input/output statements

PRINT	10 PRINT A	Displays the numeric value of A on the CRT screen.
	? AS	Displays the character string of variable AS on the CRT screen.
	100 PRINT A; AS, B; BS	Combinations of numeric variables and string variables can be specified in a PRINT statement. When a semicolon is used as the separator, no space is displayed between the data strings. When a colon is used, variable data to the right of the colon is displayed from the next tab set position. (A tab is set every 10 character positions.)
	110 PRINT "COST="; CS	Displays the string between double quotation marks as is, and CS.
INPUT	120 PRINT	Performs a new line operation (i.e., advances the cursor one line).
	10 INPUT A	Obtains numeric data for variable A from the keyboard.
	20 INPUT AS	Obtains string data for string variable AS from the keyboard.
	30 INPUT "VALUE?"; D	Displays "VALUE?" on the screen before obtaining data from the keyboard. A semicolon separates the string from the variable.
GET	40 INPUT X, XS, Y, YS	Numeric variables and string variables can be used in combination by separating them from each other with a comma. The types of data entered from the keyboard must be the same as those of the corresponding variables.
	10 GET N	Obtains a numeral for variable N from the keyboard. When no key is pressed, zero is substituted into N.
	20 GET KS	Obtains a character for variable KS from the keyboard. When no key is pressed, a null is substituted into KS.

READ~DATA

```
10 READ A, B, C
1010 DATA 25, -0.5, 500
```

```
10 READ HS, H, SS, S
30 DATA HEART, 3
35 DATA SPADE, 11
```

RESTORE

```
10 READ A, B, C
20 RESTORE
30 READ D, E
100 DATA 3, 6, 9, 12, 15
```

Substitutes constants specified in the DATA statement into the corresponding variables specified in the READ statement. The corresponding constant and variable must be of the same data type.

In READ and DATA statements at left, values of 25, -0.5 and 500 are substitutes for variables A, B and C, respectively.

In the example at left, the first string constant of the DATA statement on line number 10 is substituted into the first variable of the READ statement; that is, "HEART" is substituted into HS. Then, numeric constant 3 is substituted into numeric variable H, and so on.

With a RESTORE statement, data in the following DATA statement which has already been read by preceding READ statements can be re-read from the beginning by the following READ statements.

The READ statement on line number 10 substitutes 3, 6 and 9 into variables A, B and C, respectively. Because of the RESTORE statement, the READ statement on line number 30 substitutes not 12 and 15, but 3 and 6 again into D and E, respectively.

1.5.4 Loop statement**FOR ~ TO
NEXT**

```
10 FOR A=1 TO 10
20 PRINT A
30 NEXT A
```

```
10 FOR B=2 TO 8 STEP 3
20 PRINT B ↑ 2
30 NEXT
```

```
10 FOR A=1 TO 3
20 FOR B=10 TO 30
30 PRINT A, B
40 NEXT B
50 NEXT A
```

```
60 NEXT B, A
70 NEXT A, B
```

The statement on line number 10 specifies that the value of variable A is varied from 1 to 10 in increments of one. The initial value of A is 1. The statement on line number 20 displays the value of A. The statement on line number 30 increments the value of A by one and returns program execution to the statement on line number 10. Thus, the loop is repeated until the value of A becomes 10. (After the specified number of loops has been completed, the value of A is 11.)

The statement on line number 10 specifies that the value of variable B is varied from 2 to 8 in increments of 3. The value of STEP may be made negative to decrement the value of B.

The FOR-NEXT loop for variable A includes the FOR-NEXT loop for variable B. As is shown in this example, FOR-NEXT loops can be enclosed in other FOR-NEXT loops at different levels. Lower level loops must be completed within higher level loops. The maximum number of levels of FOR-NEXT loops is 16.

In substitution for NEXT statement at line numbers 40 and 50, a statement at line number 60 shown at left can be used. However, statement at line number 70 cannot be used, causing an error to occur.

1.5.5 Branch statements

GOTO	100 GOTO 200	Jumps to the statement on line number 200.
GOSUB ~ RETURN	100 GOSUB 700 800 RETURN	Calls the subroutine starting on line number 700. At the end of subroutine, program execution returns to the statement following the corresponding GOSUB statement.
IF ~ THEN	10 IF A>20 THEN 200	Jumps to the statement on line number 200 when the value of variable A is more than 20; otherwise the next line is executed.
	50 IF B<3 THEN B=B+3	Substitutes B+3 into variable B when the value of B is less than 3; otherwise the next line is executed.
IF ~ GOTO	100 IF A>=B THEN 10	Jumps to the statement on line number 10 when the value of variable A is equal to or greater than the value of B; otherwise the next line is executed.
IF ~ GOSUB	30 IF A=B*2 GOSUB 90	Jumps to the subroutine starting on line number 700 when the value of variable A is twice the value of B; otherwise the next statement is executed. (When other statements follow a conditional statement on the same line and the conditions are not satisfied, those following an ON statement are executed sequentially, but those following an IF statement are ignored and the statement on the next line is executed.)
ON ~ GOTO	50 ON A GOTO 70, 80, 90	Jumps to the statement on line number 70 when the value of variable A is 1, to the statement on line number 80 when it is 2 and to the statement on line number 90 when it is 3. When the value of A is 0 or more than 3, the next statement is executed. This statement has the same function as the INT function, so that when the value of A is 2.7, program execution jumps to the statement on line number 80.
ON ~ GOSUB	90 ON A GOSUB 700, 800	Jumps to the subroutine on line number 700 when the value of variable A is 1 and jumps to the subroutine on line number 800 when it is 2.

1.5.6 Definition statements

DIM		When an array is used, the number of array elements must be declared with a DIM statement. The number of elements ranges from 0 to 255.
	10 DIM A(20)	Declares that 21 array elements, A(0) through A(20), are used for one-dimensional numeric array A(n).

	20 DIM B(79, 79)	Declares that 6400 array elements, B(0, 0) through B(79, 79), are used for two-dimensional numeric array B(m, n).
	30 DIM C1\$(10)	Declares that 11 array elements, C1\$(0) through C1\$(10), are used for one-dimensional string array C1\$(n).
	40 DIM K\$(7, 5)	Declares that 48 array elements, K\$(0, 0) through K\$(7, 5), are used for two-dimensional string array K\$(m, n).
DEF FN	100 DEF FNA(X)=X ² -X 110 DEF FNB(X)=LOG(X) +1 120 DEF FNZ(Y)=LN(Y)	A DEF FN statement defines a function. The statement on line number 100 defines FNA(X) as $X^2 - X$. The statement on line number 110 defines FNB(X) as $\log_{10} X + 1$ and the statement on line number 120 defines FNZ(Y) as $\log_e Y$. The number of variables included in the function must be 1.

1.5.7 Comment and control statements

REM	200 REM JOB-1	Comment statement (not executed).
STOP	850 STOP	Stops program execution and awaits a command entry. When a CONT command is entered, program execution is continued.
END	1999 END	Declares the end of a program. Although the program is stopped, the following program is executed if a CONT command is entered.
CLR	300 CLR	Clears all variables and arrays, that is, fills all numeric variables and arrays with zeros and all string variables and arrays with nulls.
CURSOR	50 CURSOR 25, 15 60 PRINT "ABC"	The CURSOR command moves the cursor to any position on the screen. The first operand represents the horizontal location of the destination, and must be between 0 and 39. The second operand represents the vertical location of the destination and must be between 0 and 24. The left example displays "ABC" starting at location (25, 15) (the 26th position from the left side and the 16th position from the top).
CSRH		System variable indicating the X-coordinate (horizontal location) of the cursor.
CSRV		System variable indicating the Y-coordinate (vertical location) of the cursor.
SIZE	? SIZE	Displays the amount of unused memory area in bytes.
TIS	100 TIS = "102030"	Sets the built-in clock to 10:20:30 AM. Data between the double quotation marks must be numerals.

1.5.8 Music control statements

MUSIC TEMPO		The MUSIC statement generates a melody from the speaker according to the melody string data enclosed in quotation marks or string variables at the tempo specified by the TEMPO statement.
	300 TEMPO 7	The TEMPO statement on line number 300 specifies tempo 7. The MUSIC statement on line number 310 generates a melody consisting of D, E, F sharp, G and A. Each note is a quarter note. When the TEMPO statement is omitted, default tempo is set.
	310 MUSIC "DE#FGA"	
	300 M1\$ = "C3EG + C"	In this example, the melody is divided into 3 parts and substituted in 3 string variables. The following melody is generated from the speaker at tempo 4.
	310 M2\$ = "+E+C+E+G"	
	320 M3\$ = "+#B8R5"	
	330 MUSIC M1\$,M2\$,M3\$	

1.5.9 Graphic control statements

SET		Sets a dot in the specified position on the CRT screen. The first operand specifies the X-coordinates (0-79) and the second operand specifies the Y-coordinates (0-49).
	300 SET 40, 25	Displays a dot in the center of the screen.
RESET		Resets a dot in the specified position on the CRT screen.
	310 RESET 40, 25	Resets a dot from the center of the screen.

1.5.10 Cassette data file input/output statements

WOPEN/T	10 WOPEN/T "DATA-1"	Defines the file name of a cassette data file to be created as "DATA-1" and opens.
PRINT/T	20 PRINT/T A, A\$	Writes the contents of variable A and string variable A\$ in order in the cassette data file which was opened by a WOPEN/T statement.
CLOSE/T	30 CLOSE/T	Closes the cassette data file which was opened by a WOPEN/T statement.
ROPEN/T	110 ROPEN/T "DATA-2"	Opens the cassette data file specified with file name "DATA-2".
INPUT/T	120 INPUT/T B, B\$	Reads data sequentially from the beginning of the cassette data file which was opened by the ROPEN/T statement and substitutes numerical data into variable B and string data into string variable B\$ respectively.
CLOSE/T	130 CLOSE/T	Closes the cassette data file which was opened by a ROPEN/T statement.

1.5.11 Machine language control statements

LIMIT	100 LIMIT 49151	Limits the area in which BASIC programs can be loaded to the area up to address 49151 (\$BFFF in hexadecimal).
	100 LIMIT A	Limits the area in which BASIC programs can be loaded to the area up to the address indicated by variable A.
	100 LIMIT \$BFFF	Limits the area in which BASIC programs can be loaded to the area up to \$BFFF (hexadecimal). Hexadecimal numbers are indicated by a dollar sign as shown at left.
	300 LIMIT MAX	Set the maximum address of the area in which BASIC programs can be loaded to the maximum address of the memory installed.
	200 LIMIT \$BFFF 210 LOAD "S-R1"	Loads machine language program (object program) "S-R1" in the machine language link area from the cassette tape when the loading address of the program is \$C000 or higher.
POKE	120 POKE 49450, 175	Stores 175 (\$AF in hexadecimal) in address 49450.
	130 POKE AD, DA	Stores data (between 0 and 255) specified by variable DA into the address indicated by variable AD.
PEEK	150 A=PEEK (49450)	Substitutes data stored in address 49450 into variable A.
	160 B=PEEK (C)	Substitutes the contents of the address indicated by variable C into variable B.
USR	500 USR (49152)	Transfers program control to address 49152. This function is the same as that performed by the CALL instruction, which calls a machine language program. When a RET command is encountered in the machine language program, program control is returned to the BASIC program.
	550 USR (AD)	Calls the program starting at the address specified by variable AD.
	570 USR (\$C000)	Calls the program starting at address \$C000.
	770 USR (AD, DAS)	When string data is given together with address data, this USR function places the first address of the memory area containing string data DAS in the CPU's DE register and the length of DAS in the BC register prior to execution of a CALL instruction.

1.5.12 Printer control statements

PRINT/P		Performs the nearly same operation as the PRINT statement on the optional printer (MZ-80P4, P5 or P6).
	10 PRINT/P A, AS	Prints the numeric value of A and the character string of variable AS on the line printer.
	20 PRINT/P CHR\$(5)	Executes paper home feed. (CHR\$(5) is a control code.)
	30 PRINT/P CHR\$(18)	Sets the enlarged character print mode. (CHR\$(18) is also a control code.)
COPY/P	10 COPY/P 1	Causes the printer to copy the character display.
PAGE/P	100 PAGE/P 20	Specifies 20 lines to be contained in one page of the line printer.

1.5.13 I/O input/output statements

INP		Reads data on the specified I/O port.
	10 INP @12, A	The statement on line number 10 reads data on I/O port 12.
	20 PRINT A	
OUT		Outputs data to the specified I/O port.
	30 B = ASC ("A")	The statement on line 40 outputs the ASCII code of the character "A" to I/O port 13.
	40 OUT @13, B	

1.5.14 Arithmetic functions

ABS	100 A = ABS (X)	Substitutes the absolute value of variable X into variable A. X may be either a constant or an expression. Ex) ABS (-3) = 3 ABS (12) = 12
INT	100 A = INT (X)	Substitutes the greatest integer which is less than X into variable A. X may be either a numeric constant or an expression. Ex) INT (3.87) = 3 INT (0.6) = 0 INT (-3.87) = -4
SGN	100 A = SGN (X)	Substitutes one of the following values into variable A: -1 when X<0, 0 when X=0 and 1 when X>0. X may be either a constant or an expression. Ex) SGN (0.4) = 1 SGN (0) = 0 SGN (-400) = -1

SQR	100 A = SQR (X)	Substitutes the square root of variable X into variable A. X may either be a numeric constant or an expression; however, it must be greater than or equal to 0.
SIN	100 A = SIN (X)	Substitutes the sine of variable X in radians into variable A. X may be either a numeric constant or an expression. The relationship between degrees and radians is as follows.
	110 A = SIN (30* π /180)	$1 \text{ degree} = \frac{\pi}{180} \text{ radians}$ Therefore, when substituting the sine of 30° into A, the statement is written as shown on line number 110 at left.
COS	200 A = COS (X)	Substitutes the cosine of variable X in radians into variable A. X may be either a numeric constant or an expression. The same relationship as shown in the explanation of the SIN function is used to convert degrees into radians. The statement shown on line number 210 substitutes the cosine of 200° into variable A.
	210 A = COS (200* π /180)	
TAN	300 A = TAN (X)	Substitutes the tangent of variable X in radians into variable A. X may be either a numeric constant or an expression. The statement on line number 310 is used to substitute the tangent of numeric variable Y in degrees into variable A.
	310 A = TAN (Y* π /180)	
ATN	400 X = ATN (A)	Substitutes the arctangent of variable A into variable X in radians. A may be either a numeric constant or an expression. Only the result between $-\pi/2$ and $\pi/2$ is obtained. The statement on line number 410 is used to substitute the arctangent in degrees.
	410 Y = 180/ π *ATN (A)	
EXP	100 A = EXP (X)	Substitutes the value of exponential function e^x into variable A. X may either be a numeric constant or an expression.
LOG	100 A = LOG (X)	Substitutes the value of the common logarithm of variable X into variable A. X may be either a numeric constant or an expression; however, it must be positive.
LN	100 A = LN (X)	Substitutes the natural logarithm of variable X into variable A. X may be either a numeric constant or an expression; however, it must be positive.
	110 A = LOG (X)/LOG (Y)	To obtain the logarithm of X with the base Y, the statement on line number 110 or line number 120 is used.
	120 A = LN (X)/LN (Y)	
RND		This function generates random numbers which take any value between 0.00000001 and 0.99999999, and works in two manners depending upon the value in parentheses.

```
100 A = RND (1)
110 B = RND (10)
```

When the value in parentheses is positive, the function gives the random number following the one previously given in the random number group generated. The value obtained is independent of the value in parentheses.

```
100 A = RND (0)
110 B = RND (-3)
```

When the value in parentheses is less than or equal to 0, the function gives the initial value of the random number group generated. Therefore, statements on line numbers 100 and 110 both give the same value to variables A and B.

1.5.15 String control functions

LEFT \$	10 AS = LEFTS (XS, N)	Substitutes the first N characters of string variable XS into string variable AS. N may be either a constant, a variable or an expression.
MID \$	20 BS = MIDS (XS, M, N)	Substitutes the N characters following the Mth character from the beginning of string variable XS into string variable BS.
RIGHT \$	30 CS = RIGHTS (XS, N)	Substitutes the last N characters of string variable XS into string variable CS.
SPACE \$	40 DS = SPACE \$ (N)	Substitutes the N spaces into string variable DS.
STRING \$	50 ES = STRING \$ ("*", 10)	Substitutes the ten repetitions of "*" into string variable ES.
CHR \$	60 FS = CHR \$ (A)	Substitutes the character corresponding to the ASCII code in numeric variable A into string variable FS. A may be either a constant, a variable or an expression.
ASC	70 A = ASC (XS)	Substitutes the ASCII code (in decimal) corresponding to the first character of string variable XS into numeric variable A.
STR\$	80 NS = STR\$ (I)	Converts the numeric value of numeric variable I into string of numerals and substitutes it into string variable NS.
VAL	90 I = VAL (NS)	Converts string of numerals contained in string variable NS into the numeric data as is and substitutes it into numeric variable I.
LEN	100 LX = LEN (XS)	Substitutes the length (number of bytes) of string variable XS into numeric variable LX.
	110 LS = LEN (XS + YS)	Substitutes the length (number of bytes) of string variable XS and YS into numeric variable LX.

1.5.16 Tabulation function

TAB	10 PRINT TAB (X); A	Displays the value of variable A at the Xth position from the left side.
------------	---------------------	--

1.5.17 Arithmetic operators

The number to the left of each operator indicates its operational priority. Any group of operations enclosed in parentheses has first priority.

① ↑	10 A = X ↑ Y (power)	Substitutes X^Y into variable A. (If X is negative and Y is not an integer, an error results.)
② -	10 A = -B (negative sign)	Note that "-" in -B is the negative sign and "-" in 0-B represents subtraction.
③ *	10 A = X * Y (multiplication)	Multiplies X by Y and substitutes the result into variable A.
③ /	10 A = X/Y (division)	Divides X by Y and substitutes the result into variable A.
④ +	10 A = X + Y (addition)	Adds X and Y and substitutes the result into variable A.
④ -	10 A = X - Y (subtraction)	Subtracts X from Y and substitutes the result into variable A.

1.5.18 Logical operators

=	10 IF A=X THEN ...	If the value of variable A is equal to X, the statement following THEN is executed.
	20 IF A\$="XYZ" THEN ...	If the content of variable A\$ is "XYZ", the statement following THEN is executed.
>	10 IF A > X THEN ...	If the value of variable A is greater than X, the statement following THEN is executed.
<	10 IF A < X THEN ...	If the value of variable A is less than X, the statement following THEN is executed.
<> or <>	10 IF A <> X THEN ...	If the value of variable A is not equal to X, the statement following THEN is executed.
>= or =>	10 IF A >= X THEN ...	If the value of variable A is greater than or equal to X, the statement following THEN is executed.
<= or =<	10 IF A <= X THEN ...	If the value of variable A is less than or equal to X, the statement following THEN is executed.
*	40 IF (A > X)*(B > Y) THEN ...	If the value of variable A is greater than X and the value of variable B is greater than Y, the statement following THEN is executed.
+	50 IF (A > X)+(B > Y) THEN ...	If the value of variable A is greater than X or the value of variable B is greater than the value of Y, the statement following to THEN is executed.

1.5.19 Other symbols

?	200 ? "A + B="; A + B 210 PRINT "A + B="; A + B	Can be used instead of PRINT. Therefore, the statement on line number 200 is identical in function to that on line number 210.
:	220 A=X : B=X↑2 : ?A, B	Separates two statements from each other. This separator is used when multiple statements are written on the same line. Three statements are written on line number 220.
;	230 PRINT "AB"; "CD"; "EF"	Displays characters to the right of separators following characters on the left. The statement on line 230 displays "ABCDEF" on the screen with no spaces between characters.
	240 INPUT "X =" ; XS	Displays "X=" on the screen and awaits entry of data for XS from the keyboard.
,	250 PRINT "AB", "CD", "E"	Displays character strings in a tabulated format; i.e. AB first appears, then CD appears in the position corresponding to the starting position of A plus 10 spaces and E appears in the position corresponding to the starting position of C plus 10 spaces.
	300 DIM A(20), BS(3, 6)	A comma is used to separate two variables.
" "	320 AS = "SHARP BASIC" 330 BS = "MZ-80A"	Indicates that characters between double quotation marks form a string constant.
\$	340 CS = "ABC" + CHR\$(3)	Indicates that the variable followed by a dollar sign is a string variable.
	500 LIMIT \$BFFF	Indicates that numeric data following a dollar sign is represented in hexadecimal notation.
π	550 S = SIN (X * π / 180)	π represents 3.1415927 (ratio of the circumference of a circle to its diameter).



1.5.20 Error Message Table

Error No.	Meaning
1	Syntax error
2	Operation result overflow
3	Illegal data
4	Data type mismatch
5	String length exceeded 255 characters
6	Insufficient memory capacity
7	The size of an array defined was larger than that defined previously.
8	The length of a BASIC text line was too long.
9	
10	The number of levels of GOSUB nests exceeded 16.
11	The number of levels of FOR-NEXT nests exceeded 16.
12	The number of levels of functions exceeded 6.
13	NEXT was used without a corresponding FOR.
14	RETURN was used without a corresponding GOSUB.
15	Undefined function was used.
16	Unused reference line number was specified in a statement.
17	CONT command cannot be executed.
18	A writing statement was issued to the BASIC control area.
19	Direct mode commands and statements are mixed together.
20	
21	
22	
23	
24	A READ statement was used without a corresponding DATA statement.
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	

Error No.	Meaning
36	
37	
38	
39	
40	
41	
42	
43	OPEN statement (ROPEN or WOPEN) was issued to a file which is already open.
44	
45	
46	
47	
48	
49	
50	
51	
52	
53	
54	
55	
56	
57	
58	
59	
60	
61	
62	
63	Out of file
64	
65	The printer is not ready.
66	Printer hardware error
67	Out of paper
68	
69	
70	Check sum error

1.6 How to obtain copied BASIC tapes

The BASIC tape will not be exchanged for new ones after purchase. It is recommended that the original BASIC tape be copied using the following procedure to generate a copied BASIC tape, and that the copied BASIC tape be used ordinarily. Be sure to keep the original BASIC tape in a safe place.

Activate BASIC interpreter by the original BASIC tape. Execute the following command.

USR (\$11FD)

the message “↓RECORD. PLAY” is displayed. Set the new cassette tape into the deck and press the **RECORD** and **PLAY** buttons.

Upon completion of writing, a copied BASIC tape will be obtained. Any number of copied BASIC tapes can be made using this procedure. However, copied BASIC tape cannot be made by copying another copied BASIC tape.

Monitor Program of the MZ-80A

Chapter

2

2.1 Monitor SA-1510 Commands and subroutines

A monitor program generally monitors system programs such as the BASIC interpreter. The MZ-80A uses a Monitor program called MONITOR SA-1510 in 4K bytes ROM. It includes various functional subroutines which control the keyboard, display, sound circuit, cassette tape deck, etc. These subroutines are called by the BASIC interpreter when it executes INPUT statement, SAVE command, MUSIC statement or other commands or statements. Monitor subroutines may also be called by the user at will.

MONITOR SA-1510 occupies 4K bytes of memory and is stored in Monitor ROM addresses \$0000 through \$0FFF. Its required work area is included within memory addresses \$1000 through \$11FF.

2.1.1 Using monitor commands

Following shows the message when the power switch of the MZ-80A is turned on.

```
* * MONITOR SA-1510 * *
* ❏
```

The cursor flickers to inform the operator that system control is in Monitor command level. Monitor commands are as follows:

L Loads the cassette tape file into memory.

J xxxx Transfers system control to the specified address, that is, loads the specified address in the program counter of the CPU.

xxxx : 4-digit hexadecimal number

The start addresses of the BASIC SA-5510 are as follows:

Warm start address = \$1250

Cold start address = \$1200

F Transfers system control to the floppy disk drive control routine which is stored on floppy disk drive interface card.

B Sets or resets the key-entry-bell alternately.

2.1.2 Monitor subroutines

MONITOR SA-1510 subroutines are listed in Table 2.1. The subroutine names indicated are the same as the labels shown in the monitor program assembly listing in 2.2. Each name is a mnemonic representing the subroutine's function.

Table 2.1 Monitor Subroutine List

Subroutine name (hexadecimal address)	Function	Registers preserved
CALL LETNL (S0006)	To change the line and set the cursor to the beginning of the next line.	All registers except AF
CALL NL (S0009)	Changes the line and sets cursor to its beginning if the cursor is not already located at the beginning of a line.	All registers except AF
CALL PRNTS (S000C)	Displays one space only at the cursor position on the display screen.	All registers except AF
CALL PRNT (S0012)	Handles data in A register as ASCII code and displays it on the screen, starting at the cursor position. However, a carriage return is performed for 0DH and the various cursor control operations are performed for 11H-16H when these are included.	All registers except AF
CALL MSG (S0015)	Displays a message, starting at the cursor position on the screen. The starting address of the message must be specified in the DE register in advance. The message is written in ASCII code and must end in 0DH. A carriage return is not executed, however, cursor control codes (11H-16H) are.	All registers
CALL MSGX (S0018)	Almost the same as MSG, except that cursor control codes are for reverse character display.	All registers
CALL BELL (S003E)	Sounds a tone (approximately 880 Hz) momentarily.	All registers except AF
CALL MELDY (S0030)	Plays music according to music data. The starting address of the music data must be specified in advance in the DE register. As with BASIC, the musical interval and the duration of notes of the musical data are expressed in that order in ASCII code. The end mark must be either 0DH or C8H "■". The melody is over if C flag is 0 when a return is made; if C flag is 1 it indicates that SHIFT + BREAK were pressed.	All registers except AF
CALL XTEMP (S0041)	Sets the musical tempo. The tempo data (01 to 07) is set in and called from A register. 01 : Slowest 04 : Medium speed 07 : Fastest Care must be taken here to ensure that the tempo data is entered in A register in binary code, and not in the ASCII code corresponding to the numbers 1 to 7 (31H to 37H).	All registers
CALL MSTA (S0044)	Continuously sounds a note according to a specified division factor. The division factor nn' consists of two bytes of data; n' is stored at address 11A1H and n is stored at address 11A2H. The relationship between the division factor and the frequency produced is $2 \text{ MHz}/nn'$.	BC and DE only

Subroutine name (hexadecimal address)	Function	Registers preserved																										
CALL MSTP (S0047)	Discontinues a tone being sounded.	All registers except AF																										
CALL TIMST (S0033)	Sets the built-in clock. (The clock is activated by this call.) The call conditions are: A register ← 0 (AM), A register ← 1 (PM) DE register ← the time in seconds (2 bytes)	All registers except AF																										
CALL TIMRD (S003B)	Reads the value of the built-in clock. The conditions upon return are: A register ← 0 (AM), A register ← 1 (PM) DE register ← the time in seconds (2 bytes)	All registers except AF and DE																										
CALL BRKEY (S001E)	Checks whether SHIFT + BREAK were pressed. Z flag is set if they were pressed, and Z flag is reset if they were not.	All registers except AF																										
CALL GETL (S0003)	Inputs one line entered from the keyboard. The starting address where the data input is to be stored must be specified in advance in the DE register. CR functions as the end mark. 80 is the maximum number of characters which can be input (including the end mark 0DH). Key input is displayed on the screen and cursor control is also accepted. The BREAK code (1BH) followed by a carriage return code (0DH) is set at the beginning of the address specified in the DE register when SHIFT + BREAK are pressed.	All registers																										
CALL GETKY (S001B)	Takes one character only into A register from the keyboard in ASCII code. A return is made after 00 is set in A register if no key is pressed when the subroutine is executed. However, key input is not displayed on the screen. Codes which are taken into A register when these special keys are pressed are shown below.	All registers except AF																										
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Special key</th> <th style="text-align: center;">Code taken into A register</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">DEL</td> <td style="text-align: center;">60 H</td> </tr> <tr> <td style="text-align: center;">INST</td> <td style="text-align: center;">61 H</td> </tr> <tr> <td style="text-align: center;">GRPH</td> <td style="text-align: center;">62 H</td> </tr> <tr> <td style="text-align: center;">GRPH</td> <td style="text-align: center;">63 H</td> </tr> <tr> <td style="text-align: center;">BREAK</td> <td style="text-align: center;">64 H</td> </tr> <tr> <td style="text-align: center;">CR or ENT</td> <td style="text-align: center;">66 H</td> </tr> <tr> <td style="text-align: center;">CTRL + A ~ Z</td> <td style="text-align: center;">01 H ~ 1 AH</td> </tr> <tr> <td style="text-align: center;">CTRL + [</td> <td style="text-align: center;">1 BH</td> </tr> <tr> <td style="text-align: center;">CTRL + \</td> <td style="text-align: center;">1 CH</td> </tr> <tr> <td style="text-align: center;">CTRL +]</td> <td style="text-align: center;">1 DH</td> </tr> <tr> <td style="text-align: center;">CTRL + ^</td> <td style="text-align: center;">1 EH</td> </tr> <tr> <td style="text-align: center;">CTRL + -</td> <td style="text-align: center;">1 FH</td> </tr> </tbody> </table>	Special key	Code taken into A register	DEL	60 H	INST	61 H	GRPH	62 H	GRPH	63 H	BREAK	64 H	CR or ENT	66 H	CTRL + A ~ Z	01 H ~ 1 AH	CTRL + [1 BH	CTRL + \	1 CH	CTRL +]	1 DH	CTRL + ^	1 EH	CTRL + -	1 FH	
Special key	Code taken into A register																											
DEL	60 H																											
INST	61 H																											
GRPH	62 H																											
GRPH	63 H																											
BREAK	64 H																											
CR or ENT	66 H																											
CTRL + A ~ Z	01 H ~ 1 AH																											
CTRL + [1 BH																											
CTRL + \	1 CH																											
CTRL +]	1 DH																											
CTRL + ^	1 EH																											
CTRL + -	1 FH																											

Subroutine name (hexadecimal address)	Function	Registers preserved																																			
CALL PRTHL (S03BA)	Displays the contents of the HL register on the display screen as a 4-digit hexadecimal number.	All registers except AF																																			
CALL PRTHX (S03C3)	Displays the contents of the A register on the display screen as a 2-digit hexadecimal number.	All registers except AF																																			
CALL ASC (S03DA)	Converts the contents of the lower 4 bits of A register from hexadecimal to ASCII code and returns after setting the converted data in A register.	All registers except AF																																			
CALL HEX (S03F9)	Converts the 8 bits of A register from ASCII code to hexadecimal and returns after setting the converted data in the lower 4 bits of A register. When C flag = 0 upon return A register ← hexadecimal When C flag = 1 upon return A register is not assured	All registers except AF																																			
CALL HLHEX (S0410)	Handles a consecutive string of 4 characters in ASCII code as hexadecimal string data and returns after setting the data in the HL register. The call and return conditions are as follows. DE ← starting address of the ASCII string (string "3" "1" "A" "5") CALL HLHEX C flag = 0 HL ← hexadecimal number (e.g., HL = 31A5H) C flag = 1 HL is not assured.	All registers except AF and HL																																			
CALL 2HEX (S041F)	Handles 2 consecutive ASCII strings as hexadecimal strings and returns after setting the data in A register. The call and return conditions are as follows. DE ← starting address of the ASCII string (e.g., "3" "A") CALL 2HEX C flag = 0 A register ← hexadecimal number (e.g., A register = 3AH) C flag = 1 A register is not assured.	All registers except AF and DE																																			
CALL ??KEY (S09B3)	Awaits key input while causing the cursor to flash. When a key entry is made it is converted to display code and set in A register, then a return is made.	All registers except AF																																			
CALL ?ADCN (S0BB9)	Converts an ASCII value to display code. Call and return conditions are as follows. A register ← ASCII value CALL ?ADCN A register ← display code	All registers except AF																																			
CALL ?DACN (S0BCE)	Converts a display code to an ASCII value. Call and return conditions are as follows. A register ← display code CALL ?DACN A register ← ASCII value	All registers except AF																																			
CALL ?DPCT (S0DDC)	Controls the display on the display screen. The relationship between A register at the time of the call and control is as follows.																																				
	<table border="1"> <thead> <tr> <th>A reg.</th> <th>Same function</th> <th>A reg.</th> <th>Same function</th> </tr> </thead> <tbody> <tr> <td>C0H</td> <td>Scrolling</td> <td>C8H</td> <td>INST</td> </tr> <tr> <td>C1H</td> <td>↓</td> <td>C9H</td> <td>GRPH (graphic → normal)</td> </tr> <tr> <td>C2H</td> <td>↑</td> <td>CAH</td> <td>GRPH (normal → graphic)</td> </tr> <tr> <td>C3H</td> <td>→</td> <td>CCH</td> <td>CTRL + @ (rev. ↔ norm.)</td> </tr> <tr> <td>C4H</td> <td>←</td> <td>CDH</td> <td>CR or ENT</td> </tr> <tr> <td>C5H</td> <td>HOME</td> <td>CEH</td> <td>CTRL + D (roll up)</td> </tr> <tr> <td>C6H</td> <td>CLR</td> <td>CFH</td> <td>CTRL + E (roll down)</td> </tr> <tr> <td>C7H</td> <td>DEL</td> <td></td> <td></td> </tr> </tbody> </table>	A reg.	Same function	A reg.	Same function	C0H	Scrolling	C8H	INST	C1H	↓	C9H	GRPH (graphic → normal)	C2H	↑	CAH	GRPH (normal → graphic)	C3H	→	CCH	CTRL + @ (rev. ↔ norm.)	C4H	←	CDH	CR or ENT	C5H	HOME	CEH	CTRL + D (roll up)	C6H	CLR	CFH	CTRL + E (roll down)	C7H	DEL		
A reg.	Same function	A reg.	Same function																																		
C0H	Scrolling	C8H	INST																																		
C1H	↓	C9H	GRPH (graphic → normal)																																		
C2H	↑	CAH	GRPH (normal → graphic)																																		
C3H	→	CCH	CTRL + @ (rev. ↔ norm.)																																		
C4H	←	CDH	CR or ENT																																		
C5H	HOME	CEH	CTRL + D (roll up)																																		
C6H	CLR	CFH	CTRL + E (roll down)																																		
C7H	DEL																																				

Subroutine name (hexadecimal address)	Function	Registers preserved
CALL ?BLNK (S0DA6)	Checks vertical blanking of the display screen. Waits until the vertical blanking interval starts and then returns when blanking takes place.	All registers
CALL ?PONT (S0FB1)	Sets the current position of the cursor on the display screen in register HL. The return conditions are as follows. CALL ?PONT HL ← cursor position on the display screen (V-RAM address) (Note) The X-Y coordinates of the cursor are contained in DSPXY (1171 H). The current position of the cursor is loaded as follows. LD HL, (DSPXY) ; H ← Y coordinate on the screen L ← X coordinate on the screen The cursor position is set as follows. LD (DSPXY), HL	All registers except AF and HL
CALL WRINF (S0021)	Writes the current contents of a certain part of the header buffer (described later) onto the tape, starting at the current tape position. Return conditions C flag = 0 No error occurred. C flag = 1 The BREAK key was pressed.	All registers except AF
CALL WRDAT (S0024)	Writes the contents of the specified memory area onto the tape as a CMT data block in accordance with the contents of a certain part of the header buffer. Return conditions C flag = 0 No error occurred. C flag = 1 The BREAK key was pressed.	All registers except AF
CALL RDINF (S0027)	Reads the first CMT header found starting at the current tape position into a certain part of the header buffer. Return conditions C flag = 0 No error occurred. C flag = 1, A register = 1 A check sum error occurred. C flag = 1, A register = 2 The BREAK key was pressed.	All registers except AF
CALL RDDAT (S002A)	Reads in the CMT data block according to the current contents of a certain part of the header buffer. Return conditions C flag = 0 No error occurred. C flag = 1, A register = 1 A check sum error occurred. C flag = 1, A register = 2 The BREAK key was pressed.	All registers except AF
CALL VERIFY (S002D)	Compares the first CMT file found following the current tape position with the contents of the memory area indicated by its header. Return conditions C flag = 0 No error occurred. C flag = 1, A register = 1 A match was not obtained. C flag = 1, A register = 2 The BREAK key was pressed.	All registers except AF

(Note) The contents of the header buffer at the specific addresses are as follows. The buffer starts at address \$10F0 and consists of 116 bytes.

Address	Contents							
IBUFE (\$10F0)	This byte indicates one of the following file modes. 01. Object file (machine language program) 02. BASIC text file 03. BASIC data file 04. Source file (ASCII file) 05. Relocatable file (relocatable binary file) A0. PASCAL interpreter text file A1. PASCAL interpreter data file							
IBU1 (\$10F1~\$1101)	These 17 bytes indicate the file name. However, since 0DH is used as the end mark, in actuality the file name is limited to 16 bytes. Example: <table border="1" style="display: inline-table; vertical-align: middle;"><tr><td>S</td><td>A</td><td>M</td><td>P</td><td>L</td><td>E</td><td>0D</td></tr></table>	S	A	M	P	L	E	0D
S	A	M	P	L	E	0D		
IBU18 (\$1102~\$1103)	These two bytes indicate the byte size of the data block which is to follow.							
IBU20 (\$1104~\$1105)	These two bytes indicate the data address of the data block which is to follow. The loading address of the data block which is to follow is indicated by "CALL RDDAT". The starting address of the memory area which is to be output as the data block is indicated by "CALL WRDAT".							
IBU22 (\$1106~\$1107)	These two bytes indicate the execution address of the data block which is to follow.							
IBU24 (\$1108~\$1163)	These bytes are used for supplemental information, such as comments.							

Example

Address	Content	
10F0	01	; indicates an object file (machine language program).
10F1	'S'	; the file name is "SAMPLE".
10F2	'A'	
10F3	'M'	
10F4	'P'	
10F5	'L'	
10F6	'E'	
10F7	0D	
10F8	} Variable	
1101		
1102		00
1103	20	
1104	00	; the data address of the file is 1200H.
1105	12	
1106	50	; the execution address of the file is 1250H.
1107	12	

2.2 MONITOR SA-1510 Assembly Listing

The MONITOR SA-1510 assembly listing is shown in following pages.

This assembly listing was obtained with the Z80-Assembler of the MZ-80A Floppy Disk Operating System. The meaning of each column is as follows.

	Relative address	Relocatable OBJ code	Label	Mnemonic (Op Code)	Operand	Comment
08	0000		MONIT:	ENT		
09	0000	C34A00		JP	START	
10	0003		GETL:	ENT		
11	0003	C3A807		JP	?GETL	
12	0006		LETNL:	ENT		
13	0006	C38009		JP	?LTNL	
14	0009		NL:	ENT		
15	0009	C37B09		JP	?NL	
16	000C		PRNTS:	ENT		
17	000C	C39309		JP	?PRTS	
18	000F		PRNTT:	ENT		
19	000F	C38409		JP	?PRTT	
20	0012		PRNT:	ENT		
21	0012	C39509		JP	?PRNT	
22	0015		MSG:	ENT		
23	0015	C39308		JP	?MSG	
24	0018		MSGX:	ENT		
25	0018	C3A108		JP	?MSGX	; RST 3
26	001B		GETKY:	ENT		
27	001B	C3B308		JP	?GET	
28	001E		BRKEY:	ENT		
29	001E	C3110D		JP	?BRK	

Figure 2.1

Since the first address of MONITOR SA-1510 is \$0000, relative addresses and relocatable OBJ codes may be regarded as absolute addresses and OBJ codes without interpretation.

This assembly listing is for reference only. The Sharp corporation is not obliged to answer any questions about the contents of this program.

```

01 0000      |
02 0000      |
03 0000      |      MONITOR PROGRAM
04 0000      |      (MZ-80A)
05 0000      |
06 0000      |      SA-1510
07 0000      |      REV. '81.8.26
08 0000      |
09 0000 C34A00  | MONIT: ENT  START
10 0003      |      JP
11 0003 C3A807  | GETL: ENT  ?GETL
12 0006      |      JP
13 0006 C38009  | LETNL: ENT ?LTNL
14 0009      |      JP
15 0009 C37809  | NL: ENT   ?NL
16 000C      |      JP
17 000C C39309  | PRNTS: ENT ?PRTS
18 000F      |      JP
19 000F C38409  | PRNTT: ENT ?PRTT
20 0012      |      JP
21 0012 C39509  | PRNT: ENT  ?PRNT
22 0015      |      JP
23 0015 C39308  | MSG: ENT   ?MSG
24 0018      |      JP
25 0018 C3A108  | MSGX: ENT  ?MSGX
26 001B      |      JP
27 001B C3B308  | GETKY: ENT ?GET
28 001E      |      JP
29 001E C3110D  | BRKEY: ENT ?BRK
30 0021      |      JP
31 0021 C33604  | WRINF: ENT ?WRI
32 0024      |      JP
33 0024 C37004  | WRDAT: ENT ?WRD
34 0027      |      JP
35 0027 C3CF04  | RDINF: ENT ?RDI
36 002A      |      JP
37 002A C3EF04  | RDDAT: ENT ?RDD
38 002D      |      JP
39 002D C37505  | VERFY: ENT ?VRFY
40 0030      |      JP
41 0030 C38801  | MELDY: ENT ?MLDY
42 0033      |      JP
43 0033 C3FA02  | TIMST: ENT ?THST
44 0036 00      |      NOP
45 0037 00      |      NOP
46 0038 C33810  | JF 1038H
47 003B      |      JF
48 003B C34403  | TIMRD: ENT ?THRD
49 003E      |      JP
50 003E C3E502  | BELL: ENT  ?BEL
51 0041      |      JP
52 0041 C3EC02  | XTEMP: ENT ?TEMP
53 0044      |      JP
54 0044 C3AB02  | MSTA: ENT  MLDST
55 0047      |      JP
56 0047 C3BE02  | MSTP: ENT  MLDSP
57 004A      |      JP
58 004A      |      |
59 004A      |      |
60 004A 31F010  | START: LD  SP,SP
    
```

```

01 0040 ED56      | IM 1
02 004F CD4D07   | CALL ?MODE
03 0052 06FF     | LD B,FFH
04 0054 21F110   | LD HL,NAME
05 0057 CDD80F   | CALL ?CLR
06 005A 3E16     | LD A,16H
07 005C CD1200   | CALL PRNT
08 005F 3ECF     | LD A,CFH
09 0061 2100D8   | LD HL,D800H
10 0064 1803     | JR +5
11 0066 C33510   | JP 1035H
12 0069 CDE309   | CALL ?CLR8
13 006C 217903   | LD HL,TIMIN
14 006F 3EC3     | LD A,C3H
15 0071 323810   | LD (1038H),A
16 0074 223910   | LD (1039H),HL
17 0077 3E04     | LD A,04
18 0079 329E11   | LD (TEMPW),A
19 007C CDBE02   | CALL MLDSP
20 007F CD0900   | CALL NL
21 0082 110001   | LD DE,MSG?3
22 0085 DF       | RST 3
23 0086 CDE502   | CALL ?BEL
24 0089 3EFF     | LD A,FFH
25 008B 329D11   | LD (SWRK),A
26 008E 2100E8   | LD HL,E800H
27 0091 3655     | LD (HL),55H
28 0093 1835     | JR FD2
29 0095 CD0900   | CALL NL
30 0098 3E2A     | LD A,2AH
31 009A CD1200   | CALL PRNT
32 009D 11A311   | LD DE,BUFER
33 00A0 CD0300   | CALL GETL
34 00A3 1A       | LD A,(DE)
35 00A4 13       | INC DE
36 00A5 FE0D     | CP 0DH
37 00A7 28EC     | JR Z,ST1
38 00A9 FE4A     | CP 'J'
39 00AB 280E     | JR Z,GOTO
40 00AD FE4C     | CP 'L'
41 00AF 2828     | JR Z,LOAD
42 00B1 FE46     | CP 'F'
43 00B3 2812     | JR Z,FD
44 00B5 FE42     | CP 'B'
45 00B7 2808     | JR Z,SG
46 00B9 18E8     | JR ST2
47 00BB          |
48 00BB          | JUMP COMMAND
49 00BB          |
50 00BB CD1004   | GOTO: CALL HLHEX
51 00BE 38D5     | JR C,ST1
52 00C0 E9       | JP (HL)
53 00C1          |
54 00C1          | KEY SOUND ON OFF
55 00C1          |
56 00C1 3A9D11   | SG: LD A,(SWRK)
57 00C4 2F       | CPL
58 00C5 18C4     | JR SS+2
59 00C7          |
60 00C7          | FLOPPY
    
```

```

01 00C7          I
02 00C7 2100F0  FD1: LD HL,F000H
03 00CA 7E      FD2: LD A,(HL)
04 00CB B7      OR A
05 00CC 20C7   JR NZ,ST1
06 00CE E9     JP (HL)
07 00CF          I
08 00CF          I
09 00CF          I ERROR (LOADING)
10 00CF          I
11 00CF FE02   ?ER: CP 02H
12 00D1 28C2   JR Z,ST1
13 00D3 111801 LD DE,MSG01
14 00D6 DF     RST 3          I CALL MSGX
15 00D7 18BC   JR ST1
16 00D9          I
17 00D9          I
18 00D9          I LOAD COMMAND
19 00D9          I
20 00D9 CDCF04 LOAD: CALL ?RD1
21 00DC 38F1   JR C,?ER
22 00DE CD0900 LOA0: CALL NL
23 00E1 11F700 LD DE,MSG02
24 00E4 DF     RST 3          I CALL MSGX
25 00E5 11F110 LD DE,NAME
26 00E8 DF     RST 3          I CALL MSGX
27 00E9 CDEF04 CALL ?RDD
28 00EC 38E1   JR C,?ER
29 00EE 2A0611 LD HL,(EXADR)
30 00F1 7C     LD A,H
31 00F2 FE12   CP 12H
32 00F4 389F   JR C,ST1
33 00F6 E9     JP (HL)
34 00F7 4C     MSG02: DEFM 'L'          I LOADING
35 00F8 B7A1   DEFW A1B7H
36 00FA 9CA6   DEFW A69CH
37 00FC B097   DEFW 97B0H
38 00FE 200D   DEFW 0D20H
39 0100 2A2A2020 MSG03: DEFM '** MONITOR SA-1510 **'
40 0104 4D4F4E49
41 0108 544F5220
42 010C 53412D31
43 0110 35313020
44 0114 202A2A
45 0117 0D     DEFB 0DH
46 0118          I
47 0118          I
48 0118 43     MSG01: DEFM 'C'          I CHECK SUM ERROR
49 0119 9892   DEFW 9298H
50 011B 9FA9   DEFW A99FH
51 011D 20A4   DEFW A420H
52 011F A5B3   DEFW B3A5H
53 0121 2092   DEFW 9220H
54 0123 9D9D   DEFW 9D9DH
55 0125 B79D   DEFW 9DB7H
56 0127 0D     DEFB 0DH
57 0128          I
58 0128          I CR PAGE MODE1
59 0128          I
60 0128 CD2B0A .CR1: CALL .MANG

```

```

01 012B 0F          RRCA
02 012C D2860E   JP NC,CURS2
03 012F 2E00     LD L,0
04 0131 24       INC H
05 0132 FE18     CP +24
06 0134 2804     JR Z,.CR1
07 0136 24       INC H
08 0137 C3660E   JP CURS1
09 013A 227111   .CR1: LD (DSPXY),HL
10 013D          I
11 013D          I
12 013D          I SCROL PAGE MODE1
13 013D          I
14 013D 01C003   .SCROL: ENT
15 0140 1100D0   LD BC,03COH
16 0143 2128D0   LD DE,SCRN
17 0146 EDB0     LD HL,SCRN+40
18 0148 EB       LDIR
19 0149 0628     EX DE,HL
20 014B CDD80F   LD B,+40
21 014E 011A00   CALL ?CLER
22 0151 117311   LD BC,26
23 0154 217411   LD DE,MANG
24 0157 EDB0     LD HL,MANG+1
25 0159 3600     LDIR
26 015B 3A7311   LD (HL),0
27 015E B7       LD A,(MANG)
28 015F CAE50E   OR A
29 0162 217211   JP Z,?RSTR
30 0165 35       LD HL,DSPXY+1
31 0166 18D5     DEC (HL)
32 0168          JR .SCROL
33 0168          I
34 0168          I
35 0168          I CTBL PAGE MODE1
36 0168          I
37 0168 3D01     .CTBL: DEFW .SCROL
38 016A 5D0E     DEFW CURSD
39 016C 6E0E     DEFW CURSU
40 016E 780E     DEFW CURSR
41 0170 950E     DEFW CURSL
42 0172 0904     DEFW HOMO
43 0174 B30E     DEFW CLRS
44 0176 F20E     DEFW DEL
45 0178 2D0F     DEFW INST
46 017A E10E     DEFW ALPHA
47 017C EE0E     DEFW KANA
48 017E E50E     DEFW ?RSTR
49 0180 170A     DEFW REV
50 0182 2801     DEFW .CR
51 0184 E50E     DEFW ?RSTR
52 0186 E50E     DEFW ?RSTR
53 0188          I
54 0188          I
55 0188          I MELODY
56 0188          I
57 0188          I
58 0188          I DE=DATA LOW ADR.
59 0188          I EXIT CF=1 BREAK
60 0188          I CF=0 OK

```

```

01 0188      ?MLDY:
02 0188      ENT
03 0188      PUSH BC
04 0189      PUSH DE
05 018A      PUSH HL
06 018B      LD A,02H
07 018C      LD (OCTV),A
08 018D      LD B,01
09 018E      LD A,(DE)
10 018F      CP 0DH
11 0190      JR Z,MLD4
12 0191      CP C8H
13 0192      JR Z,MLD4
14 0193      CP CFH
15 0194      JR Z,MLD2
16 0195      CP 2DH
17 0196      JR Z,MLD2
18 0197      CP 28H
19 0198      JR Z,MLD3
20 0199      CP 07H
21 019A      JR Z,MLD3
22 019B      CP 23H
23 019C      LD HL,MTBL
24 019D      JR NZ,*6
25 019E      LD HL,*MTBL
26 019F      INC DE
27 01A0      CALL ONPU
28 01A1      JR C,MLD1
29 01A2      CALL RYTHM
30 01A3      JR C,MLD5
31 01A4      CALL MLDST
32 01A5      LD B,C
33 01A6      JR MLD1
34 01A7      LD A,*3
35 01A8      LD (OCTV),A
36 01A9      INC DE
37 01AA      MLD3: LD A,1
38 01AB      JR MLD2+2
39 01AC      MLD4: CALL RYTHM
40 01AD      MLD5: PUSH AF
41 01AE      CALL MLDSP
42 01AF      POP AF
43 01B0      JP RET3
44 01B1      ?
45 01B2      ?
46 01B3      ?
47 01B4      ?
48 01B5      ?
49 01B6      ?
50 01B7      ?
51 01B8      ?
52 01B9      ?
53 01BA      ?
54 01BB      ?
55 01BC      ?
56 01BD      ?
57 01BE      ?
58 01BF      ?
59 01C0      ?
60 01C1      ?

```

```

01 01EA 13      INC DE
02 01EB C1      POP BC
03 01EC C9      RET
04 01ED 23      ONPZ1
05 01EE D5      PUSH DE
06 01EF 5E      LD A,(HL)
07 01F0 23      INC HL
08 01F1 56      LD D,(HL)
09 01F2 EB      EX DE,HL
10 01F3 7C      LD A,H
11 01F4 87      OR A
12 01F5 2809   JR Z,*11
13 01F7 3AA011  LD A,(OCTV)
14 01FA 3D      DEC A
15 01FB 2803   JR Z,*5
16 01FC 29      ADD HL,HL
17 01FE 18FA   JR -4
18 0200 22A111 LD (RATIO),HL
19 0203 21A011 LD HL,OCTV
20 0206 3802   LD (HL),2
21 0208 28      DEC HL
22 0209 D1     POP DE
23 020A 13     INC DE
24 020B 1A     LD A,(DE)
25 020C 47     LD B,A
26 020D E6F0   AND FOH
27 020F FE30   CP 30H
28 0211 2803   JR Z,*5
29 0213 7E     LD A,(HL)
30 0214 1805   JR *7
31 0216 13     INC DE
32 0217 78     LD A,B
33 0218 E60F   AND OFH
34 021A 77     LD (HL),A
35 021B 215902 LD HL,OPTBL
36 021E 65     ADD A,L
37 021F 6F     LD L,A
38 0220 4E     LD C,(HL)
39 0221 3A9E11 LD A,(TEMPH)
40 0224 47     LD B,A
41 0225 AF     XOR A
42 0226 C3AB09 JP ONP3
43 0229
44 0229 43      MTBL1: DEFB 43H
45 022A 7707   DEFB 0777H
46 022C 44     DEFB 44H
47 022D A706   DEFB 06A7H
48 022F 45     DEFB 45H
49 0230 ED05   DEFB 05EDH
50 0232 46     DEFB 46H
51 0233 9805   DEFB 0598H
52 0235 47     DEFB 47H
53 0236 FC04   DEFB 04FCH
54 0238 41     DEFB 41H
55 0239 7104   DEFB 0471H
56 023B 42     DEFB 42H
57 023C F503   DEFB 03F5H
58 023E 52     DEFB 52H
59 023F 0000   DEFB 0
60 0241 43     DEFB 43H

```

```

1 ONTYO ?
1 HL=ONTYO
1 HL=ONTYO
1 C
1 D
1 E
1 F
1 G
1 A
1 B
1 R
1 BC

```

```

1 CR
1 END MARK
1 UNDER OCTAVE
1 *
1 *
1 UPPER OCTAVE
1 *-

```

```

1 ONPU TO RATIO CONV
1
1 EXIT (RATIO)=RATIO VALUE
1 C=ONTYO*TEMPO

```

```

ONPU: PUSH BC
LD B,B
LD A,(DE)
CP (HL)
JR Z,ONP2
INC HL
INC HL
INC HL
DJNZ *-6
SCF

```

```

MTBL: DEFB 43H
DEFB 0777H
DEFB 44H
DEFB 06A7H
DEFB 45H
DEFB 05EDH
DEFB 46H
DEFB 0598H
DEFB 47H
DEFB 04FCH
DEFB 41H
DEFB 0471H
DEFB 42H
DEFB 03F5H
DEFB 52H
DEFB 0
DEFB 43H

```

```

MTBL: DEFB 43H
DEFB 0777H
DEFB 44H
DEFB 06A7H
DEFB 45H
DEFB 05EDH
DEFB 46H
DEFB 0598H
DEFB 47H
DEFB 04FCH
DEFB 41H
DEFB 0471H
DEFB 42H
DEFB 03F5H
DEFB 52H
DEFB 0
DEFB 43H

```

```

01 0242 0C07      DEFB 070CH      I MD
02 0244 44      DEFB 44H
03 0245 4706      DEFB 0647H      I BE
04 0247 45      DEFB 45H
05 0248 9805      DEFB 0598H
06 024A 46      DEFB 46H
07 024B 4805      DEFB 0548H
08 024D 47      DEFB 47H
09 024E 8404      DEFB 0484H
10 0250 41      DEFB 41H
11 0251 3104      DEFB 0431H
12 0253 42      DEFB 42H
13 0254 BB03      DEFB 03BBH
14 0256 52      DEFB 52H
15 0257
16 0257 0000      DEFB 0
OPTBL: DEFB 1
        DEFB 2
        DEFB 3
        DEFB 4
        DEFB 6
        DEFB 8
        DEFB 0CH
        DEFB 10H
        DEFB 18H
        DEFB 20H
17 0259 01
18 025A 02
19 025B 03
20 025C 04
21 025D 06
22 025E 08
23 025F 0C
24 0260 10
25 0261 18
26 0262 20
27 0263
28 0263
29 0263
30 0263
31 0263 219211  ?SAVE: LD HL,FLSDT
32 0266 36EF      LD (HL),EFH
33 0268 3A7011    LD A,(KANAF)
34 026B 87        OR A
35 026C 2802      JR Z,KSL0
36 026E 36FF      LD (HL),FFH
37 0270 7E        LD A,(HL)
38 0271 F5        PUSH AF
39 0272 CDB10F    CALL ?PONT
40 0275 7E        LD A,(HL)
41 0276 328E11    LD (FLASH),A
42 0279 F1        POP AF
43 027A 77        LD (HL),A
44 027B AF        XOR A
45 027C 2100E0    LD HL,KEYPA
46 027F 77        LD (HL),A
47 0280 2F        CPL
48 0281 77        LD (HL),A
49 0282 C9        RET
50 0283
51 0283
52 0283
53 0283
54 0283
55 0283
56 0283 F5      MGF.I: PUSH AF
57 0284 E5      PUSH HL
58 0285 217C11  LD HL,MPNT
59 0288 7E      LD A,(HL)
60 0289 3C      INC A

```

```

01 028A FE33      CP 51
02 028C 2001      JR NZ,MP0
03 028E AF        XOR A
04 028F E5        PUSH HL
05 0290 6F        LD L,A
06 0291 3A9111   LD A,(SPARE)
07 0294 B7        OR A
08 0295 7D        LD A,L
09 0296 E1        POP HL
10 0297 2001     JR NZ,+3
11 0299 77        LD (HL),A
12 029A E1        POP HL
13 029B F1        POP AF
14 029C C9        RET
15 029D
16 029D
17 029D
18 029D F5      MGF.D: PUSH AF
19 029E E5        PUSH HL
20 029F 217C11   LD HL,MPNT
21 02A2 7E        LD A,(HL)
22 02A3 3D        DEC A
23 02A4 F28F02   JP P,MP0
24 02A7 3E32     LD A,50
25 02A9 18E4     JR MP0
26 02AB
27 02AB
28 02AB
29 02AB
30 02AB
31 02AB 2AA111   MLDST: LD HL,(RATIO)
32 02AE 7C        LD A,H
33 02AF B7        OR A
34 02B0 280C     JR Z,MLDSP
35 02B2 D5        PUSH DE
36 02B3 EB        EX DE,HL
37 02B4 2104E0   LD HL,CONTO
38 02B7 73        LD (HL),E
39 02B8 72        LD (HL),D
40 02B9 3E01     LD A,1
41 02BB D1        POP DE
42 02BC 1806     JR MLDS1
43 02BE 3E34     MLDSP: LD A,34H
44 02BF 3E34     LD (CONTF),A
45 02C0 3207E0   XOR A
46 02C3 AF        MLDST: LD (SUNDG),A
47 02C4 3208E0   LD (SUNDG),A
48 02C7 C9        RET
49 02C8
50 02C8
51 02C8
52 02C8
53 02C8
54 02C8
55 02C8
56 02C8 2100E0  RYTHM: LD HL,KEYPA
57 02CB 36F0     LD (HL),FOH
58 02CD 23      INC HL
59 02CE 7E      LD A,(HL)
60 02CF E681     AND 81H

```

```

01 02D0
02 02D0
03 02D0 F5      MGF.D: PUSH AF
04 02D1 E5        PUSH HL
05 02D2 217C11   LD HL,MPNT
06 02D5 7E        LD A,(HL)
07 02D6 3D        DEC A
08 02D7 F28F02   JP P,MP0
09 02DA 3E32     LD A,50
10 02DB 18E4     JR MP0
11 02DB
12 02DB
13 02DB
14 02DB
15 02DB
16 02DB
17 02DB
18 02DB
19 02DB
20 02DB
21 02DB
22 02DB
23 02DB
24 02DB
25 02DB
26 02DB
27 02DB
28 02DB
29 02DB
30 02DB
31 02DB
32 02DB
33 02DB
34 02DB
35 02DB
36 02DB
37 02DB
38 02DB
39 02DB
40 02DB
41 02DB
42 02DB
43 02DB
44 02DB
45 02DB
46 02DB
47 02DB
48 02DB
49 02DB
50 02DB
51 02DB
52 02DB
53 02DB
54 02DB
55 02DB
56 02DB
57 02DB
58 02DB
59 02DB
60 02DB

```

```

01 02E0
02 02E0
03 02E0
04 02E0
05 02E0
06 02E0
07 02E0
08 02E0
09 02E0
10 02E0
11 02E0
12 02E0
13 02E0
14 02E0
15 02E0
16 02E0
17 02E0
18 02E0
19 02E0
20 02E0
21 02E0
22 02E0
23 02E0
24 02E0
25 02E0
26 02E0
27 02E0
28 02E0
29 02E0
30 02E0
31 02E0
32 02E0
33 02E0
34 02E0
35 02E0
36 02E0
37 02E0
38 02E0
39 02E0
40 02E0
41 02E0
42 02E0
43 02E0
44 02E0
45 02E0
46 02E0
47 02E0
48 02E0
49 02E0
50 02E0
51 02E0
52 02E0
53 02E0
54 02E0
55 02E0
56 02E0
57 02E0
58 02E0
59 02E0
60 02E0

```

```

01 02F0
02 02F0
03 02F0
04 02F0
05 02F0
06 02F0
07 02F0
08 02F0
09 02F0
10 02F0
11 02F0
12 02F0
13 02F0
14 02F0
15 02F0
16 02F0
17 02F0
18 02F0
19 02F0
20 02F0
21 02F0
22 02F0
23 02F0
24 02F0
25 02F0
26 02F0
27 02F0
28 02F0
29 02F0
30 02F0
31 02F0
32 02F0
33 02F0
34 02F0
35 02F0
36 02F0
37 02F0
38 02F0
39 02F0
40 02F0
41 02F0
42 02F0
43 02F0
44 02F0
45 02F0
46 02F0
47 02F0
48 02F0
49 02F0
50 02F0
51 02F0
52 02F0
53 02F0
54 02F0
55 02F0
56 02F0
57 02F0
58 02F0
59 02F0
60 02F0

```

```

01 0300
02 0300
03 0300
04 0300
05 0300
06 0300
07 0300
08 0300
09 0300
10 0300
11 0300
12 0300
13 0300
14 0300
15 0300
16 0300
17 0300
18 0300
19 0300
20 0300
21 0300
22 0300
23 0300
24 0300
25 0300
26 0300
27 0300
28 0300
29 0300
30 0300
31 0300
32 0300
33 0300
34 0300
35 0300
36 0300
37 0300
38 0300
39 0300
40 0300
41 0300
42 0300
43 0300
44 0300
45 0300
46 0300
47 0300
48 0300
49 0300
50 0300
51 0300
52 0300
53 0300
54 0300
55 0300
56 0300
57 0300
58 0300
59 0300
60 0300

```

```

01 02D1 2002      JR      NZ,+4
02 02D3 37       SCF
03 02D4 C9       RET
04 02D5 2A08E0   LD      A,(TEMP)
05 02D8 0F       RRCA
06 02D9 38FA    JR      C,-4
07 02DB 3A08E0   LD      A,(TEMP)
08 02DE 0F       RRCA
09 02DF 30FA    JR      NC,-4
10 02E1 10F2    DJNZ   -12
11 02E3 AF       XOR    A
12 02E4 C9       RET
13 02E5         ; BELL
14 02E5         ;
15 02E5         ?BEL: ENT
16 02E5         LD      DE,?BELD
17 02E5 D5      PUSH  DE
18 02E6 11B10D  LD      DE,?BELD
19 02E9 F7      RST    6
20 02EA D1      POP    DE
21 02EB C9       RET
22 02EC         ;
23 02EC         ;
24 02EC         ;
25 02EC         ;
26 02EC         ;
27 02EC         ;
28 02EC F5      POP    AF
29 02ED C5      PUSH  BC
30 02EE E60F   AND    OFH
31 02F0 47      LD      B,A
32 02F1 3E08   LD      A,8
33 02F3 90     SUB    B
34 02F4 329E11 LD      (TEMP),A
35 02F7 C1     POP    BC
36 02F8 F1     POP    AF
37 02F9 C9     RET
38 02FA         ;
39 02FA         ;
40 02FA         ;
41 02FA         ;
42 02FA         ;
43 02FA         ;
44 02FA         ;
45 02FA         ;
46 02FA F3     DI
47 02FB C5     PUSH  BC
48 02FC D5     PUSH  DE
49 02FD E5     PUSH  HL
50 02FE 329B11 LD      (AMPH),A
51 0301 3EF0   LD      A,FOH
52 0303 329C11 LD      (TIMFG),A
53 0306 21C0A8 LD      HL,ABCOH
54 0309 AF     XOR    A
55 030A ED52   SBC   HL,DE
56 030C E5     PUSH  HL
57 030D 23     INC   HL
58 030E EB     EX    DE,HL
59 030F 2107E0 LD      HL,CONTF
60 0312 3674   LD      (HL),74H

01 0314 36B0   LD      (HL),80H
02 0316 2B     DEC   HL
03 0317 73     LD      (HL),E
04 0318 72     LD      (HL),D
05 0319 2B     DEC   HL
06 031A 360A   LD      (HL),0AH
07 031C 3600   LD      (HL),0
08 031E 23     INC   HL
09 031F 23     INC   HL
10 0320 3680   LD      (HL),80H
11 0322 4E     DEC   HL
12 0323 4E     C,(HL)
13 0324 7E     LD      A,(HL)
14 0325 BA     CP     D
15 0326 20FB   JR      NZ,?TMS1
16 0328 79     LD      A,C
17 0329 BB     CP     E
18 032A 20F7   JR      NZ,?TMS1
19 032C 2B     DEC   HL
20 032D 00     NOP
21 032E 00     NOP
22 032F 00     NOP
23 0330 360C   LD      (HL),0CH
24 0332 367B   LD      (HL),7BH
25 0334 23     INC   HL
26 0335 D1     POP    DE
27 0336 4E     LD      C,(HL)
28 0337 7E     LD      A,(HL)
29 0338 BA     CP     D
30 0339 20FB   JR      NZ,?TMS2
31 033B 79     LD      A,C
32 033C BB     CP     E
33 033D 20F7   JR      NZ,?TMS2
34 033F E1     POP    HL
35 0340 D1     POP    DE
36 0341 C1     POP    BC
37 0342 FB     EI
38 0343 C9     RET
39 0344         ;
40 0344         ;
41 0344         ;
42 0344         ;
43 0344         ;
44 0344         ;
45 0344         ;
46 0344         ;
47 0344         ;
48 0344 E5     PUSH  HL
49 0345 2107E0 LD      HL,CONTF
50 0348 3680   LD      (HL),80H
51 034A 2B     DEC   HL
52 034B F3     DI
53 034C 5E     LD      E,(HL)
54 034D 56     LD      D,(HL)
55 034E FB     EI
56 034F 7B     LD      A,E
57 0350 B2     OR    D
58 0351 280E   JR      Z,?TMR1
59 0353 AF     XOR    A
60 0354 21C0A8 LD      HL,ABCOH

```

```

01 0357 ED52      SBC      HL,DE
02 0359 3810     JR      C,?THR2
03 035B EB       EX      DE,HL
04 035C 3A9B11  LD      A,(AMPH)
05 035F E1      POP     HL
06 0360 C9      RET
?THR1:          LD      DE,ABCOH
07 0361 11C0A8  LD      A,(AMPM)
08 0364 3A9B11  LD      A,(AMPM)
09 0367 EE01     XOR     I
10 0369 E1      POP     HL
11 036A C9      RET
12 036B F3      ?THR2: DI
13 036C 2106E0  LD      HL,CONTZ
14 036F 7E      A,(HL)
15 0370 2F      CPL
16 0371 5F      LD      E,A
17 0372 7E      A,(HL)
18 0373 2F      CPL
19 0374 57      LD      D,A
20 0375 FB      EX      DE
21 0376 13      INC     DE
22 0377 18EB   JR      ?THR1+3
23 0379
24 0379
25 0379
26 0379
27 0379
28 0379 F5     PUSH   AF
29 037A C5     PUSH   BC
30 037B D5     PUSH   DE
31 037C E5     PUSH   HL
32 037D 219B11 LD      HL,AMPM
33 0380 7E      LD      A,(HL)
34 0381 EE01     XOR     I
35 0383 77     LD      (HL),A
36 0384 2107E0  LD      HL,CONTF
37 0387 3680   LD      (HL),80H
38 0389 28     DEC     HL
39 038A E5     PUSH   HL
40 038B 5E     LD      E,(HL)
41 038C 56     LD      D,(HL)
42 038D 21C0A8 LD      HL,ASCOH
43 0390 19     ADD     HL,DE
44 0391 28     DEC     HL
45 0392 28     DEC     HL
46 0393 EB     EX      DE,HL
47 0394 E1     POP     HL
48 0395 73     LD      (HL),E
49 0396 72     LD      (HL),D
50 0397 E1     POP     HL
51 0398 D1     POP     DE
52 0399 C1     POP     BC
53 039A F1     POP     AF
54 039B FB     EI
55 039C C9     RET
56 039D
57 039D
58 039D
59 039D EB     DSPO3: EX  DE,HL
60 039E 3601  LD      (HL),+1

```

CONTZ

```

01 03A0 23      INC     HL
02 03A1 3600   LD      (HL),0
03 03A3 C37B0E  JP      CURSR
04 03A6
05 03A6
06 03A6
07 03A6
08 03A6
09 03A6
10 03A6 3A7211  .MANG2: LD  A,(DSPXY+1)
11 03A9 85     ADD     A,L
12 03AA 6F     LD      L,A
13 03AB 7E     LD      A,(HL)
14 03AC 23     INC     HL
15 03AD CB16   RL      (HL)
16 03AF BA     OR      (HL)
17 03B0 CB1E   RR      (HL)
18 03B2 0F     RRCA
19 03B3 EB     EX      DE,HL
20 03B4 2A7111 LD      HL,(DSPXY)
21 03B7 C9     RET
22 03B8
23 03B8
24 03BA       ORG    03BAH
25 03BA       ENT     ENT
26 03BA 7C     LD      A,H
27 03BB CDC303 CALL  PRTHX
28 03BE 70     LD      A,L
29 03BF 1802   JR      PRTHX
30 03C1
31 03C3       ORG    03C3H
32 03C3
33 03C3
34 03C3
35 03C3
36 03C3 F5     PUSH   AF
37 03C4 0F     RRCA
38 03C5 0F     RRCA
39 03C6 0F     RRCA
40 03C7 0F     RRCA
41 03C8 CDDA03 CALL  ASC
42 03CB DD1200 CALL  PRNT
43 03CE F1     POP     AF
44 03CF CDDA03 CALL  ASC
45 03D2 C31200 CALL  PRNT
46 03D5
47 03D5
48 03D5
49 03D5
50 03D5 D1     POP     DE
51 03D6 E1     POP     HL
52 03D7 C1     POP     BC
53 03D8 F1     POP     AF
54 03D9 C9     RET
55 03DA
56 03DA
57 03DA
58 03DA
59 03DA
60 03DA

```

PRTHX: ENT ENT

```

01 03DA      1  ASC:      ENT      AND      OFH
02 03DA E60F      AND      OFH
03 03DA FE0A      CP      OAH
04 03DC FE0A      CP      OAH
05 03DE 3802      JR      C,NOADD
06 03E0 C607      ADD      A,7
07 03E2 C630      NOADD:  ADD      A,30H
08 03E4 C9        RET
09 03E5      1  ASCII TO HEXA
10 03E5      1  ASCII TO HEXA
11 03E5      1  ASCII TO HEXA
12 03E5 FE30      HEXJ:  CP      30H
13 03E7 D8        RET      C
14 03E8 FE3A      CP      3AH
15 03EA 3806      JR      C,HEX1
16 03EC D607      SUB      7
17 03EE FE40      CP      40H
18 03F0 3003      JR      NC,HEX2
19 03F2 E60F      HEX1:  AND      OFH
20 03F4 C9        RET
21 03F5 37        HEX2:  SCF
22 03F6 C9        RET
23 03F7
24 03F7
25 03F9
26 03F9      1  ORG      03F9H
27 03F9 18EA      HEX:  ENT
28 03FB      1  JR      HEXJ
29 03FB      1  @DPCT PUCH
30 03FB
31 03FB
32 03FB 2A7111     HOME:  LD      HL,(DSPXY)
33 03FE 3A7C11     LD      A,(MGPNT)
34 0401 94        SUB      H
35 0402 3002      JR      NC,HOM1
36 0404 C632      ADD      A,50
37 0406 327C11     LD      HL,(MGPNT),A
38 0409 210000     LD      HL,0
39 040C C3690E     JP      CURS3
40 040F
41 040F
42 0410
43 0410      1  ORG      0410H
44 0410      1  4 ASCII TO (HL)
45 0410      1  DE=DATA LOW ADR.
46 0410      1  EXIT  CF=0 : OK
47 0410      1  =1 : OUT
48 0410
49 0410
50 0410
51 0410 D5        HLHEX:  ENT
52 0410 D5        PUSH  DE
53 0411 CD1F04     CALL  2HEX
54 0414 3807      JR      C,*9
55 0416 67        LD      H,A
56 0417 CD1F04     CALL  2HEX
57 041A 3801      JR      C,*3
58 041C 6F        LD      L,A
59 041D D1        POP      DE
60 041E C9        RET

```

```

01 041F      1  ORG      041FH
02 041F      1  12HEX  482
03 041F
04 041F      1  2 ASCII TO (ACC)
05 041F      1  DE=DATA LOW ADR.
06 041F      1  DE=DATA LOW ADR.
07 041F      1  DE=DATA LOW ADR.
08 041F      1  DE=DATA LOW ADR.
09 041F      1  EXIT  CF=0 : OK
10 041F      1  =1 : OUT
11 041F
12 041F      1  2HEX:  ENT
13 041F C5        PUSH  BC
14 0420 1A        LD      A,(DE)
15 0421 13        INC      DE
16 0422 CDF903     CALL  HEX
17 0425 3800      JR      C,*15
18 0427 0F        RRCA
19 0428 0F        RRCA
20 0429 0F        RRCA
21 042A 0F        RRCA
22 042B 4F        LD      C,A
23 042C 1A        LD      A,(DE)
24 042D 13        INC      DE
25 042E CDF903     CALL  HEX
26 0431 3801      JR      C,*3
27 0433 B1        OR      C
28 0434 C1        2HEX:  POP  BC
29 0435 C9        RET
30 0436
31 0436      1  WRITE INFORMATION
32 0436
33 0436      1  ?MRI:  ENT
34 0436
35 0436 F3        DI
36 0437 D5        PUSH  DE
37 0438 C5        PUSH  BC
38 0439 E5        PUSH  HL
39 043A 16D7      LD      D,D7H
40 043C 1ECC      LD      E,CCH
41 043E 21F010     LD      HL,IBUFE
42 0441 018000     LD      BC,80H
43 0444 CD1A07     CALL  CKSUM
44 0447 CDA306     CALL  MOTOR
45 044A 3818      JR      C,HR13
46 044C 78        LD      A,E
47 044D FECC      CP      CCH
48 044F 20D0      JR      NZ,HR12
49 0451 CD0900     CALL  NL
50 0454 D5        PUSH  DE
51 0455 116704     LD      DE,MSG#7
52 0458 DF        RST  3
53 0459 11F110     LD      DE,NAME
54 045C DF        RST  3
55 045D D1        POP  DE
56 045E CD7A07     CALL  GAP
57 0461 CD8504     CALL  WTAPE
58 0464 C55205     LD      JF,RET2
59 0467
60 0467 57        MSG#7:  DEFN  'M'

```

```

01 0467 57        MSG#7:  DEFN  'M'
02 0467 57        MSG#7:  DEFN  'M'
03 0467 57        MSG#7:  DEFN  'M'
04 0467 57        MSG#7:  DEFN  'M'
05 0467 57        MSG#7:  DEFN  'M'
06 0467 57        MSG#7:  DEFN  'M'
07 0467 57        MSG#7:  DEFN  'M'
08 0467 57        MSG#7:  DEFN  'M'
09 0467 57        MSG#7:  DEFN  'M'
10 0467 57        MSG#7:  DEFN  'M'
11 0467 57        MSG#7:  DEFN  'M'
12 0467 57        MSG#7:  DEFN  'M'
13 0467 57        MSG#7:  DEFN  'M'
14 0467 57        MSG#7:  DEFN  'M'
15 0467 57        MSG#7:  DEFN  'M'
16 0467 57        MSG#7:  DEFN  'M'
17 0467 57        MSG#7:  DEFN  'M'
18 0467 57        MSG#7:  DEFN  'M'
19 0467 57        MSG#7:  DEFN  'M'
20 0467 57        MSG#7:  DEFN  'M'
21 0467 57        MSG#7:  DEFN  'M'
22 0467 57        MSG#7:  DEFN  'M'
23 0467 57        MSG#7:  DEFN  'M'
24 0467 57        MSG#7:  DEFN  'M'
25 0467 57        MSG#7:  DEFN  'M'
26 0467 57        MSG#7:  DEFN  'M'
27 0467 57        MSG#7:  DEFN  'M'
28 0467 57        MSG#7:  DEFN  'M'
29 0467 57        MSG#7:  DEFN  'M'
30 0467 57        MSG#7:  DEFN  'M'
31 0467 57        MSG#7:  DEFN  'M'
32 0467 57        MSG#7:  DEFN  'M'
33 0467 57        MSG#7:  DEFN  'M'
34 0467 57        MSG#7:  DEFN  'M'
35 0467 57        MSG#7:  DEFN  'M'
36 0467 57        MSG#7:  DEFN  'M'
37 0467 57        MSG#7:  DEFN  'M'
38 0467 57        MSG#7:  DEFN  'M'
39 0467 57        MSG#7:  DEFN  'M'
40 0467 57        MSG#7:  DEFN  'M'
41 0467 57        MSG#7:  DEFN  'M'
42 0467 57        MSG#7:  DEFN  'M'
43 0467 57        MSG#7:  DEFN  'M'
44 0467 57        MSG#7:  DEFN  'M'
45 0467 57        MSG#7:  DEFN  'M'
46 0467 57        MSG#7:  DEFN  'M'
47 0467 57        MSG#7:  DEFN  'M'
48 0467 57        MSG#7:  DEFN  'M'
49 0467 57        MSG#7:  DEFN  'M'
50 0467 57        MSG#7:  DEFN  'M'
51 0467 57        MSG#7:  DEFN  'M'
52 0467 57        MSG#7:  DEFN  'M'
53 0467 57        MSG#7:  DEFN  'M'
54 0467 57        MSG#7:  DEFN  'M'
55 0467 57        MSG#7:  DEFN  'M'
56 0467 57        MSG#7:  DEFN  'M'
57 0467 57        MSG#7:  DEFN  'M'
58 0467 57        MSG#7:  DEFN  'M'
59 0467 57        MSG#7:  DEFN  'M'
60 0467 57        MSG#7:  DEFN  'M'

```



```

01 0505      BC=SIZE
02 0505      DE=LOAD ADR.
03 0505      ;
04 0505      ;
05 0505      ; EXIT ACC=0 : OK CF=0
06 0505      ;   =1 : ER CF=1
07 0505      ;   =2 : BREAK=1
08 0505 D5   RTAPE:  PUSH DE
09 0506 C5   PUSH BC
10 0507 E5   PUSH HL
11 0508 2602 LD H,2
12 050A 0101E0 LD BC,KEYFB
13 050D 1102E0 LD DE,CSTR
14 0510 CD0106 CALL EDGE
15 0513 DA7005 JP C,RTF6
16 0516 CDA209 CALL DLY3
17 0519 1A   LD A,(DE)
18 051A E620 AND 20H
19 051C CA1005 JP Z,RTF2
20 051F 54   LD D,H
21 0520 210000 LD HL,0
22 0523 229711 LD (SUMDT),HL
23 0526 E1   POP HL
24 0527 C1   POP BC
25 0528 C5   PUSH BC
26 0529 E5   PUSH HL
27 052A CD2406 CALL RBYTE
28 052D DA7005 JP C,RTF6
29 0530 77   LD (HL),A
30 0531 23   INC HL
31 0532 08   DEC BC
32 0533 78   LD A,B
33 0534 B1   OR C
34 0535 C22A05 JP NZ,RTF3
35 0538 2A9711 LD HL,(SUMDT)
36 053B CD2406 CALL RBYTE
37 053E DA7005 JP C,RTF6
38 0541 5F   LD E,A
39 0542 CD2406 CALL RBYTE
40 0545 DA7005 JP C,RTF6
41 0548 BD   CP L
42 0549 C26305 JP NZ,RTF5
43 054C 78   LD A,E
44 054D BC   CP H
45 054E C26305 JP NZ,RTF5
46 0551 AF   XOR A
47 0552      ;
48 0552 E1   POP HL
49 0553 C1   POP BC
50 0554 D1   POP DE
51 0555 CD0007 CALL MSTOP
52 0558 F5   PUSH AF
53 0559 3A9C11 LD A,(TIMF0)
54 055C FEF0 CP F0H
55 055E 2001 JP NZ,+3
56 0560 FB   EI
57 0561 F1   POP AF
58 0562 C9   RET
59 0563      ;
60 0563 15   RTP5:  DEC D

```

```

01 0564 2806      JR Z,RTF7
02 0566 62      LD H,D
03 0567 CDE20F CALL DAPCK
04 056A 189E      JR RTF1
05 056C 3E01      LD A,1
06 056E 1802      JR RTF9
07 0570 3E02      LD A,2
08 0572 37      RTF9:  SCF
09 0573 180D      JR RTF4
10 0575      ;
11 0575      ;
12 0575      ; VERIFY
13 0575      ;
14 0575      ; EXIT ACC =0 : OK CF=0
15 0575      ;   =1 : ER CF=1
16 0575      ;   =2 : BREAK CF=1
17 0575      ;
18 0575      ; TVRFY:  ENT
19 0575 F3      DJ
20 0576 D5      PUSH DE
21 0577 C5      PUSH BC
22 0578 E5      PUSH HL
23 0579 EDAB0211 LD BC,(SIZE)
24 057D 2A0411 LD HL,(DIADR)
25 0580 16D2      LD D,D2H
26 0582 1E53      LD E,53H
27 0584 78      LD A,B
28 0585 B1      OR C
29 0586 28CA      JR Z,RTF4
30 0588 CD1A07 CALL CKSUM
31 058B CDA306 CALL MOTOR
32 058E 38E0      JR C,RTF6
33 0590 CD5806 CALL TMRK
34 0593 DA7005 JP C,RTF6
35 0596 CD9805 CALL TVRFY
36 0599 18B7      JR RTF4
37 059B      ;
38 059B      ; DATA VERIFY
39 059B      ;
40 059B      ; BC=SIZE
41 059B      ; HL=DATA LOW ADR
42 059B      ; C=SUMDT=CHECK SUM
43 059B      ; EXIT ACC=0 : OK CF=0
44 059B      ;   =1 : ER CF=1
45 059B      ;   =2 : BREAK=1
46 059B      ;
47 059B      ; TVRFY:  PUSH DE
48 059B D5      PUSH BC
49 059C C5      PUSH HL
50 059D E5      LD H,2
51 059D E5      LD BC,KEYFB
52 059E 2602      LD DE,CSTR
53 05A0 0101E0 LD BC,KEYFB
54 05A3 1102E0 LD DE,CSTR
55 05A6 CD0106 CALL EDGE
56 05A9 DA7005 JP C,RTF6
57 05AC CDA209 CALL DLY3
58 05AF 1A      LD A,(DE)
59 05B0 E620 AND 20H
60 05B2 CA6605 JP Z,TVF2

```

```

: CALL DLY2*3

```

```

01 05B5 54      LD  D,H
02 05B6 E1      POP  HL
03 05B7 C1      POP  BC
04 05B8 C5      PUSH BC
05 05B9 E5      PUSH HL
06 05BA CD2406 CALL RBYTE
07 05BB DA7005 JP  C,RTF6
08 05BC BE      CP  (HL)
09 05CD C26C05 JP  NZ,RTF7
10 05CE 23      INC  HL
11 05CF 08      DEC  BC
12 05D0 78      LD  A,B
13 05D1 B1      OR  C
14 05D2 C2BA05 JP  NZ,TVF3
15 05D3 2A9911 LD  HL,(CSMDT)
16 05D4 CD2406 CALL RBYTE
17 05D5 BC      CP  H
18 05D6 2098   JR  NZ,RTF7
19 05D7 CD2406 CALL RBYTE
20 05D8 BD      CP  L
21 05D9 2092   JR  NZ,RTF7
22 05DA 15      DEC  D
23 05DB CA5105 JP  Z,RTF8
24 05DC 62      LD  H,D
25 05DD 18BF   JR  TVF1
26 05DE 00      PRINT '00'
27 05DF 00
28 05E0 00
29 05E1 11FC09 GETLD: LD  DE,00HSG
30 05E2 DF      RST  3
31 05E3 C30708 JP  AUTO2
32 05E4 00
33 05E5 00
34 05E6 00
35 05E7 00
36 05E8 00
37 05E9 217A11 ROLLUP: LD  HL,PBIAS
38 05EA 3A7F11 LD  A,(ROLEND)
39 05EB BE      CP  (HL)
40 05EC CAE50E JP  Z,TRSTR
41 05ED C3A90F JP  ROLLU1
42 05EE 00
43 05EF 00
44 05F0 00
45 05F1 00
46 05F2 00
47 05F3 F5      ?LOAD: PUSH AF
48 05F4 3ABE11 LD  A,(FLASH)
49 05F5 CDB10F CALL ?PONT
50 05F6 77      LD  (HL),A
51 05F7 F1      POP  AF
52 05F8 00
53 05F9 00
54 05FA 00
55 05FB 00
56 05FC 00
57 05FD 00
58 05FE 00
59 05FF 00
60 0600 00

01 0601      DE=CNSTR
02 0602      EXIT CF=0 : EDGE
03 0603      =1 : BREAK
04 0604
05 0605      EDGE1: LD  A,FOH
06 0606      LD  (KEYPA),A
07 0607      NOP
08 0608      EDGE1: LD  A,(BC)
09 0609      AND  81H
10 060A      JP  NZ,*5
11 060B      SCF
12 060C      RET
13 060D      LD  A,(DE)
14 060E      AND  20H
15 060F      NZ,EDG1
16 0610      LD  A,(BC)
17 0611      AND  81H
18 0612      JP  NZ,*5
19 0613      SCF
20 0614      RET
21 0615      LD  A,(DE)
22 0616      AND  20H
23 0617      NZ,EDG2
24 0618      LD  A,(BC)
25 0619      AND  81H
26 061A      JP  NZ,*5
27 061B      SCF
28 061C      RET
29 061D      LD  A,(DE)
30 061E      AND  20H
31 061F      NZ,EDG2
32 0620      LD  A,(BC)
33 0621      AND  81H
34 0622      JP  NZ,*5
35 0623      SCF
36 0624      RET
37 0625      ORG  0624H
38 0626      =1 : BYTE READ
39 0627      =1 : EXIT SUNDT=STORE
40 0628      CF=1 : BREAK
41 0629      CF=0 : DATA=ACC
42 062A      RBYTE: PUSH BC
43 062B      PUSH DE
44 062C      PUSH HL
45 062D      LD  HL,0800H
46 062E      LD  BC,KEYPB
47 062F      LD  DE,CSTR
48 0630      EDGE: CALL EDGE
49 0631      JP  C,REY3
50 0632      CALL DLY3
51 0633      LD  A,(DE)
52 0634      AND  20H
53 0635      JP  Z,REY2
54 0636      PUSH HL
55 0637      LD  HL,(SUMDT)
56 0638      INC  HL
57 0639      LD  (SUMDT),HL
58 063A      POP  HL
59 063B      SCF
60 063C      LD  A,L
61 063D      RLA
62 063E      LD  L,A
63 063F      DEC  H
64 0640      JP  NZ,RBY1
65 0641      CALL EDGE
66 0642      LD  A,L
67 0643      RBY2: LD  A,L
68 0644      RLA
69 0645      LD  L,A
70 0646      DEC  H
71 0647      JP  NZ,RBY1
72 0648      CALL EDGE
73 0649      LD  A,L
74 064A      RLA
75 064B      LD  L,A
76 064C      DEC  H
77 064D      JP  NZ,RBY1
78 064E      CALL EDGE
79 064F      LD  A,L
80 0650      RLA
81 0651      LD  L,A
82 0652      DEC  H
83 0653      JP  NZ,RBY1
84 0654      CALL EDGE
85 0655      LD  A,L
86 0656      RLA
87 0657      LD  L,A
88 0658      DEC  H
89 0659      JP  NZ,RBY1
90 065A      CALL EDGE
91 065B      LD  A,L
92 065C      RLA
93 065D      LD  L,A
94 065E      DEC  H
95 065F      JP  NZ,RBY1
96 0660      CALL EDGE
97 0661      LD  A,L
98 0662      RLA
99 0663      LD  L,A
100 0664      DEC  H
101 0665      JP  NZ,RBY1
102 0666      CALL EDGE
103 0667      LD  A,L
104 0668      RLA
105 0669      LD  L,A
106 066A      DEC  H
107 066B      JP  NZ,RBY1
108 066C      CALL EDGE
109 066D      LD  A,L
110 066E      RLA
111 066F      LD  L,A
112 0670      DEC  H
113 0671      JP  NZ,RBY1
114 0672      CALL EDGE
115 0673      LD  A,L
116 0674      RLA
117 0675      LD  L,A
118 0676      DEC  H
119 0677      JP  NZ,RBY1
120 0678      CALL EDGE
121 0679      LD  A,L
122 067A      RLA
123 067B      LD  L,A
124 067C      DEC  H
125 067D      JP  NZ,RBY1
126 067E      CALL EDGE
127 067F      LD  A,L
128 0680      RLA
129 0681      LD  L,A
130 0682      DEC  H
131 0683      JP  NZ,RBY1
132 0684      CALL EDGE
133 0685      LD  A,L
134 0686      RLA
135 0687      LD  L,A
136 0688      DEC  H
137 0689      JP  NZ,RBY1
138 068A      CALL EDGE
139 068B      LD  A,L
140 068C      RLA
141 068D      LD  L,A
142 068E      DEC  H
143 068F      JP  NZ,RBY1
144 0690      CALL EDGE
145 0691      LD  A,L
146 0692      RLA
147 0693      LD  L,A
148 0694      DEC  H
149 0695      JP  NZ,RBY1
150 0696      CALL EDGE
151 0697      LD  A,L
152 0698      RLA
153 0699      LD  L,A
154 069A      DEC  H
155 069B      JP  NZ,RBY1
156 069C      CALL EDGE
157 069D      LD  A,L
158 069E      RLA
159 069F      LD  L,A
160 06A0      DEC  H
161 06A1      JP  NZ,RBY1
162 06A2      CALL EDGE
163 06A3      LD  A,L
164 06A4      RLA
165 06A5      LD  L,A
166 06A6      DEC  H
167 06A7      JP  NZ,RBY1
168 06A8      CALL EDGE
169 06A9      LD  A,L
170 06AA      RLA
171 06AB      LD  L,A
172 06AC      DEC  H
173 06AD      JP  NZ,RBY1
174 06AE      CALL EDGE
175 06AF      LD  A,L
176 06B0      RLA
177 06B1      LD  L,A
178 06B2      DEC  H
179 06B3      JP  NZ,RBY1
180 06B4      CALL EDGE
181 06B5      LD  A,L
182 06B6      RLA
183 06B7      LD  L,A
184 06B8      DEC  H
185 06B9      JP  NZ,RBY1
186 06BA      CALL EDGE
187 06BB      LD  A,L
188 06BC      RLA
189 06BD      LD  L,A
190 06BE      DEC  H
191 06BF      JP  NZ,RBY1
192 06C0      CALL EDGE
193 06C1      LD  A,L
194 06C2      RLA
195 06C3      LD  L,A
196 06C4      DEC  H
197 06C5      JP  NZ,RBY1
198 06C6      CALL EDGE
199 06C7      LD  A,L
200 06C8      RLA
201 06C9      LD  L,A
202 06CA      DEC  H
203 06CB      JP  NZ,RBY1
204 06CC      CALL EDGE
205 06CD      LD  A,L
206 06CE      RLA
207 06CF      LD  L,A
208 06D0      DEC  H
209 06D1      JP  NZ,RBY1
210 06D2      CALL EDGE
211 06D3      LD  A,L
212 06D4      RLA
213 06D5      LD  L,A
214 06D6      DEC  H
215 06D7      JP  NZ,RBY1
216 06D8      CALL EDGE
217 06D9      LD  A,L
218 06DA      RLA
219 06DB      LD  L,A
220 06DC      DEC  H
221 06DD      JP  NZ,RBY1
222 06DE      CALL EDGE
223 06DF      LD  A,L
224 06E0      RLA
225 06E1      LD  L,A
226 06E2      DEC  H
227 06E3      JP  NZ,RBY1
228 06E4      CALL EDGE
229 06E5      LD  A,L
230 06E6      RLA
231 06E7      LD  L,A
232 06E8      DEC  H
233 06E9      JP  NZ,RBY1
234 06EA      CALL EDGE
235 06EB      LD  A,L
236 06EC      RLA
237 06ED      LD  L,A
238 06EE      DEC  H
239 06EF      JP  NZ,RBY1
240 06F0      CALL EDGE
241 06F1      LD  A,L
242 06F2      RLA
243 06F3      LD  L,A
244 06F4      DEC  H
245 06F5      JP  NZ,RBY1
246 06F6      CALL EDGE
247 06F7      LD  A,L
248 06F8      RLA
249 06F9      LD  L,A
250 06FA      DEC  H
251 06FB      JP  NZ,RBY1
252 06FC      CALL EDGE
253 06FD      LD  A,L
254 06FE      RLA
255 06FF      LD  L,A
256 0700      DEC  H
257 0701      JP  NZ,RBY1
258 0702      CALL EDGE
259 0703      LD  A,L
260 0704      RLA
261 0705      LD  L,A
262 0706      DEC  H
263 0707      JP  NZ,RBY1
264 0708      CALL EDGE
265 0709      LD  A,L
266 070A      RLA
267 070B      LD  L,A
268 070C      DEC  H
269 070D      JP  NZ,RBY1
270 070E      CALL EDGE
271 070F      LD  A,L
272 0710      RLA
273 0711      LD  L,A
274 0712      DEC  H
275 0713      JP  NZ,RBY1
276 0714      CALL EDGE
277 0715      LD  A,L
278 0716      RLA
279 0717      LD  L,A
280 0718      DEC  H
281 0719      JP  NZ,RBY1
282 071A      CALL EDGE
283 071B      LD  A,L
284 071C      RLA
285 071D      LD  L,A
286 071E      DEC  H
287 071F      JP  NZ,RBY1
288 0720      CALL EDGE
289 0721      LD  A,L
290 0722      RLA
291 0723      LD  L,A
292 0724      DEC  H
293 0725      JP  NZ,RBY1
294 0726      CALL EDGE
295 0727      LD  A,L
296 0728      RLA
297 0729      LD  L,A
298 072A      DEC  H
299 072B      JP  NZ,RBY1
300 072C      CALL EDGE
301 072D      LD  A,L
302 072E      RLA
303 072F      LD  L,A
304 0730      DEC  H
305 0731      JP  NZ,RBY1
306 0732      CALL EDGE
307 0733      LD  A,L
308 0734      RLA
309 0735      LD  L,A
310 0736      DEC  H
311 0737      JP  NZ,RBY1
312 0738      CALL EDGE
313 0739      LD  A,L
314 073A      RLA
315 073B      LD  L,A
316 073C      DEC  H
317 073D      JP  NZ,RBY1
318 073E      CALL EDGE
319 073F      LD  A,L
320 0740      RLA
321 0741      LD  L,A
322 0742      DEC  H
323 0743      JP  NZ,RBY1
324 0744      CALL EDGE
325 0745      LD  A,L
326 0746      RLA
327 0747      LD  L,A
328 0748      DEC  H
329 0749      JP  NZ,RBY1
330 074A      CALL EDGE
331 074B      LD  A,L
332 074C      RLA
333 074D      LD  L,A
334 074E      DEC  H
335 074F      JP  NZ,RBY1
336 0750      CALL EDGE
337 0751      LD  A,L
338 0752      RLA
339 0753      LD  L,A
340 0754      DEC  H
341 0755      JP  NZ,RBY1
342 0756      CALL EDGE
343 0757      LD  A,L
344 0758      RLA
345 0759      LD  L,A
346 075A      DEC  H
347 075B      JP  NZ,RBY1
348 075C      CALL EDGE
349 075D      LD  A,L
350 075E      RLA
351 075F      LD  L,A
352 0760      DEC  H
353 0761      JP  NZ,RBY1
354 0762      CALL EDGE
355 0763      LD  A,L
356 0764      RLA
357 0765      LD  L,A
358 0766      DEC  H
359 0767      JP  NZ,RBY1
360 0768      CALL EDGE
361 0769      LD  A,L
362 076A      RLA
363 076B      LD  L,A
364 076C      DEC  H
365 076D      JP  NZ,RBY1
366 076E      CALL EDGE
367 076F      LD  A,L
368 0770      RLA
369 0771      LD  L,A
370 0772      DEC  H
371 0773      JP  NZ,RBY1
372 0774      CALL EDGE
373 0775      LD  A,L
374 0776      RLA
375 0777      LD  L,A
376 0778      DEC  H
377 0779      JP  NZ,RBY1
378 077A      CALL EDGE
379 077B      LD  A,L
380 077C      RLA
381 077D      LD  L,A
382 077E      DEC  H
383 077F      JP  NZ,RBY1
384 0780      CALL EDGE
385 0781      LD  A,L
386 0782      RLA
387 0783      LD  L,A
388 0784      DEC  H
389 0785      JP  NZ,RBY1
390 0786      CALL EDGE
391 0787      LD  A,L
392 0788      RLA
393 0789      LD  L,A
394 078A      DEC  H
395 078B      JP  NZ,RBY1
396 078C      CALL EDGE
397 078D      LD  A,L
398 078E      RLA
399 078F      LD  L,A
400 0790      DEC  H
401 0791      JP  NZ,RBY1
402 0792      CALL EDGE
403 0793      LD  A,L
404 0794      RLA
405 0795      LD  L,A
406 0796      DEC  H
407 0797      JP  NZ,RBY1
408 0798      CALL EDGE
409 0799      LD  A,L
410 079A      RLA
411 079B      LD  L,A
412 079C      DEC  H
413 079D      JP  NZ,RBY1
414 079E      CALL EDGE
415 079F      LD  A,L
416 07A0      RLA
417 07A1      LD  L,A
418 07A2      DEC  H
419 07A3      JP  NZ,RBY1
420 07A4      CALL EDGE
421 07A5      LD  A,L
422 07A6      RLA
423 07A7      LD  L,A
424 07A8      DEC  H
425 07A9      JP  NZ,RBY1
426 07AA      CALL EDGE
427 07AB      LD  A,L
428 07AC      RLA
429 07AD      LD  L,A
430 07AE      DEC  H
431 07AF      JP  NZ,RBY1
432 07B0      CALL EDGE
433 07B1      LD  A,L
434 07B2      RLA
435 07B3      LD  L,A
436 07B4      DEC  H
437 07B5      JP  NZ,RBY1
438 07B6      CALL EDGE
439 07B7      LD  A,L
440 07B8      RLA
441 07B9      LD  L,A
442 07BA      DEC  H
443 07BB      JP  NZ,RBY1
444 07BC      CALL EDGE
445 07BD      LD  A,L
446 07BE      RLA
447 07BF      LD  L,A
448 07C0      DEC  H
449 07C1      JP  NZ,RBY1
450 07C2      CALL EDGE
451 07C3      LD  A,L
452 07C4      RLA
453 07C5      LD  L,A
454 07C6      DEC  H
455 07C7      JP  NZ,RBY1
456 07C8      CALL EDGE
457 07C9      LD  A,L
458 07CA      RLA
459 07CB      LD  L,A
460 07CC      DEC  H
461 07CD      JP  NZ,RBY1
462 07CE      CALL EDGE
463 07CF      LD  A,L
464 07D0      RLA
465 07D1      LD  L,A
466 07D2      DEC  H
467 07D3      JP  NZ,RBY1
468 07D4      CALL EDGE
469 07D5      LD  A,L
470 07D6      RLA
471 07D7      LD  L,A
472 07D8      DEC  H
473 07D9      JP  NZ,RBY1
474 07DA      CALL EDGE
475 07DB      LD  A,L
476 07DC      RLA
477 07DD      LD  L,A
478 07DE      DEC  H
479 07DF      JP  NZ,RBY1
480 07E0      CALL EDGE
481 07E1      LD  A,L
482 07E2      RLA
483 07E3      LD  L,A
484 07E4      DEC  H
485 07E5      JP  NZ,RBY1
486 07E6      CALL EDGE
487 07E7      LD  A,L
488 07E8      RLA
489 07E9      LD  L,A
490 07EA      DEC  H
491 07EB      JP  NZ,RBY1
492 07EC      CALL EDGE
493 07ED      LD  A,L
494 07EE      RLA
495 07EF      LD  L,A
496 07F0      DEC  H
497 07F1      JP  NZ,RBY1
498 07F2      CALL EDGE
499 07F3      LD  A,L
500 07F4      RLA
501 07F5      LD  L,A
502 07F6      DEC  H
503 07F7      JP  NZ,RBY1
504 07F8      CALL EDGE
505 07F9      LD  A,L
506 07FA      RLA
507 07FB      LD  L,A
508 07FC      DEC  H
509 07FD      JP  NZ,RBY1
510 07FE      CALL EDGE
511 07FF      LD  A,L
512 0800      RLA
513 0801      LD  L,A
514 0802      DEC  H
515 0803      JP  NZ,RBY1
516 0804      CALL EDGE
517 0805      LD  A,L
518 0806      RLA
519 0807      LD  L,A
520 0808      DEC  H
521 0809      JP  NZ,RBY1
522 080A      CALL EDGE
523 080B      LD  A,L
524 080C      RLA
525 080D      LD  L,A
526 080E      DEC  H
527 080F      JP  NZ,RBY1
528 0810      CALL EDGE
529 0811      LD  A,L
530 0812      RLA
531 0813      LD  L,A
532 0814      DEC  H
533 0815      JP  NZ,RBY1
534 0816      CALL EDGE
535 0817      LD  A,L
536 0818      RLA
537 0819      LD  L,A
538 081A      DEC  H
539 081B      JP  NZ,RBY1
540 081C      CALL EDGE
541 081D      LD  A,L
542 081E      RLA
543 081F      LD  L,A
544 0820      DEC  H
545 0821      JP  NZ,RBY1
546 0822      CALL EDGE
547 0823      LD  A,L
548 0824      RLA
549 0825      LD  L,A
550 0826      DEC  H
551 0827      JP  NZ,RBY1
552 0828      CALL EDGE
553 0829      LD  A,L
554 082A      RLA
555 082B      LD  L,A
556 082C      DEC  H
557 082D      JP  NZ,RBY1
558 082E      CALL EDGE
559 082F      LD  A,L
560 0830      RLA
561 0831      LD  L,A
562 0832      DEC  H
563 0833      JP  NZ,RBY1
564 0834      CALL EDGE
565 0835      LD  A,L
566 0836      RLA
567 0837      LD  L,A
568 0838      DEC  H
569 0839      JP  NZ,RBY1
570 083A      CALL EDGE
571 083B      LD  A,L
572 083C      RLA
573 083D      LD  L,A
574 083E      DEC  H
575 083F      JP  NZ,RBY1
576 0840      CALL EDGE
577 0841      LD  A,L
578 0842      RLA
579 0843      LD  L,A
580 0844      DEC  H
581 0845      JP  NZ,RBY1
582 0846      CALL EDGE
583 0847      LD  A,L
584 0848      RLA
585 0849      LD  L,A
586 084A      DEC  H
587 084B      JP  NZ,RBY1
588 084C      CALL EDGE
589 084D      LD  A,L
590 084E      RLA
591 084F      LD  L,A
592 0850      DEC  H
593 0851      JP  NZ,RBY1
594 0852      CALL EDGE
595 0853      LD  A,L
596 0854      RLA
597 0855      LD  L,A
598 0856      DEC  H
599 0857      JP  NZ,RBY1
600 0858      CALL EDGE
601 0859      LD  A,L
602 085A      RLA
603 085B      LD  L,A
604 085C      DEC  H
605 085D      JP  NZ,RBY1
606 085E      CALL EDGE
607 085F      LD  A,L
608 0860      RLA
609 0861      LD  L,A
610 0862      DEC  H
611 0863      JP  NZ,RBY1
612 0864      CALL EDGE
613 0865      LD  A,L
614 0866      RLA
615 0867      LD  L,A
616 0868      DEC  H
617 0869      JP  NZ,RBY1
618 086A      CALL EDGE
619 086B      LD  A,L
620 086C      RLA
621 086D      LD  L,A
622 086E      DEC  H
623 086F      JP  NZ,RBY1
624 0870      CALL EDGE
625 0871      LD  A,L
626 0872      RLA
627 0873      LD  L,A
628 0874      DEC  H
629 0875      JP  NZ,RBY1
630 0876      CALL EDGE
631 0877      LD  A,L
632 0878      RLA
633 0879      LD  L,A
634 087A      DEC  H
635 087B      JP  NZ,RBY1
636 087C      CALL EDGE
637 087D      LD  A,L
638 087E      RLA
639 087F      LD  L,A
640 0880      DEC  H
641 0881      JP  NZ,RBY1
642 0882      CALL EDGE
643 0883      LD  A,L
644 0884      RLA
645 0885      LD  L,A
646 0886      DEC  H
647 0887      JP  NZ,RBY1
648 0888      CALL EDGE
649 0889      LD  A,L
650 088A      RLA
651 088B      LD  L,A
652 088C      DEC  H
653 088D      JP  NZ,RBY1
654 088E      CALL EDGE
655 088F      LD  A,L
656 0890      RLA
657 0891      LD  L,A
658 0892      DEC  H
659 0893      JP  NZ,RBY1
660 0894      CALL EDGE
661 0895      LD  A,L
662 0896      RLA
663 0897      LD  L,A
664 0898      DEC  H
665 0899      JP  NZ,RBY1
666 089A      CALL EDGE
667 089B      LD  A,L
668 089C      RLA
669 089D      LD  L,A
670 089E      DEC  H
671 089F      JP  NZ,RBY1
672 08A0      CALL EDGE
673 08A1      LD  A,L
674 08A2      RLA
675 08A3      LD  L,A
676 08A4      DEC  H
677 08A5      JP  NZ,RBY1
678 08A6      CALL EDGE
679 08A7      LD  A,L
680 08A8      RLA
681 08A9      LD  L,A
682 08AA      DEC  H
683 08AB      JP  NZ,RBY1
684 08AC      CALL EDGE
685 08AD      LD  A,L
686 08AE      RLA
687 08AF      LD  L,A
688 08B0      DEC  H
689 08B1      JP  NZ,RBY1
690 08B2      CALL EDGE
691 08B3      LD  A,L
692 08B4      RLA
693 08B5      LD  L,A
694 08B6      DEC  H
695 08B7      JP  NZ,RBY1
696 08B8      CALL EDGE
697 08B9      LD  A,L
698 08BA      RLA
699 08BB      LD  L,A
700 08BC      DEC  H
701 08BD      JP  NZ,RBY1
702 08BE      CALL EDGE
703 08BF      LD  A,L
704 08C0      RLA
705 08C1      LD  L,A
706 08C2      DEC  H
707 08C3      JP  NZ,RBY1
708 08C4      CALL EDGE
709 08C5      LD  A,L
710 08C6      RLA
711 08C7      LD  L,A
712 08C8      DEC  H
713 08C9      JP  NZ,RBY1
714 08CA      CALL EDGE
715 08CB      LD  A,L
716 08CC      RLA
717 08CD      LD  L,A
718 08CE      DEC  H
719 08CF      JP  NZ,RBY1
720 08D0      CALL EDGE
721 08D1      LD  A,L
722 08D2      RLA
723 08D3      LD  L,A
724 08D4      DEC  H
725 08D5      JP  NZ,RBY1
726 08D6      CALL EDGE
727 08D7      LD  A,L
728 08D8      RLA
729 08D9      LD  L,A
730 08DA      DEC  H
731 08DB      JP  NZ,RBY1
732 08DC      CALL EDGE
733 08DD      LD  A,L
734 08DE      RLA
735 08DF      LD  L,A
736 08E0      DEC  H
737 08E1      JP  NZ,RBY1
738 08E2      CALL EDGE
739 08E3      LD  A,L
740 08E4      RLA
741 08E5      LD  L,A
742 08E6      DEC  H
743 08E7      JP  NZ,RBY1
744 08E8      CALL EDGE
745 08E9      LD  A,L
746 08EA      RLA
747 08EB      LD  L,A
748 08EC      DEC  H
749 08ED      JP  NZ,RBY1
750 08EE      CALL EDGE
751 08EF      LD  A,L
752 08F0      RLA
753 08F1      LD  L,A
754 08F2      DEC  H
755 08F3      JP  NZ,RBY1
756 08F4      CALL EDGE
757 08F5      LD  A,L
758 08F6      RLA
759 08F7      LD  L,A
760 08F8      DEC  H
761 08F9      JP  NZ,RBY1
762 08FA      CALL EDGE
763 08FB      LD  A,L
764 08FC      RLA
765 08FD      LD  L,A
766 08FE      DEC  H
767 08FF      JP  NZ,RBY1
768 0900      CALL EDGE
769 0901      LD  A,L
770 0902      RLA
771 0903      LD  L,A
772 0904      DEC  H
773 0905      JP  NZ,RBY1
774 0906      CALL EDGE
775 0907      LD  A,L
776 0908      RLA
777 0909      LD  L,A
778 090A      DEC  H
779 090B      JP  NZ,RBY1
780 090C      CALL EDGE
781 090D      LD  A,L
782 090E      RLA
783 090F      LD  L,A
784 0910      DEC  H
785 0911      JP  NZ,RBY1
786 0912      CALL EDGE
787 0913      LD  A,L
788 0914      RLA
789 0915      LD  L,A
790 0916      DEC  H
791 0917      JP  NZ,RBY1
792 0918      CALL EDGE
793 0919      LD  A,L
794 091A      RLA
795 091B      LD  L,A
796 091C      DEC  H
797 091D      JP  NZ,RBY1
798 091E      CALL EDGE
799 091F      LD  A,L
800 0920      RLA
801 0921      LD  L,A
802 0922      DEC  H
803 0923      JP  NZ,RBY1
804 0924      CALL EDGE
805 0925      LD  A,L
806 0926      RLA
807 0927      LD  L,A
808 0928      DEC  H
809 0929      JP  NZ,RBY1
810 092A      CALL EDGE
811 092B      LD  A,L
812 092C      RLA
813 092D      LD  L,A
814 092E      DEC  H
815 092F      JP  NZ,RBY1
816 0930      CALL EDGE
817 0931      LD  A,L
818 0932      RLA
819 0933      LD  L,A
820 0934      DEC  H
821 0935      JP  NZ,RBY1
822 0936      CALL EDGE
823 0937      LD  A,L
824 0938      RLA
825 0939      LD  L,A
826 093A      DEC  H
827 093B      JP  NZ,RBY1
828 093C      CALL EDGE
829 093D      LD  A,L
830 093E      RLA

```



```

01 0705 3A02E0      MST1: LD A,(CSTR)
02 0708 E610      AND 10H
03 070A 280B      JR Z,MST3
04 070C 3E04      LD A,06H
05 070E 3203E0    LD (CSTPT),A
06 0711 3C      INC A
07 0712 3203E0    LD (CSTPT),A
08 0715 10EE      DJNZ MST1
09 0717 C3E60E    JP 2RSTR1
10 071A          1
11 071A          1
12 071A          1
13 071A          1
14 071A          1
15 071A          1
16 071A          1
17 071A          1
18 071A          1
19 071A          1
20 071A C5      CKSUM: PUSH BC
21 071A D5      PUSH DE
22 071B D5      PUSH HL
23 071C E5      LD DE,0
24 071D 110000    LD A,B
25 0720 78      OR C
26 0721 B1      JR NZ,CKS2
27 0722 200B      EX DE,HL
28 0724 EB      LD (SUMDT),HL
29 0725 229711   LD (CSMDT),HL
30 0728 229911   LD (CSMDT),HL
31 072B E1      POP HL
32 072C D1      POP DE
33 072D C1      POP BC
34 072E C9      RET
35 072F 7E      CKS2: LD A,(HL)
36 0730 C5      PUSH BC
37 0731 0608      LD B,*8
38 0733 07      RLCA
39 0734 3001      JR NC,*3
40 0736 13      INC DE
41 0737 10FA      DJNZ CKS3
42 0739 C1      POP BC
43 073A 23      INC HL
44 073B 0B      DEC BC
45 073C 18E2      JR CKS1
46 073E          1
47 073E          1
48 073E          1
49 073E 07      SNEP PART2
50 073F 07      SNEP4: RLCA
51 0740 07      RLCA
52 0741 4F      LD C,A
53 0742 7B      LD A,E
54 0743 25      DEC H
55 0744 0F      RRCA
56 0745 30FC      JR NC,-2
57 0747 7C      LD A,H
58 0748 81      ADD A,C
59 0749 4F      LD C,A
60 074A C3740A    JP SNEP01

01 074D          1
02 074D          1
03 074D          1
04 074D          1
05 074D 2103E0    LD HL,KEYPF
06 0750 368A      LD (HL),8AH
07 0752 3607      LD (HL),07H
08 0754 3605      LD (HL),05H
09 0756 3601      LD (HL),01H
10 0758 C9      VGOFF: RET
11 0759          1
12 0759          1
13 0759          1
14 0759          1
15 0759          1
16 0759          1
17 0759          1
18 0759          1
19 0759 3E0E      DLY1: LD A,14
20 075B 3D      DEC A
21 075C C25B07    JP NZ,-1
22 075F C9      RET
23 0760          1
24 0760          1
25 0760          1
26 0760 3E0D      DLY2: LD A,13
27 0762 3D      DEC A
28 0763 C26207    JP NZ,-1
29 0766 C9      RET
30 0767          1
31 0767          1
32 0767          1
33 0767          1
34 0767          1
35 0767 C5      WBYTE: PUSH BC
36 0768 0608      LD B,*8
37 076A CD570D    CALL LONG
38 076D 07      RLCA
39 076E DC570D    CALL C,LONG
40 0771 043E0D    CALL NC,SHORT
41 0774 05      DEC B
42 0775 C26D07    JP NZ,WBY1
43 0778 C1      POP BC
44 0779 C9      RET
45 077A          1
46 077A          1
47 077A          1
48 077A          1
49 077A          1
50 077A          1
51 077A          1
52 077A C5      GAP: PUSH BC
53 077B 05      PUSH DE
54 077C 7B      LD A,E
55 077D 11F055    LD BC,55F0H
56 0780 112828    LD DE,2828H
57 0783 FECC      CP CCH
58 0785 CABE07    JP Z,GAP1
59 0788 01F82A    LD BC,ZAF8H
60 078B 111414    LD DE,1414H

```

```

01 078E CD3E0D      GAPI:      CALL  SHORT
02 0791 0B         DEC      BC
03 0792 78         LD      A,B
04 0793 B1         OR      C
05 0794 20F8      JR      NZ,-6
06 0796 CD570D      GAPI:      CALL  LONG
07 0799 15         DEC      D
08 079A 20FA      JR      NZ,-4
09 079C CD3E0D      GAPI:      CALL  SHORT
10 079F 1D         DEC      E
11 07A0 20FA      JR      NZ,-4
12 07A2 CD570D      GAPI:      CALL  LONG
13 07A5 D1         POP      DE
14 07A6 C1         POP      BC
15 07A7 C9         RET
16 07A8 P
17 07A8 P          KEYPA:  EQU  E000H
18 07A8 P          KEYPB:  EQU  E001H
19 07A8 P          KEYPC:  EQU  E002H
20 07A8 P          KEYPD:  EQU  E003H
21 07A8 P          CSTR:   EQU  E003H
22 07A8 P          CSIPT:  EQU  E003H
23 07A8 P          CONT0:  EQU  E004H
24 07A8 P          CONT1:  EQU  E005H
25 07A8 P          CONT2:  EQU  E006H
26 07A8 P          CONF:   EQU  E007H
27 07A8 P          SUND0:  EQU  E008H
28 07A8 P          TEMP:   EQU  E008H
29 07A8 P          SKP:   EQU  H

01 07A8          1
02 07A8          1
03 07A8          1
04 07A8          1
05 07A8          1
06 07A8          1
07 07A8          1
08 07A8          1
09 07A8          1
10 07A8 F5      1
11 07A9 C5      1
12 07AA E5      1
13 07AB D5      1
14 07AC CD6302  1
15 07AD CDCA08  1
16 07AE FECD    1
17 07AF 28F9    1
18 07B0 CDCA08  1
19 07B1 CDFE09  1
20 07B2 28F8    1
21 07B3 F5      1
22 07B4 AF      1
23 07B5 329311  1
24 07B6 C1      1
25 07B7 47      1
26 07B8 CDF505  1
27 07B9 3A9D11  1
28 07BA B7      1
29 07BB CCE502  1
30 07BC F8      1
31 07BD FEE7    1
32 07BE CAE105  1
33 07BF FEE6    1
34 07C0 2868    1
35 07C1 FEEE    1
36 07C2 2861    1
37 07C3 FEE5    1
38 07C4 2876    1
39 07C5 FEE0    1
40 07C6 CAB808  1
41 07C7 30CE    1
42 07C8 EAF0    1
43 07C9 FECD    1
44 07CA 2015    1
45 07CB 78      1
46 07CC FECD    1
47 07CD 2868    1
48 07CE FECD    1
49 07CF CAE008  1
50 07D0 FECD    1
51 07D1 303D    1
52 07D2 3A7011  1
53 07D3 B7      1
54 07D4 78      1
55 07D5 2836    1
56 07D6 78      1
57 07D7 CD650D  1
58 07D8 CD6302  1
59 07D9 3A9311  1
60 07DA B7      1

GETL1: ENT      AF
        PUSH BC
        PUSH HL
        PUSH DE
        CALL ?SAVE
        CP      CBH
        JR      Z,-5
        CALL ?KEY
        CALL ?FLAS
        JR      Z,-6
        PUSH AF
        XOR      A
        LD      (STROF),A
        POP      AF
        LD      B,A
        CALL ?LOAD
        LD      A,(SHRK)
        OR      A
        CALL Z,?BEL
        LD      A,B
        CP      E7H
        JP      Z,GETLD
        CP      E6H
        JR      Z,CHOPK
        CP      EEH
        JR      Z,CHGPA
        CP      E5H
        JR      Z,DHT
        CP      E0H
        JR      Z,LOCK
        JR      NC,GETL1
        AND      F0H
        CP      C0H
        JR      NZ,GETL2
        LD      A,B
        CP      CDH
        JR      Z,GETL3
        CP      CBH
        JR      Z,GETLC
        CP      C7H
        JR      NC,GETL5
        LD      A,(KANAF)
        OR      A
        LD      A,B
        JR      Z,GETL5
        LD      A,B
        CALL ?DSP
        CALL ?SAVE
        LD      A,(STROF)
        OR      A
        1 BELL WORK
        1 00
        1 ? PAGE MODE K
        1 ? PAGE MODE A
        1 ? CODE=SAH
        1 CR
        1 BREAK
        1 CRT EDITION

```

```

01 080E 2014          JR  NZ,AUT05
02 0810 1E14          LD  E,20
03 0812 CDA08        CALL 7KEY
04 0815 20AD        JR  NZ,AUT03
05 0817 CDF109       CALL AUTCK
06 081A 389A        JR  C,GETL1
07 081C 1D          DEC  E
08 081D 20F3        JR  NZ,AUTOL*2
09 081F 3E01        LD  A,1
10 0821 329311       LD  (STRGF),A
11 0824 CDA70D       CALL DLY12
12 0827 CDA70D       CALL DLY12
13 082A CDA08        CALL 7KEY
14 082D CDF09        CALL 7FLAS
15 0830 208C        JR  NZ,AUT03-6
16 0832 CDF109       CALL AUTCK
17 0835 38E3        JR  C,GETL11
18 0837 188C        JR  AUT03*1
19 0839 CDDC0D       CALL 7DPCT
20 083C 18C9        JR  AUT02
21 083E
22 083E
23 083E
24 083E
25 083E AF          CHGPA: XOR  A
26 083F 1802        CHGPK: JR  *4
27 0841 3EFF        LD  A,FFH
28 0843 329111       LD  (SPAGE),A
29 0846 3EC6        LD  A,C6H
30 0848 CDDC0D       CALL 7DPCT
31 084B C3AC07       CHGPI: JP  GETL0
32 084E
33 084E
34 084E EI          GETLC: POP  HL
35 084E EI          PUSH HL
36 084F E5          LD  (HL),1BH
37 0850 361B        INC  HL
38 0852 23         LD  (HL),0DH
39 0853 360D        LD  (HL),0DH
40 0855 1829        JR  GETLR
41 0857
42 0857
43 0857
44 0857 065A        DMT:  LD  B,5AH
45 0859 18A8        JR  GETL2
46 085B
47 085B
48 085B
49 085B CD280A       GETL3: CALL 7MANG
50 085E 0628        LD  B,40
51 0860 3024        JR  NC,GETLA
52 0862 25         DEC  H
53 0863 0650        GETLB: LD  B,80
54 0865 2E00        GETL6: LD  L,0
55 0867 CDB40F       CALL 7PNT1
56 086A D1          POP  DE
57 086B D5          PUSH DE
58 086C 7E         LD  A,(HL)
59 086D CDBE0B       CALL 7DACN
60 0870 12         LD  (DE),A

01 0871 23          INC  HL
02 0872 CB9C        RES  3,H
03 0874 13          INC  DE
04 0875 10F5        DJNZ -9
05 0877 EB          EX  DE,HL
06 0878 360D        LD  (HL),0DH
07 087A 2B          DEC  HL
08 087B 7E         LD  A,(HL)
09 087C FE20        CP  20H
10 087E 28F8        JR  Z,-6
11 0880 CDB009       GETLR: CALL 7LTNL
12 0883 C3D503       JP  GETLL
13 0886
14 0886 OF          GETLA: RRCA
15 0887 30DC        JR  NC,GETL6
16 0889 18D8        JR  GETLB
17 088B
18 088B
19 088B
20 088B
21 088B
22 088B 218F11       LOCK: LD  HL,SFTLK
23 088E 7E         LD  A,(HL)
24 088F 2F         CPL
25 0890 77         LD  (HL),A
26 0891 1888        JR  CHGPI
27 0893
28 0893
29 0893
30 0893
31 0893
32 0893
33 0893
34 0893
35 0893
36 0893 F5         7MSO1: ENT  ENT
37 0894 C5         PUSH BC
38 0895 D5         PUSH DE
39 0896 1A         LD  A,(DE)
40 0897 FE0D        CP  0DH
41 0899 280C        JR  Z,MSOX2
42 089B CDB909       CALL 7FRNT
43 089E 13         INC  DE
44 089F 18F5        JR  MSO1
45 08A1
46 08A1
47 08A1 F5         7MSOX: ENT  ENT
48 08A2 C5         PUSH BC
49 08A3 D5         PUSH DE
50 08A4 1A         LD  A,(DE)
51 08A5 FE0D        CP  0DH
52 08A7 CAE60E       7MSOX2: JP  Z,7RSTR1
53 08AA CDB90B       CALL 7ADCN
54 08AD CDB6C09      CALL 7PRNT3
55 08B0 13         INC  DE
56 08B1 18F1        JR  MSOX1
57 08B3
58 08B3
59 08B3
60 08B3
GETLA: RRCA
JR  NC,GETL6
JR  GETLB

: SHIFT LOCK

: MESSAGE PRINT 1
: DE = PRINT DATA LOW ADR.
: (END = CR)

: CR
: ALL PRINT MSG

: INPUT NEHKEY

: CLR CODE

: STORE TOP ADR.

```

```

01 0883      ; IF NO KEY  ACC=00
02 0883      ;
03 0883      ?GET: ENT  BC
04 0883 C5  PUSH BC
05 0884 E5  PUSH HL
06 0885 0609 LD  B,9
07 0887 216511 LD  HL,SMPH+1
08 088A CDD80F CALL 7CLRFF
09 088D E1  POP  BC
10 088E C1  POP  BC
11 088F CDCA08 CALL 7KEY
12 08C2 D6F0 SUB  F0H
13 08C4 C8  RET  Z
14 08C5 C6F0 ADD  A,F0H
15 08C7 C3CE0B JP   7DACN
16 08CA      ;
17 08CA      ;
18 08CA      ORG 08CAH 7KEY 124
19 08CA      ;
20 08CA      ;
21 08CA      ; IKEY INPUT
22 08CA      ; IN  B = KEY MODE(SHIFT,CTRL,GRAPH)
23 08CA      ; C=KEY DATA (COLUMN & ROW)
24 08CA      ; EXIT ACC=DISPLAY CODE
25 08CA      ; IF NO KEY  ACC=F0H
26 08CB C5  PUSH BC
27 08CC D5  PUSH DE
28 08CD CD500A CALL 7SWEP
29 08DD 78  LD  A,B
30 08E1 07  RLC  A
31 08E2 381E JR  C,7XY2
32 08E4 3EF0 LD  A,F0H
33 08E6 5F  LD  E,A
34 08D7 CDF109 CALL  AUTCK
35 08DA 3A4E11 LD  A,(KDATA)
36 08DD 87  OR  A
37 08DE 280A JR  Z,7XY11
38 08E0 CDA70D CALL  DLY12
39 08E3 CD500A CALL 7SWEP
40 08E6 78  LD  A,B
41 08E7 07  RLC  A
42 08E8 3808 JR  C,7XY2
43 08EA 7B  LD  A,E
44 08EB FEF0 CP  F0H
45 08ED 2050 JR  NZ,7XY9
46 08EF C39F06 JP  RET3
47 08F2 07  RLC  A
48 08F3 07  RLC  A
49 08F4 07  RLC  A
50 08F5 DAE706 JP  C,7GRP
51 08F8 07  RLC  A
52 08F9 DAC50B JP  C,7BRK
53 08FC 2600 LD  H,0
54 08FE 69  LD  L,C
55 08FF 79  LD  A,C
56 0900 FE38 CP  3BH
57 0902 3026 JR  NC,7XY6
58 0904 3A7011 LD  A,(KANAF)
59 0907 87  OR  A
60 0908 78  LD  A,B

```

```

01 0909 07  RLC  A
02 090A 2023 JR  NZ,7KY4
03 090C 47  LD  B,A
04 090D 3A8F11 LD  A,(SFTLK)
05 0910 87  OR  A
06 0911 78  LD  A,B
07 0912 2803 JR  Z,75
08 0914 17  RLA
09 0915 3F  CCF
10 0916 1F  RRA
11 0917 17  RLA
12 0918 17  RLA
13 0919 3007 JR  NC,7KY3
14 091B 11DA0C LD  DE,KTBLC
15 091E 19  HL,DE
16 091F 7E  LD  A,(HL)
17 0920 18B4 JR  7KY1
18 0922 1F  RRA
19 0923 3005 JR  NC,7KY6
20 0925 11320C LD  DE,KTBLB
21 0928 18F4 JR  7KY5
22 092A 11EA08 LD  DE,KTBL
23 092D 18EF JR  7KY5
24 092F 07  RLC  A
25 0930 3808 JR  C,7XY7
26 0932 07  RLC  A
27 0933 38E6 JR  C,7KY5-3
28 0935 116A0C LD  DE,KTBL0
29 0938 18E4 JR  7KY5
30 093A 11A20C LD  DE,KTBL0S
31 093D 18DF JR  7KY5
32 093F 07  RLC  A
33 093F CDF109 CALL  AUTCK
34 0942 3C  INC  A
35 0943 7B  LD  A,E
36 0944 18A9 JR  7KY10
37 0946      ;
38 0946      ;
39 0946      ; ORG 0946H
40 0946      ;
41 0946      ;
42 0946      ;
43 0946      ; PRINT ROUTINE
44 0946      ; I CHA.
45 0946      ; C=ASCII DATA
46 0946      ;
47 0946 79  LD  A,C
48 0947 CDB90B CALL 7ADCN
49 094A 4F  LD  C,A
50 094B E6F0 AND  F0H
51 094D FEF0 CP  F0H
52 094F C8  RET  Z
53 0950 FEF0 CP  F0H
54 0952 79  LD  A,C
55 0953 2017 JR  NZ,7PRINT3
56 0955 CDDC0D CALL 7DPCT
57 0958 FEC3 CP  C3H
58 095A 2813 JR  Z,7PRINT4
59 095C FEC5 CP  C5H
60 095E 2807 JR  Z,7PRINT2

```

```

?KEYS:
?KY3:
?KY2:
?KY6:
?KY4:
?KY7:
?KY9:
?KY10:
?PRT:
PRNT5:

```

```

: CONTROL ON
: DISPLAY CODE
: CTRL OFF
: SHIFT ON
: NORMAL KEY
: JUMP CTRL
: GRAPH MODE
: GRAPH MODE & SHIFT ON
: 7 FLG CLR
: 7PRT 109
: ILLEGAL DATA
: HOME

```

```

01 0940 FECD          CP CDH          : CR
02 0942 2803        JR Z,FRNTZ
03 0944 FEC6        CP C6H          : CLR
04 0946 C0          RET N2
05 0947 AF          PRINT2: XOR A
06 0948 329411      LD (DPRT),A
07 0949 C9          RET
08 094C CDB500      PRINT3: CALL ?0SP
09 094F 3A9411      PRINT4: LD A,(DPRT)
10 0972 3C          INC A
11 0973 FE50        CP *80
12 0975 3802        JR C,*4
13 0977 D650        SUB *80
14 0979 18ED        JR PRINT2+1
15 097B
16 097E 3A9411      ?NL: ENT LD A,(DPRT)
17 097F B7          OR A
18 097E C8          RET Z
19 097F C8
20 0980
21 0980
22 0980
23 0980
24 0980 3ECD        ?NL: ENT LD A,CDH : CR
25 0980 38D1        LD A,CDH
26 0982 18D1        JR PRINTS
27 0984
28 0984
29 0984
30 0984
31 0984 C0C000      ?PRIT: ENT CALL PRINTS
32 0984 3A9411      LD A,(DPRT)
33 0987 87          OR A
34 0988 C8          RET Z
35 098B D60A        SUB *10
36 098E 38F4        JR C,-10
37 0990 20FA        JR N2,-4
38 0992 C9          RET
39 0993
40 0993
41 0993
42 0993
43 0993 3E20        ?PRTS: ENT LD A,20H
44 0993
45 0995
46 0995
47 0995
48 0995
49 0995 FE0D        ?PRNT: ENT CP ODH
50 0997 28E7        JR Z,7LNL
51 0999 C5          PUSH BC
52 099A 4F          LD C,A
53 099B 47          LD B,A
54 099C CD4609      CALL ?FRT
55 099F 78          LD A,B
56 09A0 C1          POP BC
57 09A1 C9          RET
58 09A2
59 09A2
60 09A2
01 09A2          1
02 09A2          1
03 09A2          1
04 09A2 ED44      DLY3: NEG DLY2*3
05 09A4 ED44      NEG
06 09A6 3E2A      LD A,42
07 09A8 C3E207     JP DLY2*2
08 09A9
09 09AB
10 09AB
11 09AB 81        ONP3: ADD A,C
12 09AC 10FD       DJNZ -1
13 09AE C1         POP BC
14 09AF 4F        LD C,A
15 09B0 AF        XOR A
16 09B1 C9        RET
17 09B2
18 09B2
19 09B2
20 09B3          ORG 09B3H 177KEY 76
21 09B3
22 09B3          KEY ROAD SEARCH 1
23 09B3          & DISPLAY CODE CONV. 1
24 09B3
25 09B3          EXIT A = DISPLAY CODE
26 09B3          WITH CURSOR DISPLAY
27 09B3
28 09B3 C5        ??KEY: PUSH BC
29 09B4 D5        PUSH DE
30 09B5 E5        PUSH HL
31 09B6 CD6302     CALL ?SAVE
32 09B9 CDCA08     CALL ?KEY
33 09BC CDFE09     CALL ?FLAS
34 09BF 28F8       JR Z,KSL2
35 09C1 CDF505     CALL ?LOAD
36 09C4 C39F06     JP RET3
37 09C7
38 09C7
39 09C7
40 09C7
41 09C7
42 09C7 D5        PAGE: PUSH DE
43 09C8 E5        PUSH HL
44 09C9 217A11     LD HL,FRIAS
45 09CC AF        XOR A
46 09CD ED6F       RLD
47 09CF 57        LD D,A
48 09D0 5E        LD E,(HL)
49 09D1 ED67       RRD
50 09D3 AF        XOR A
51 09D4 C81A       RR D
52 09D6 C81B       RR E
53 09D8 2100D0     LD HL,SCRN
54 09DB 19        ADD HL,DE
55 09DC 227D11     LD (PAGE*P),HL
56 09DF E1        POP HL
57 09E0 D1        POP DE
58 09E1 C9        RET
59 09E2
60 09E2

```

```

01 09E2      1      CLEAR 2
02 09E2      1
03 09E2 AF    #CLR08: XOR   A
04 09E3 010008 #CLR8: LD   BC,0800H
05 09E6 05    CLEAR: PUSH DE
06 09E7 57    LD   D,A
07 09E8 72    CLEAR1: LD  (HL),D
08 09E9 23    INC  HL
09 09EA 08    DEC  BC
10 09EB 78    LD   A,B
11 09EC B1    OR   C
12 09ED 20F9  JR   NZ,CLEAR1
13 09EF D1    POP  DE
14 09F0 C9    RET
15 09F1      1
16 09F1      1
17 09F1      1      AUTO REPEAT CHECK
18 09F1      1
19 09F1 216E11 AUTCK: LD   HL,KDATH
20 09F4 7E    LD   A,(HL)
21 09F5 23    INC  HL
22 09F6 56    LD   D,(HL)
23 09F7 77    LD   (HL),A
24 09F8 92    SUB  D
25 09F9 D0    RET  NC
26 09FA 34    INC  (HL)
27 09FB C9    RET
28 09FC      1
29 09FC      1      00 MESSAGE
30 09FC      1
31 09FC 3030  00MSG: DEFW 3030H
32 09FE 0D    DEFB 0DH
33 09FF      1
34 09FF      1
35 09FF      1
36 09FF      1      ORG 09FFH      1?FLAS 81
37 09FF      1
38 09FF      1
39 09FF      1
40 09FF      1      FLASHING 1
41 09FF      1
42 09FF F5    ?FLAS: PUSH AF
43 0A00 E5    PUSH HL
44 0A01 3A02E0 LD   A,(KEYPC)
45 0A04 07    RLCA
46 0A05 07    RLCA
47 0A06 380A  JR   C,FLAS1
48 0A08 3A9211 LD   A,(FLSDT)
49 0A0B CDB10F FLAS2: CALL ?PONT
50 0A0E 77    LD   (HL),A
51 0A0F E1    FLAS3: POP  HL
52 0A10 F1    POP  AF
53 0A11 C9    RET
54 0A12 3A8E11 FLAS1: LD   A,(FLASH)
55 0A15 18F4  JR   FLAS2
56 0A17      1
57 0A17      1      REVERSE CRT
58 0A17      1
59 0A17 219011 REV:  LD   HL,REVFLD
60 0A1A 7E    LD   A,(HL)
    
```

```

01 0A1B B7    OR   A
02 0A1C 2F    CPL
03 0A1D 77    LD   (HL),A
04 0A1E 2805  JR   Z,REV1
05 0A20 3A14E0 LD   A,(E014H)      1 RESET
06 0A23 1803  JR   +5
07 0A25 3A15E0 REV1: LD  A,(E015H)      1 SET
08 0A28 C3E50E JP   ?RSTR
09 0A2B      1
10 0A2B      1
11 0A2B      1      CRT MANAGEMENT
12 0A2B      1      EXIT HL: DSPXY
13 0A2B      1      DE: MANG ADR. (ON DSPXY)
14 0A2B      1      B: MANG BIT POSITION
15 0A2B      1      A: MANG DATA
16 0A2B      1      CY: MANG=1
17 0A2B      1
18 0A2B 217311 ,MANG: LD   HL,MANG
19 0A2E 3A9111 LD   A,(SPAGE)
20 0A31 B7    OR   A
21 0A32 C2A603 JP   NZ, MANG2      1 PAGE MODE1
22 0A35 3A7C11 LD   A,(MOPNT)
23 0A38 0608  SUB  08H
24 0A3A 23    INC  HL
25 0A3B 30FB  JR   NC,-3
26 0A3D C608  ADD  A,08H
27 0A3F 4E    LD   C,(HL)
28 0A40 2B    DEC  HL
29 0A41 47    LD   B,A
30 0A42 04    INC  B
31 0A43 C5    PUSH BC
32 0A44 7E    LD   A,(HL)
33 0A45 CB19  RR   C
34 0A47 1F    RRA
35 0A48 10FB  DJNZ -3
36 0A4A C1    POP  BC
37 0A4B EB    EX  DE,HL
38 0A4C 2A7111 ,MANG: LD  HL,(DSPXY)
39 0A4F C9    RET
40 0A50      1
41 0A50      1
42 0A50      1
43 0A50      1
44 0A50      1      ORG 0A50H      1 ?SWEP #106#111
45 0A50      1
46 0A50      1
47 0A50      1      KEY BOARD SWEEP
48 0A50      1
49 0A50      1      EXIT B,D7=0 NO DATA
50 0A50      1      =1 DATA
51 0A50      1      D6=0 SHIFT OFF
52 0A50      1      -1 SHIFT ON
53 0A50      1      C = ROW & COLOUMN
54 0A50      1
55 0A50 D5    ?SWEP: PUSH DE
56 0A51 E5    PUSH HL
57 0A52 AF    XOR  A
58 0A53 326E11 LD   (KDATH),A      1 RESET KEY COUNTER
59 0A56 06FA  LD   B,FAH
60 0A58 57    LD   D,A
    
```

```

01 0A59 CD110D      CALL 7BRK
02 0A5C 2004      JR NZ,SWEP6
03 0A5E 1688      LD D,8BH      : BREAK ON
04 0A60 1828      JR SWEP9
05 0A62 216411    SWEP6: LD HL,SWPW
06 0A65 E5      PUSH HL
07 0A66 3026      JR NC,SWEP11
08 0A68 57      LD D,A
09 0A69 E660      AND 60H      : SHIFT & CTRL =NO DATA
10 0A6B 2021      JR NZ,SWEP11
11 0A6D 7A      LD A,D      : GRAPH CHECK
12 0A6E AE      XOR (HL)
13 0A6F CB67      BIT 4,A
14 0A71 72      LD (HL),D
15 0A72 2802      JR Z,SWEP0
16 0A74 CBFA      SWEP01: SET 7,D
17 0A76 05      SWEP0: DEC B
18 0A77 E1      POP HL      : SWEP COLOUMN WORK
19 0A78 23      INC HL
20 0A79 78      LD A,B
21 0A7A 3200E0    LD (KEYPA),A
22 0A7D FEF0      CP F0H
23 0A7F 2011      JR NZ,SWEP3
24 0A81 7E      LD A,(HL)   : KDATA
25 0A82 FE03      CP 03H
26 0A84 3804      JR C,SWEP9
27 0A86 3600      LD (HL),0
28 0A88 CBBA      RES 7,D      : RESET DATA IN
29 0A8A 42      LD B,D
30 0A8B E1      POP HL
31 0A8C D1      POP DE
32 0A8D C9      RET
33 0A8E
34 0A8E 3600      SWEP11: LD (HL),0
35 0A90 18E4      JR SWEP0
36 0A92 3A01E0    SWEP3: LD A,(KEYPB)
37 0A95 5F      LD E,A
38 0A96 2F      CPL
39 0A97 A6      AND (HL)
40 0A98 73      LD (HL),E
41 0A99 E5      PUSH HL
42 0A9A 216E11    LD HL,KDATA
43 0A9D C5      PUSH BC
44 0A9E 0608      LD B,B
45 0AA0 CB03      SWEP8: RLC E
46 0AA2 3801      JR C,SWEP7
47 0AA4 34      INC (HL)
48 0AA5 10F9      SWEP7: DJNZ SWEP8
49 0AA7 C1      POP BC
50 0AA8 B7      OR A
51 0AA9 28CB      JR Z,SWEP0
52 0AAB 5F      LD E,A
53 0AAC 2608      SWEP2: LD H,B
54 0AAE 78      LD A,B
55 0AAF 3D      DEC A      : TBL ADJUST
56 0AB0 E60F      AND 0FH
57 0AB2 C33E07    JP SWEP4
58 0AB5
59 0AB5
60 0AB5
: ASCII TO DISPLAY CODE TABL :
:

```

```

01 0AB5      ATBL:
02 0AB5      : 00 - 0F :
03 0AB5 CC      DEFB CCH      : 10
04 0AB6 E0      DEFB E0H      : 1A SHIFT LOCK
05 0AB7 F2      DEFB F2H      : 1B
06 0AB8 F3      DEFB F3H      : 1C
07 0AB9 CE      DEFB CEH      : 1D ROLL UP
08 0ABA CF      DEFB CFH      : 1E ROLL DOWN
09 0ABB F6      DEFB F6H      : 1F
10 0ABC F7      DEFB F7H      : 1G
11 0ABD F8      DEFB F8H      : 1H
12 0ABE F9      DEFB F9H      : 1I
13 0ABF FA      DEFB FAH      : 1J
14 0AC0 FB      DEFB FBH      : 1K
15 0AC1 FC      DEFB FCH      : 1L
16 0AC2 FD      DEFB FDH      : 1M
17 0AC3 FE      DEFB FEH      : 1N
18 0AC4 FF      DEFB FFH      : 1O
19 0AC5
20 0AC5 E1      : 10 - 1F
21 0AC6 C1      DEFB E1H      : 1P
22 0AC7 C2      DEFB C1H      : 1Q CUR. DOWN
23 0AC8 C3      DEFB C2H      : 1R CUR. UP
24 0AC9 C4      DEFB C3H      : 1S CUR. RIGHT
25 0ACA C5      DEFB C4H      : 1T CUR. LEFT
26 0ACB C6      DEFB C5H      : 1U HOME
27 0ACC E2      DEFB C6H      : 1V CLEAR
28 0ACD E3      DEFB E2H      : 1W
29 0ACE E4      DEFB E3H      : 1X
30 0ACF E5      DEFB E4H      : 1Y
31 0AD0 E6      DEFB E5H      : 1Z SEP.
32 0AD1 E8      DEFB E6H      : 1[
33 0AD2 EE      DEFB E8H      : 1\
34 0AD3 EF      DEFB EEH      : 1]
35 0AD4 F4      DEFB EFH      : 1^
36 0AD5      DEFB F4H      : 1_
37 0AD5 00      : 20 - 2F :
38 0AD6 61      DEFB 00H      : 1 SPACE
39 0AD7 62      DEFB 61H      : 1!
40 0AD8 63      DEFB 62H      : 1"
41 0AD9 64      DEFB 63H      : 1#
42 0ADA 65      DEFB 64H      : 1$
43 0ADB 66      DEFB 65H      : 1%
44 0ADC 67      DEFB 66H      : 1&
45 0ADD 68      DEFB 67H      : 1'
46 0ADE 69      DEFB 68H      : 1(
47 0ADF 6B      DEFB 69H      : 1)
48 0AE0 6A      DEFB 6BH      : 1*
49 0AE1 2F      DEFB 6AH      : 1+
50 0AE2 2A      DEFB 2FH      : 1,
51 0AE3 2E      DEFB 2AH      : 1-
52 0AE4 2D      DEFB 2EH      : 1.
53 0AE5
54 0AE5 20      : 30 - 3F :
55 0AE6 21      DEFB 20H      : 1 0
56 0AE7 22      DEFB 21H      : 1 1
57 0AE8 23      DEFB 22H      : 1 2
58 0AE9 24      DEFB 23H      : 1 3
59 0AEA 25      DEFB 24H      : 1 4
60 0AEB 26      DEFB 25H      : 1 5
:

```

```

01 0AEC 27          DEFB 27H          1 7
02 0AED 28          DEFB 28H          1 8
03 0AEE 29          DEFB 29H          1 9
04 0AEF 4F          DEFB 4FH          1 1
05 0AF0 2C          DEFB 2CH          1 1
06 0AF1 51          DEFB 51H          1 1
07 0AF2 2B          DEFB 2BH          1 =
08 0AF3 57          DEFB 57H          1 >
09 0AF4 49          DEFB 49H          1 ?
10 0AF5          1 40 - 4F 1
11 0AF5 55          DEFB 55H          1 @
12 0AF6 01          DEFB 01H          1 A
13 0AF7 02          DEFB 02H          1 B
14 0AF8 03          DEFB 03H          1 C
15 0AF9 04          DEFB 04H          1 D
16 0AFA 05          DEFB 05H          1 E
17 0AFB 06          DEFB 06H          1 F
18 0AFC 07          DEFB 07H          1 G
19 0AFD 08          DEFB 08H          1 H
20 0AFE 09          DEFB 09H          1 I
21 0AFF 0A          DEFB 0AH          1 J
22 0B00 0B          DEFB 0BH          1 K
23 0B01 0C          DEFB 0CH          1 L
24 0B02 0D          DEFB 0DH          1 M
25 0B03 0E          DEFB 0EH          1 U
26 0B04 0F          DEFB 0FH          1 O
27 0B05          1 50 - 5F 1
28 0B05 10          DEFB 10H          1 P
29 0B06 11          DEFB 11H          1 Q
30 0B07 12          DEFB 12H          1 R
31 0B08 13          DEFB 13H          1 S
32 0B09 14          DEFB 14H          1 T
33 0B0A 15          DEFB 15H          1 U
34 0B0B 16          DEFB 16H          1 V
35 0B0C 17          DEFB 17H          1 W
36 0B0D 18          DEFB 18H          1 X
37 0B0E 19          DEFB 19H          1 Y
38 0B0F 1A          DEFB 1AH          1 Z
39 0B10 52          DEFB 52H          1 [
40 0B11 59          DEFB 59H          1 \
41 0B12 54          DEFB 54H          1 ]
42 0B13 50          DEFB 50H          1 ^
43 0B14 45          DEFB 45H          1 _
44 0B15          1 60 - 6F 1
45 0B15 C7          DEFB C7H          1 UFO
46 0B16 C8          DEFB C8H
47 0B17 C9          DEFB C9H
48 0B18 CA          DEFB CAH
49 0B19 CB          DEFB CBH
50 0B1A CC          DEFB CCH
51 0B1B CD          DEFB CDH
52 0B1C CE          DEFB CEH
53 0B1D CF          DEFB CFH
54 0B1E DF          DEFB DFH
55 0B1F E7          DEFB E7H
56 0B20 E8          DEFB E8H
57 0B21 E9          DEFB E9H
58 0B22 EA          DEFB EAH
59 0B23 EC          DEFB ECH
60 0B24 ED          DEFB EDH
    
```

```

01 0B25          1 70 - 7F 1
02 0B25 D0          DEFB D0H
03 0B26 D1          DEFB D1H
04 0B27 D2          DEFB D2H
05 0B28 D3          DEFB D3H
06 0B29 D4          DEFB D4H
07 0B2A D5          DEFB D5H
08 0B2B D6          DEFB D6H
09 0B2C D7          DEFB D7H
10 0B2D D8          DEFB D8H
11 0B2E D9          DEFB D9H
12 0B2F DA          DEFB DAH
13 0B30 DB          DEFB DBH
14 0B31 DC          DEFB DCH
15 0B32 DD          DEFB DDH
16 0B33 DE          DEFB DEH
17 0B34 C0          DEFB C0H
18 0B35          1 80 - 8F 1
19 0B35 40          DEFB 40H          1 )
20 0B36 BD          DEFB BDH          1
21 0B37 9D          DEFB 9DH
22 0B38 B1          DEFB B1H
23 0B39 B5          DEFB B5H
24 0B3A B9          DEFB B9H
25 0B3B B4          DEFB B4H          1 'O
26 0B3C 9E          DEFB 9EH          1 'A
27 0B3D B2          DEFB B2H          1 'I
28 0B3E B6          DEFB B6H          1 'U
29 0B3F BA          DEFB BAH          1 'E
30 0B40 BE          DEFB BEH          1 ^
31 0B41 9F          DEFB 9FH          1 'YA
32 0B42 B3          DEFB B3H          1 'YU
33 0B43 B7          DEFB B7H          1 'YO
34 0B44 BB          DEFB BBH          1 'TSU
35 0B45          1 90 - 9F 1
36 0B45 BF          DEFB BFH          1 -
37 0B46 A3          DEFB A3H          1 'A
38 0B47 85          DEFB 85H          1 'I
39 0B48 A4          DEFB A4H          1 '
40 0B49 A5          DEFB A5H          1 -
41 0B4A A6          DEFB A6H          1 'O
42 0B4B 94          DEFB 94H          1 'KA
43 0B4C 87          DEFB 87H          1 'KI
44 0B4D 88          DEFB 88H          1 'KU
45 0B4E 9C          DEFB 9CH          1 'KE
46 0B4F 82          DEFB 82H          1 'KO
47 0B50 98          DEFB 98H          1 'SA
48 0B51 84          DEFB 84H          1 'SHI
49 0B52 92          DEFB 92H          1 'SU
50 0B53 90          DEFB 90H          1 'SE
51 0B54 83          DEFB 83H          1 'SO
52 0B55          1 A0 - AF 1
53 0B55 91          DEFB 91H          1 'TA
54 0B56 81          DEFB 81H          1 'CHI
55 0B57 9A          DEFB 9AH          1 'TSU
56 0B58 97          DEFB 97H          1 'TE
57 0B59 93          DEFB 93H          1 'TO
58 0B5A 95          DEFB 95H          1 'NA
59 0B5B 89          DEFB 89H          1 'NI
60 0B5C A1          DEFB A1H          1 'NU
    
```

```

01 0B5D AF      DEFB AFH      : 'NE
02 0B5E 8B      DEFB 8BH      : 'NO
03 0B5F 86      DEFB 86H      : 'HA
04 0B60 96      DEFB 96H      : 'HI
05 0B61 A2      DEFB A2H      : 'FU
06 0B62 AB      DEFB ABH      : 'HE
07 0B63 AA      DEFB AAH      : 'HO
08 0B64 8A      DEFB 8AH      : 'HA
09 0B65          : BO - BF :
10 0B65 8E      DEFB 8EH      : 'HI
11 0B66 80      DEFB 80H      : 'MU
12 0B67 AD      DEFB ADH      : 'HE
13 0B68 8D      DEFB 8DH      : 'HO
14 0B69 A7      DEFB A7H      : 'YA
15 0B6A A8      DEFB A8H      : 'YU
16 0B6B A9      DEFB A9H      : 'YO
17 0B6C 8F      DEFB 8FH      : 'RA
18 0B6D 8C      DEFB 8CH      : 'RI
19 0B6E AE      DEFB AEH      : 'RU
20 0B6F AC      DEFB ACH      : 'RE
21 0B70 9B      DEFB 9BH      : 'RO
22 0B71 A0      DEFB A0H      : 'WA
23 0B72 99      DEFB 99H      : 'N
24 0B73 BC      DEFB BCH      : (
25 0B74 B8      DEFB B8H      : (
26 0B75          : CO - CF :
27 0B75 80      DEFB 80H      : (
28 0B76 3B      DEFB 3BH      : (
29 0B77 3A      DEFB 3AH      : (
30 0B78 70      DEFB 70H      : (
31 0B79 3C      DEFB 3CH      : (
32 0B7A 71      DEFB 71H      : (
33 0B7B 5A      DEFB 5AH      : (
34 0B7C 3D      DEFB 3DH      : (
35 0B7D 43      DEFB 43H      : (
36 0B7E 56      DEFB 56H      : (
37 0B7F 3F      DEFB 3FH      : (
38 0B80 1E      DEFB 1EH      : (
39 0B81 4A      DEFB 4AH      : (
40 0B82 1C      DEFB 1CH      : (
41 0B83 5D      DEFB 5DH      : (
42 0B84 3E      DEFB 3EH      : (
43 0B85          : D0 - DF :
44 0B85 5C      DEFB 5CH      : (
45 0B86 1F      DEFB 1FH      : (
46 0B87 5F      DEFB 5FH      : (
47 0B88 5E      DEFB 5EH      : (
48 0B89 37      DEFB 37H      : (
49 0B8A 7B      DEFB 7BH      : (
50 0B8B 7F      DEFB 7FH      : (
51 0B8C 36      DEFB 36H      : (
52 0B8D 7A      DEFB 7AH      : (
53 0B8E 7E      DEFB 7EH      : (
54 0B8F 33      DEFB 33H      : (
55 0B90 4B      DEFB 4BH      : (
56 0B91 4C      DEFB 4CH      : (
57 0B92 1D      DEFB 1DH      : (
58 0B93 6C      DEFB 6CH      : (
59 0B94 5B      DEFB 5BH      : (
60 0B95          : E0 - EF :

```

```

01 0B95 78      DEFB 78H
02 0B96 41      DEFB 41H
03 0B97 35      DEFB 35H
04 0B98 34      DEFB 34H
05 0B99 74      DEFB 74H
06 0B9A 30      DEFB 30H
07 0B9B 38      DEFB 38H
08 0B9C 75      DEFB 75H
09 0B9D 39      DEFB 39H
10 0B9E 4D      DEFB 4DH
11 0B9F 6F      DEFB 6FH
12 0BA0 6E      DEFB 6EH
13 0BA1 32      DEFB 32H
14 0BA2 77      DEFB 77H
15 0BA3 76      DEFB 76H
16 0BA4 72      DEFB 72H
17 0BA5          : FO - FF :
18 0BA5 73      DEFB 73H
19 0BA6 47      DEFB 47H
20 0BA7 7C      DEFB 7CH
21 0BA8 53      DEFB 53H
22 0BA9 31      DEFB 31H
23 0BAA 4E      DEFB 4EH
24 0BAB 6D      DEFB 6DH
25 0BAC 48      DEFB 48H
26 0BAD 46      DEFB 46H
27 0BAE 7D      DEFB 7DH
28 0BAF 44      DEFB 44H
29 0BB0 1B      DEFB 1BH
30 0BB1 58      DEFB 58H
31 0BB2 79      DEFB 79H
32 0BB3 42      DEFB 42H
33 0BB4 60      DEFB 60H
34 0BB5          :
35 0BB9          : OR0 0BB9H      :?ADCN 21
36 0BB9          :
37 0BB9          :
38 0BB9          : ASCII TO DISPLAY CODE CONVERTE
39 0BB9          :
40 0BB9          : IN ACC:ASCII
41 0BB9          : EXIT ACC:DISPLAY CODE
42 0BB9          :
43 0BB9 C5      ?ADCN: PUSH BC
44 0BB9 E5      PUSH HL
45 0BBB 21B50A  LD HL,ATBL
46 0BBE 4F      LD C,A
47 0BBF 0600    LD B,0
48 0BC1 09      ADD HL,BC
49 0BC2 7E      LD A,(HL)
50 0BC3 181B    JR DACN3
51 0BC5          :
52 0BC5          :
53 0BC5          : ?KEY BREAK KEY INPUT
54 0BC5          :
55 0BC5 3ECB    #BRK: LD A,CBH      : BREAK CODE
56 0BC7 B7      OR A
57 0BC8 C3EF08  JP ?KY10
58 0BCB          :
59 0BCB          :
60 0BCB          :

```

```

01 OBCE          ORG  OBCEH          ;?DACN  472
02 OBCE          ;
03 OBCE          ; DISPLAY CODE TO ASCII CONV. ;
04 OBCE          ;
05 OBCE          ; ACC = DISPLAY CODE
06 OBCE          ; EXIT ACC = ASCII
07 OBCE          ;
08 OBCE C5       ?DACN: PUSH  BC
09 OBCE E5       PUSH  HL
10 OBDD D5       PUSH  DE
11 OB01 21B50A   LD    HL,ATBL
12 OB04 54       LD    D,H
13 OB05 5D       LD    E,L
14 OB06 010001  LD    BC,0100H
15 OB09 EDB1     CP   R
16 OB0B 2806     JR    Z,DACN1
17 OBDD 3EF0     LD    A,FOH
18 OBDF D1       DACN2: POP  DE
19 OBEO E1       DACN3: POP  HL
20 OBE1 C1       POP  BC
21 OBE2 C9       RET
22 OBE3          ;
23 OBE3 B7       DACN1: OR   A
24 OBE4 2B       DEC  HL
25 OBE5 ED52     SBC  HL,DE
26 OBE7 7D       LD    A,L
27 OBE8 18F5     JR   DACN2
28 OBEA          ;
29 OBEA          ;
30 OBEA          ;
31 OBEA          ; KEY MATRIX TO DISPLAY CODE TABL
32 OBEA          ;
33 OBEA          ; KTBL:
34 OBEA          ;S0  00 - 07  ;
35 OBEA 22       DEFB 22H      ; 2
36 OBEB 21       DEFB 21H      ; 1
37 OBEC 17       DEFB 17H      ; W
38 OBED 11       DEFB 11H      ; Q
39 OBEE 01       DEFB 01H      ; A
40 OBEF C7       DEFB C7H      ; DEL
41 OBFO 00       DEFB 00H      ; NULL
42 OBF1 1A       DEFB 1AH      ; Z
43 OBF2          ;S1  08 - 0F  ;
44 OBF2 24       DEFB 24H      ; 4
45 OBF3 23       DEFB 23H      ; 3
46 OBF4 12       DEFB 12H      ; R
47 OBF5 05       DEFB 05H      ; E
48 OBF6 04       DEFB 04H      ; D
49 OBF7 13       DEFB 13H      ; S
50 OBF8 18       DEFB 18H      ; X
51 OBF9 03       DEFB 03H      ; C
52 OBFA          ;S2  0 - 17  ;
53 OBFA 26       DEFB 26H      ; 6
54 OBFB 25       DEFB 25H      ; 5
55 OBFC 19       DEFB 19H      ; Y
56 OBFD 14       DEFB 14H      ; T
57 OBFE 07       DEFB 07H      ; O
58 OBF0 06       DEFB 06H      ; F
59 OC00 16       DEFB 16H      ; V
60 OC01 02       DEFB 02H      ; B
    
```

```

01 OC02          ;S3  18 - 1F  ;
02 OC02 28       DEFB 28H      ; 8
03 OC03 27       DEFB 27H      ; 7
04 OC04 09       DEFB 09H      ; I
05 OC05 15       DEFB 15H      ; U
06 OC06 0A       DEFB 0AH      ; J
07 OC07 08       DEFB 08H      ; H
08 OC08 0E       DEFB 0EH      ; N
09 OC09 00       DEFB 00H      ; SPACE
10 OC0A          ;S4  20 - 27  ;
11 OC0A 20       DEFB 20H      ; 0
12 OC0B 29       DEFB 29H      ; 9
13 OC0C 10       DEFB 10H      ; P
14 OC0D 0F       DEFB 0FH      ; 0
15 OC0E 0C       DEFB 0CH      ; L
16 OC0F 0B       DEFB 0BH      ; K
17 OC10 2F       DEFB 2FH      ; ,
18 OC11 0D       DEFB 0DH      ; M
19 OC12          ;S5  28 - 2F  ;
20 OC12 BE       DEFB BEH      ; ^
21 OC13 2A       DEFB 2AH      ; -
22 OC14 52       DEFB 52H      ; [
23 OC15 55       DEFB 55H      ; @
24 OC16 4F       DEFB 4FH      ; !
25 OC17 2C       DEFB 2CH      ; !
26 OC18 2D       DEFB 2DH      ; /
27 OC19 2E       DEFB 2EH      ; .
28 OC1A          ;S6  30 - 37  ;
29 OC1A C5       DEFB C5H      ; HOME
30 OC1B 59       DEFB 59H      ; _
31 OC1C C3       DEFB C3H      ; CURSOL *RIGHT
32 OC1D C2       DEFB C2H      ; CURSOL *UP
33 OC1E CD       DEFB CDH      ; CR
34 OC1F 54       DEFB 54H      ; )
35 OC20 00       DEFB 00H      ; NULL
36 OC21 49       DEFB 49H      ; ?
37 OC22          ;S7  38 - 3F  ;
38 OC22 28       DEFB 28H      ; 8
39 OC23 27       DEFB 27H      ; 7
40 OC24 25       DEFB 25H      ; 5
41 OC25 24       DEFB 24H      ; 4
42 OC26 22       DEFB 22H      ; 2
43 OC27 21       DEFB 21H      ; 1
44 OC28 E7       DEFB E7H      ; 00 ***
45 OC29 20       DEFB 20H      ; 0
46 OC2A          ;S8  40 - 47  ;
47 OC2A 6A       DEFB 6AH      ; *
48 OC2B 29       DEFB 29H      ; 9
49 OC2C 2A       DEFB 2AH      ; -
50 OC2D 26       DEFB 26H      ; &
51 OC2E 00       DEFB 00H      ; NULL
52 OC2F 23       DEFB 23H      ; 3
53 OC30 00       DEFB 00H      ; NULL
54 OC31 2E       DEFB 2EH      ; ,
55 OC32          ; KTBL SHIFT ON
56 OC32          ; KTBL:
57 OC32          ;S0
58 OC32 62       DEFB 62H      ; *
59 OC33 61       DEFB 61H      ; !
60 OC34 97       DEFB 97H      ; W
    
```

01	OC35 91	DEFB	91H	:	a
02	OC36 81	DEFB	81H	:	a
03	OC37 C8	DEFB	C8H	:	INSERT
04	OC38 00	DEFB	00H	:	NULL
05	OC39 9A	DEFB	9AH	:	z
06	OC3A				
07	OC3A 64	DEFB	64H	:	s
08	OC3B 63	DEFB	63H	:	s
09	OC3C 92	DEFB	92H	:	r
10	OC3D 85	DEFB	85H	:	e
11	OC3E 84	DEFB	84H	:	d
12	OC3F 93	DEFB	93H	:	s
13	OC40 98	DEFB	98H	:	x
14	OC41 83	DEFB	83H	:	c
15	OC42				
16	OC42 66	DEFB	66H	:	k
17	OC43 65	DEFB	65H	:	z
18	OC44 99	DEFB	99H	:	y
19	OC45 94	DEFB	94H	:	t
20	OC46 87	DEFB	87H	:	g
21	OC47 86	DEFB	86H	:	f
22	OC48 96	DEFB	96H	:	v
23	OC49 82	DEFB	82H	:	b
24	OC4A				
25	OC4A 68	DEFB	68H	:	(
26	OC4B 67	DEFB	67H	:	(
27	OC4C 89	DEFB	89H	:	i
28	OC4D 95	DEFB	95H	:	u
29	OC4E 8A	DEFB	8AH	:	j
30	OC4F 88	DEFB	88H	:	n
31	OC50 8E	DEFB	8EH	:	n
32	OC51 00	DEFB	00H	:	SPACE
33	OC52				
34	OC52 BF	DEFB	BFH	:	-
35	OC53 69	DEFB	69H	:)
36	OC54 90	DEFB	90H	:	p
37	OC55 8F	DEFB	8FH	:	o
38	OC56 8C	DEFB	8CH	:	i
39	OC57 8B	DEFB	8BH	:	k
40	OC58 51	DEFB	51H	:	<
41	OC59 8D	DEFB	8DH	:	m
42	OC5A				
43	OC5A A5	DEFB	A5H	:	~
44	OC5B 2B	DEFB	2BH	:	=
45	OC5C BC	DEFB	BCH	:	(
46	OC5D A4	DEFB	A4H	:	'
47	OC5E 6B	DEFB	6BH	:	*
48	OC5F 6A	DEFB	6AH	:	*
49	OC60 45	DEFB	45H	:	*
50	OC61 57	DEFB	57H	:	>
51	OC62				
52	OC62 C6	DEFB	C6H	:	CLR
53	OC63 80	DEFB	80H	:	i
54	OC64 C4	DEFB	C4H	:	CURSOL *LEFT
55	OC65 C1	DEFB	C1H	:	CURSOL *DOWN
56	OC66 CD	DEFB	CDH	:	CR
57	OC67 40	DEFB	40H	:)
58	OC68 00	DEFB	00H	:	NULL
59	OC69 50	DEFB	50H	:	↑
60	OC6A				

KTBLG:

01	OC6A				
02	OC6A 3E	DEFB	3EH	:	#2
03	OC6B 37	DEFB	37H	:	#1
04	OC6C 38	DEFB	38H	:	#W
05	OC6D 3C	DEFB	3CH	:	#0
06	OC6E 53	DEFB	53H	:	#A
07	OC6F C7	DEFB	C7H	:	DELETE
08	OC70 00	DEFB	00H	:	NULL
09	OC71 76	DEFB	76H	:	#Z
10	OC72				
11	OC72 7B	DEFB	7BH	:	#4
12	OC73 7F	DEFB	7FH	:	#3
13	OC74 30	DEFB	30H	:	#R
14	OC75 34	DEFB	34H	:	#E
15	OC76 47	DEFB	47H	:	#D
16	OC77 44	DEFB	44H	:	#S
17	OC78 6D	DEFB	6DH	:	#X
18	OC79 DE	DEFB	DEH	:	#C
19	OC7A				
20	OC7A 5E	DEFB	5EH	:	#6
21	OC7B 3A	DEFB	3AH	:	#5
22	OC7C 75	DEFB	75H	:	#Y
23	OC7D 71	DEFB	71H	:	#T
24	OC7E 4B	DEFB	4BH	:	#G
25	OC7F 4A	DEFB	4AH	:	#F
26	OC80 DA	DEFB	DAH	:	#V
27	OC81 6F	DEFB	6FH	:	#B
28	OC82				
29	OC82 BD	DEFB	BDH	:	#8
30	OC83 1F	DEFB	1FH	:	#7
31	OC84 7D	DEFB	7DH	:	#I
32	OC85 79	DEFB	79H	:	#U
33	OC86 5C	DEFB	5CH	:	#J
34	OC87 72	DEFB	72H	:	#H
35	OC88 32	DEFB	32H	:	#N
36	OC89 00	DEFB	00H	:	SPACE
37	OC8A				
38	OC8A 9C	DEFB	9CH	:	#0
39	OC8B A1	DEFB	A1H	:	#9
40	OC8C D6	DEFB	D6H	:	#P
41	OC8D B0	DEFB	B0H	:	#0
42	OC8E B4	DEFB	B4H	:	#L
43	OC8F 5B	DEFB	5BH	:	#K
44	OC90 60	DEFB	60H	:	-PAI, #
45	OC91 1C	DEFB	1CH	:	#M
46	OC92				
47	OC92 9E	DEFB	9EH	:	#^
48	OC93 D2	DEFB	D2H	:	#-
49	OC94 D8	DEFB	D8H	:	#[
50	OC95 B2	DEFB	B2H	:	#@
51	OC96 B6	DEFB	B6H	:	#!
52	OC97 42	DEFB	42H	:	#I
53	OC98 DB	DEFB	DBH	:	#/
54	OC99 B8	DEFB	B8H	:	#.
55	OC9A				
56	OC9A C5	DEFB	C5H	:	HOME
57	OC9B D4	DEFB	D4H	:	#\
58	OC9C C3	DEFB	C3H	:	CURSOL *RIGHT
59	OC9D C2	DEFB	C2H	:	CURSOL *UP
60	OC9E CD	DEFB	CDH	:	CR

```

01 0C9F 4E          DEFB 4EH          : #J
02 0CA0 00          DEFB 00H          : NULL
03 0CA1 BA          DEFB BAH          : #?
04 0CA2             KTBLG5:
05 0CA2             1S0  GRAPHIC MODE & SHIFT ON
06 0CA2 36          DEFB 36H          : ?2
07 0CA3 3F          DEFB 3FH          : ?1
08 0CA4 78          DEFB 78H          : ?W
09 0CA5 7C          DEFB 7CH          : ?0
10 0CA6 46          DEFB 46H          : ?A
11 0CA7 C8          DEFB C8H          : INST
12 0CAB 00          DEFB 00H          : NULL
13 0CA9 77          DEFB 77H          : ?2
14 0CAA             1S1
15 0CAA 3B          DEFB 3BH          : ?4
16 0CAB 7E          DEFB 7EH          : ?3
17 0CAC 70          DEFB 70H          : ?R
18 0CAD 74          DEFB 74H          : ?E
19 0CAE 48          DEFB 48H          : ?D
20 0CAF 41          DEFB 41H          : ?S
21 0CB0 DD          DEFB DDH          : ?X
22 0CB1 D9          DEFB D9H          : ?C
23 0CB2             1S2
24 0CB2 1E          DEFB 1EH          : ?6
25 0CB3 7A          DEFB 7AH          : ?5
26 0CB4 35          DEFB 35H          : ?Y
27 0CB5 31          DEFB 31H          : ?T
28 0CB6 4C          DEFB 4CH          : ?G
29 0CB7 43          DEFB 43H          : ?F
30 0CB8 A6          DEFB A6H          : ?V
31 0CB9 6E          DEFB 6EH          : ?B
32 0CBA             1S3
33 0CBA A2          DEFB A2H          : ?8
34 0CBB 5F          DEFB 5FH          : ?7
35 0CBC 3D          DEFB 3DH          : ?I
36 0CBD 39          DEFB 39H          : ?U
37 0CBE 5D          DEFB 5DH          : ?J
38 0CBF 73          DEFB 73H          : ?H
39 0CC0 33          DEFB 33H          : ?N
40 0CC1 00          DEFB 00H          : SPACE
41 0CC2             1S4
42 0CC2 9D          DEFB 9DH          : ?0
43 0CC3 A3          DEFB A3H          : ?9
44 0CC4 B1          DEFB B1H          : ?P
45 0CC5 D5          DEFB D5H          : ?0
46 0CC6 56          DEFB 56H          : ?L
47 0CC7 6C          DEFB 6CH          : ?K
48 0CC8 D0          DEFB D0H          : ?r
49 0CC9 1D          DEFB 1DH          : ?M
50 0CCA             1S5B
51 0CCA 9F          DEFB 9FH          : ?~
52 0CCB D1          DEFB D1H          : ?-
53 0CCC B3          DEFB B3H          : ?C
54 0CCD D7          DEFB D7H          : ?#
55 0CCE 4D          DEFB 4DH          : ?1
56 0CCF B5          DEFB B5H          : ?1
57 0CD0 1B          DEFB 1BH          : ?/
58 0CD1 B9          DEFB B9H          : ?r
59 0CD2             1S6
60 0CD2 C6          DEFB C6H          : CLR
    
```

```

01 0CD3 D3          DEFB D3H          : ?\
02 0CD4 C4          DEFB C4H          : CURSOL *LEFT
03 0CD5 C1          DEFB C1H          : CURSOL *DOWN
04 0CD6 CD          DEFB CDH          : CR
05 0CD7 B7          DEFB B7H          : ?J
06 0CD8 00          DEFB 00H          : NULL
07 0CD9 BB          DEFB BBH          : ??
08 0CDA             1
09 0CDA             KTBLC1
10 0CDA             1S0  CTRL ON
11 0CDA F0          DEFB F0H          : CODE 80H=NOT KEY
12 0CDB F0          DEFB F0H
13 0CDC E2          DEFB E2H          : +W
14 0CDD C1          DEFB C1H          : +0
15 0CDE E0          DEFB E0H          : +A SHIFT LOCK
16 0CDF F0          DEFB F0H
17 0CEE 00          DEFB 00H
18 0CE1 E5          DEFB E5H          : +Z
19 0CE2             1S1
20 0CE2 F0          DEFB F0H
21 0CE3 F0          DEFB F0H
22 0CE4 C2          DEFB C2H          : +R
23 0CE5 CF          DEFB CFH          : +E ROLL DOWN
24 0CE6 CE          DEFB CEH          : +D ROLL UP
25 0CE7 C3          DEFB C3H          : +S
26 0CE8 E3          DEFB E3H          : +X
27 0CE9 F3          DEFB F3H          : +C
28 0CEA             1S2
29 0CEA F0          DEFB F0H
30 0CEB F0          DEFB F0H
31 0CEC E4          DEFB E4H          : +Y
32 0CED C4          DEFB C4H          : +T
33 0CEE F7          DEFB F7H          : +G
34 0CEF F6          DEFB F6H          : +F
35 0CF0 C6          DEFB C6H          : +V CLR
36 0CF1 F2          DEFB F2H          : +B
37 0CF2             1S3
38 0CF2 F0          DEFB F0H
39 0CF3 F0          DEFB F0H
40 0CF4 F9          DEFB F9H          : +I
41 0CF5 C5          DEFB C5H          : +U HOME
42 0CF6 FA          DEFB FAH          : +J
43 0CF7 F8          DEFB F8H          : +H
44 0CF8 FE          DEFB FEH          : +N
45 0CF9 F0          DEFB F0H
46 0CFA             1S4
47 0CFA F0          DEFB F0H
48 0CFB F0          DEFB F0H
49 0CFC E1          DEFB E1H          : +P
50 0CFD FF          DEFB FFH          : +0
51 0CFE FC          DEFB FCH          : +L
52 0CF7 FB          DEFB FBH          : +K
53 0D00 F0          DEFB F0H
54 0D01 FD          DEFB FDH          : +M
55 0D02             1S5
56 0D02 EF          DEFB EFH          : +^
57 0D03 F4          DEFB F4H          : +-
58 0D04 E6          DEFB E6H          : +I
59 0D05 CC          DEFB CCH          : +R REVERSE
60 0D06 F0          DEFB F0H
    
```



```

01 0E44 77 LD (HL),A
02 0E45 23 INC HL
03 0E46 10FA DJNZ SCROL2
04 0E48 3A7A11 LD A,(PBIA5)
05 0E4B 6F LD L,A
06 0E4C 26E2 LD H,E2H
07 0E4E 7E LD A,(HL)
08 0E4F 217911 LD HL,MANGE
09 0E52 87 OR A
10 0E53 0607 LD B,7
11 0E55 CB1E RR (HL)
12 0E57 2B DEC HL
13 0E58 10FB DJNZ -3
14 0E5A C3E50E JP 7RSTR
15 0E5D
16 0E5D
17 0E5D 2A7111 CURSD: LD HL,(DSPXY)
18 0E60 7C LD A,H
19 0E61 FE18 CP +24
20 0E63 282E JR 7,CURS4
21 0E65 24 INC H
22 0E66 CDB302 CURS1: CALL MGP,I
23 0E69 227111 CURS3: LD HL,(DSPXY),HL
24 0E6C 1877 JR 7RSTR
25 0E6E
26 0E6E 2A7111 CURSU: LD HL,(DSPXY)
27 0E71 7C LD A,H
28 0E72 B7 OR A
29 0E73 2835 JR 7,CURS5
30 0E75 25 DEC H
31 0E76 CD9D02 CURSU1: CALL MGP,D
32 0E79 18EE JR CURS3
33 0E7B
34 0E7B 2A7111 CURSR: LD HL,(DSPXY)
35 0E7E 7D LD A,L
36 0E7F FE27 CP +39
37 0E81 3003 JR NC,CURS2
38 0E83 2C INC L
39 0E84 18E3 JR CURS3
40 0E86 2E00 LD L,*0
41 0E88 24 INC H
42 0E89 7C LD A,H
43 0E8A FE19 CP +25
44 0E8C 38D8 JR C,CURS1
45 0E8E 2A18 LD H,*24
46 0E90 227111 LD HL,(DSPXY),HL
47 0E93 1842 JR CURS6
48 0E95
49 0E95 2A7111 CURSL: LD HL,(DSPXY)
50 0E98 7D LD A,L
51 0E99 B7 OR A
52 0E9A 2803 JR Z,*5
53 0E9C 2D DEC L
54 0E9D 18CA JR CURS3
55 0E9F 2E27 LD L,*39
56 0EA1 25 DEC H
57 0EA2 F2760E JP P,CURSUI
58 0EA5 2600 LD H,0
59 0EA7 227111 LD HL,(DSPXY),HL
60 0EAA 3A9111 LD A,(SPAGE)

```

```

01 0EAD B7 OR A
02 0EAE 2035 JR NZ,PRSTR
03 0EB0 C3590F JP ROLD
04 0EB3
05 0EB3 217311 CLRS: LD HL,MANG
06 0EB6 061B LD B,27
07 0EB8 CDD80F CALL 7CLER
08 0EBB 2100D0 LD HL,D000H
09 0EBE E5 PUSH HL
10 0EBF CDE209 CALL #CLR08
11 0EC2 E1 POP HL
12 0EC3 3A9111 LD A,(SPAGE)
13 0EC6 B7 OR A
14 0EC7 2008 OR A,(SPAGE)
15 0EC9 227D11 JR NZ,CLRS1
16 0ECC 3E7D LD (PAGEFI),HL
17 0ECE 327F11 LD A,7DH
18 0ED1 3A00E2 LD (ROLEND),A
19 0ED4 C30904 HOM00: JP HOM0
20 0ED7
21 0ED7
22 0ED7
23 0ED7 3A9111 CURS6: LD A,(SPAGE)
24 0EDA B7 OR A
25 0EDB C23D01 JP NZ,SCROL
26 0EDE C39F0F JP ROLU
27 0EE1
28 0EE1
29 0EE1
30 0EE1
31 0EE1 ORG 0EE1H
32 0EE1 AF ALPHA: XOR A
33 0EE2 327011 ALPHA: LD (KANAF),A
34 0EE5
35 0EE5
36 0EE5
37 0EE5
38 0EE5 ENT
39 0EE5 EI HL
40 0EE6 D1 POP DE
41 0EE7 C1 POP BC
42 0EE8 F1 POP AF
43 0EE9 C9 RET
44 0EEA
45 0EEA
46 0EEA P
47 0EEA P
48 0EEA P
49 0EEA
50 0EEA
51 0EEA
52 0EEE
53 0EEE
54 0EEE 3E01 KANA: LD A,*1
55 0EEF 18F0 JR ALPHI
56 0EF2
57 0EF2
58 0EF2 2A7111 DEL: LD HL,(DSPXY)
59 0EF5 7C LD A,H
60 0EF6 B5 OR L

```

```

1 SCRN TOP
1 SCROL
1 COLOURN MANAG, END
1 KANA STATUS PORT
1 KANA 195
1 HOME ?

```



```

01 1000      1
02 1000      1
03 1000      1
04 1000      1
05 1000      1
06 1000      1
07 1000      1
08 10F0      1
09 10F0      1
10 10F0      1
11 10F0      1
12 10F0      1
13 10F1      1
14 10F1      1
15 1102      1
16 1104      1
17 1104      1
18 1104      1
19 1106      1
20 1106      1
21 1108      1
22 1108      1
23 1164      1
24 1164      1
25 116E      1
26 116E      1
27 1170      1
28 1170      1
29 1171      1
30 1171      1
31 1173      1
32 1173      1
33 1179      1
34 1179      1
35 117A      1
36 117A      1
37 1178      1
38 1178      1
39 117C      1
40 117C      1
41 117D      1
42 117D      1
43 117F      1
44 117F      1
45 1180      1
46 118E      1
47 118E      1
48 118F      1
49 118F      1
50 1190      1
51 1190      1
52 1191      1
53 1191      1
54 1192      1
55 1192      1
56 1193      1
57 1193      1
58 1194      1
59 1194      1
60 1195      1

MONITOR WORK AREA 1
(M1-80A) 1

ORG 10F0H
SP: ENT
IBUFE: ENT
ATRB: ENT
NAME: ENT
SIZE: ENT
DTADR: ENT
EXADR: ENT
COMNT: ENT
SMPH: ENT
KDATM: ENT
KANAF: ENT
DSPXY: ENT
MANG: ENT
HANGE: ENT
PBIAS: ENT
ROLTOP: ENT
MOPNT: ENT
PAGETP: ENT
ROLEND: ENT
FLASH: ENT
SFTLK: ENT
REVFLG: ENT
SPAGE: ENT
FLSDT: ENT
STROF: ENT
DPRNT: ENT
THCNT: ENT

```

```

01 1195      1
02 1197      1
03 1197      1
04 1199      1
05 1199      1
06 119B      1
07 119B      1
08 119C      1
09 119C      1
10 119D      1
11 119D      1
12 119E      1
13 119E      1
14 119F      1
15 119F      1
16 11A0      1
17 11A0      1
18 11A1      1
19 11A1      1
20 11A3      1
21 11A3      1
22 11F4      1

SUMDT: ENTS *2
CSMDT: ENTS *2
AMPH: ENTS *2
TIMFG: ENTS *1
SMRK: ENTS *1
TEMPH: ENTS *1
ONTYO: ENTS *1
OCTV: ENTS *1
RATIO: ENTS *1
BUFER: ENTS *2
END: ENTS *81

1 CHECK SUM DATA
1 FOR COMPARE SUM DATA
1 AMPH DATA
1 TIME FLAG
1 KEY SOUND FLAG
1 TEMPO WORK
1 ONTYO WORK
1 OCTAVE WORK
1 ONPU RATIO
1 GET LINE BUFFER

```

```

1 TAPE BUFFER(128B)
1 ATTRIBUTE
1 FILE NAME
1 BYTE SIZE
1 DATA ADR
1 EXECUTION ADR
1 COMMENT
1 SWEEP WORK
1 KEY WORK
1 KANA FLAG
1 DISPLAY CO-ORDINATES
1 COLUMN MANAGEMENT
1 COLUMN MANAG. END
1 PAGE BIAS
1 ROLL TOP BIAS
1 COLUMN MANAG. POINTER
1 PAGE TOP
1 ROLL END
1 BIAS
1 FLASHING DATA
1 SHIFT LOCK
1 REVERSE FLAG
1 PAGE CHENGE
1 CURSOL DATA
1 STRING FLAG
1 TAB COUNTER
1 TAPE MARK COUNTER

```

```

#BRK 08C5 #CLR08 09E2 #CLR8 09E3 #GRP 08E7 .CR 0128
-CRI 013A .CTBL 0168 .DSP03 039D .MANG 0A2B .MANG1 0A4C
-MANG2 03A3 .SCROL 013D .OMSG 09FC 2HE1 0A34 2HEX 0A1F
??KEY 09B3 ?ADCN 08B9 ?BEL 02E5 ?BELD 08B1 ?BLNK 0DA6
?BRK 0D11 ?BRK1 0D37 ?BRK2 0D28 ?BRK3 0D28 ?CLER 0FD8
?CLRAFF 07C8 ?DACL 08CE ?DINT 0FDD ?DPCT 0DDC ?DPS 0DB5
?DSPA 0D7C ?ER 00CF ?FLAS 09FF ?GET 08B3 ?GETL 07A8
?KEY 08CA ?KY1 08D6 ?KY10 08EF ?KY11 08EA ?KY2 08F2
?KY3 0922 ?KY4 092F ?KY5 091E ?KY6 092A ?KY7 093A
?KY8 08CD ?KY9 093F ?LOAD 05F5 ?LTNL 0980 ?MIDY 0188
?MODE 074D ?MSG 0893 ?MSG1 08A1 ?NL 097B ?NT1 0184
?PN12 0FCA ?PONT 0FB1 ?PRNT 0995 ?PRT 0946 ?PRTS 0993
?PRT1 0984 ?RDD 04EF ?RDI 04CF ?RSTR 0EE5 ?RSTR1 0EE6
?SAVE 0263 ?SMEP 0450 ?TEMP 02EC ?TMR1 0361 ?TMR2 036B
?TMRD 0344 ?TMS1 0323 ?TMS2 0336 ?TMS3 032A ?VRFY 0575
?WRD 0470 ?WRI 0436 ALPH1 0EE2 ALPH2 09E1 ANP1 119B
ASC 03DA ATBL 04B5 ATRB 10F0 AUTX 09E1 AUT2 0807
AUT03 07C4 AUT05 0824 AUTOL 0810 BELL 003E BRKEY 001E
BUFER 11A3 CHP1 084B CHGPA 083E CHGPK 0841 CYS1 0720
CKS2 072F CKS3 0733 CKSUM 071A CLEAR 09E6 CLEAR1 09E8
CLRS 0EB3 CLRS1 0ED1 COMNT 1108 CONTO 0004 CONT1 0005
CONT2 0E06 CONTF 0007 CR 0F73 CR2 0F8B CR3 0F99
CSMDT 1199 CSTPT 0003 CSTR 0002 CTBL 00FF CURS1 0E66
CURS2 0E86 CURS3 0E69 CURS4 0E93 CURS5 0EAA CURS6 0ED7
CURSD 0E5D CURSL 0E95 CURSU 0E7B CURSU 0E7A
DACL1 0BE3 DACN2 0BDF DACN3 0BE0 DEL 0EF2 DEL1 0F0A
DEL2 0F1D DLY1 0759 DLY2 0760 DLY3 09A2
DHT 0857 DPRNT 1194 DSP01 0DBA DSP02 0097 DSP03 0090
DSP04 08D0 DSPX1 1171 DTADR 1104 EDG1 0607 ED02 0615
EDGE 0601 EXADR 1106 FD 00C7 FDI 00CE F02 00CA
FLAS1 0A12 FLAS2 0A0B FLAS3 0A0F FLASH 118E FLSD1 1192
GAP 077A GAP1 078E GAP2 0796 GAP3 079C GAPCK 0FE2
GAPCK1 0FE8 GAPCK2 0FED GAPCK3 0FFD GETKY 001B GETL 0003
GETL0 07AC GETL1 07B6 GETL11 081A GETL2 0803 GETL3 085B
GETL5 0839 GETL6 0865 GETLA 0866 GETLB 0863 GETLC 084E
GETLD 08E1 GETLL 03D5 GETLR 0880 GETO 00BB HEX 03F9
HEX1 03F2 HEX2 03F5 HEXJ 03E5 HL1 041D HLHEX 0410
HOM0 0409 HOM00 0E04 HOM1 0406 HOME 03FB IRUFE 10F0
INST 0F2D INST1 0F4F KANA 0EE6 KANAF 1170 KANST 0903
KDATW 114E KEYFA 0000 KEYFB 0001 KEYPC 0002 KEYPF 0003
KSLO 0270 KSL2 09B9 KTBL 0BEA KTBLC 0CDA KTBLG 0C6A
KTBLG5 0C42 KTBL5 0C32 LETNL 000A LOAO 00DE LOAD 00D9
LOCK 088B LONG 0057 MHTBL 0241 MANG 1173 MANGE 1179
MELDY 0030 MGP.D 029D MGP.1 0283 MGP.2 028F MGPNT 117C
MLD1 0192 MLD2 01C6 MLD3 01CE MLD4 01D2 MLD5 01D5
MLDS1 02C4 MLDSP 028E MLDST 02AB MONIT 0000 MOT1 06A8
MOT2 06AF MOT4 04B9 MOT5 06D8 MOT7 04B7 MOT8 06D0
MOT9 0607 MOTOR 06A3 MSG 0015 MS0#1 089E MS0#2 0DA0
MSG#3 06F4 MS0#7 0467 MS01 089A MS0#22 00F7 MS0#3 0100
MS0E1 0118 MS0X 0018 MS0X1 0844 MS0X2 0847 MST1 0705
MST2 070C MS12 0717 MSTA 0044 MSTOP 0700 MSTP 0047
MTBL 0229 NAME 10F1 NL 0009 NOADD 03E2 OCTV 11A0
ONP1 01E0 ONP2 01ED ONP3 094B ONFU 01DD ONTYO 119F
OPTBL 0259 PAGE 09C7 PAGETP 117D FBIAS 117A PRNT 0012
PRNT2 0967 PRNT3 096C PRNT4 096F PRNT5 0955 PRNTS 000C
PRNT 000F PRTHL 03BA PRTHX 03C3 RAT10 11A1 RBY1 0630
RBY2 0649 RBY3 0654 RBYE 0624 RD1 04DD RDDAT 002A
RDINF 0027 RE11 04CB RET2 0552 RET3 049F REV 0A17
REV1 0A25 REVFLG 1190 ROL2 0F68 ROLD 0F59 ROLEND 117F
ROLTOP 117E ROLU 0F9F ROLU1 0FA9 ROLUP 05E8 RTAPE 0505

```

```

RTP1 050A RTP2 0510 RTP3 052A RTP4 0532 RTP5 0563
RTP6 0570 RTP7 056C RTP8 0551 RTP9 0572 RYTHM 02CB
SCRN 0000 SCROL 0E1F SCROLL1 0E32 SCROLL2 0E42 SFTLK 118F
SO 00C1 SHORT 0D3E SIZE 1102 SP 10F0 SPAGE 1191
SS 0089 ST1 0095 ST2 00A3 START 004A STROF 1193
SUMDT 1197 SUNDG 0008 SNEP0 0A76 SNEP01 0A74 SNEP11 0A8E
SNEP2 0A4C SNEP3 0A92 SNEP4 073E SNEP6 0A62 SNEP7 0AA5
SNEP8 0A40 SNEP9 0A8A SUPM 1164 SMRK 119D TEMP 0008
TEMPH 119E TTHFO 119C TIMIN 0379 TIMRD 003B TIMST 0023
TMI 0873 TM2 0876 TM3 0689 TM4 069F THARK 0658
THCNT 1195 TVF1 05A0 TVF2 05A6 TVF3 05BA TVRFY 0598
VERFY 002D VGOFF 0756 WBY1 076D WBYTE 0767 WRDAT 0024
WRI1 0444 WRI2 045E WRI3 046A WRI4 0464 WRI5 0464 WRI6 0464
WRI7 0464 WRI8 0464 WRI9 0464 WRI0 0464 WRI1 0464
WTAP2 049E WTAP3 04CB WTAPE 0485 XTEMP 0041

```

Hardware Configuration of the MZ-80A

Chapter

3

3.1 The MZ-80A system configuration

Figure 3.1 shows the standard system configuration of the MZ-80A personal computer.

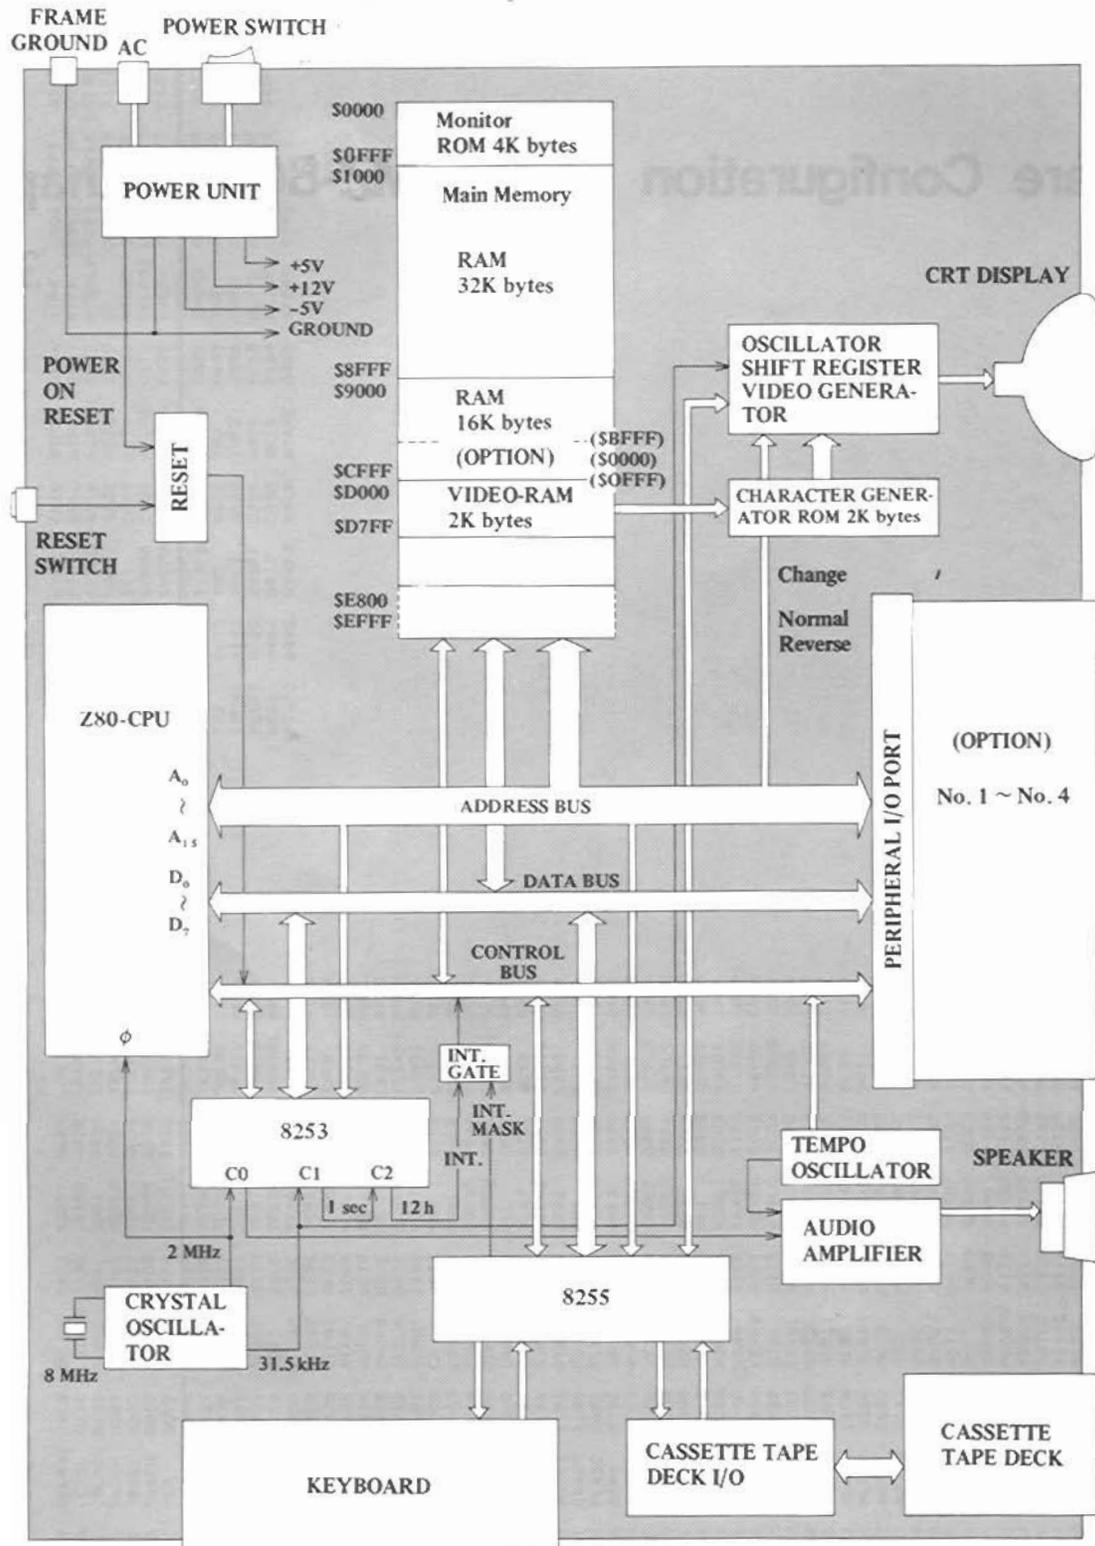


Figure 3.1 MZ-80A System Diagram

As is shown in the figure, a Z80 (Sharp LH0080) is used as the CPU, and is operated with a clock of 2 MHz. The CPU is reset when the power is turned on or when the reset switch is manually operated. The memory configuration corresponding to address buses \$0000-\$FFFF is as follows.

\$0000-\$0FFF is used for the monitor program (ROM); the large 48 K byte space from \$1000-\$CFFF is used as main memory (memory from \$9000-\$CFFF is optional); addresses from \$D000 on are used for video RAM, floppy control, and memory mapped I/O.

The keyboard and cassette tape deck are controlled by means of programmable peripheral interface 8255. Further, a rectangular audio wave generated by the output port of counter 1 of programmable interval timer 8253 is input to the sound generator, which outputs sound to the speaker. The two counters other than this IC serve as internal clocks for the MZ-80A.

Table 3.1 shows the configuration of MZ-80A memory mapped I/O.

Table 3.1 Assignment of memory mapped I/O.

Address	Memory Read	Memory Write	Device
\$E000		D ₇ : Resets cursor timer D ₃ ~ D ₀ : Key strobe	8255
\$E001	D ₇ ~ D ₀ : Key data		
\$E002	D ₇ : V-Blank D ₆ : Status of cursor timer D ₅ : Read data (cassette) D ₄ : READ/WRITE status (cassette)	D ₃ : Motor ON/OFF (cassette) D ₂ : Masking of timer interrupt D ₁ : Write data (cassette) D ₀ : V-Gate	
\$E003		Mode control	
\$E004		Setting of counter # 0	8253
\$E005	Reading of counter # 1	Setting of counter # 1	
\$E006	Reading of counter # 2	Setting of counter # 2	
\$E007		Mode control	
\$E008	D ₇ : Status of tempo timer D ₀ : H-Blank	D ₀ : Sound ON/OFF	
\$E00C	Memory swap		
\$E010	Resets memory swap		
\$E014	Normal (CRT display)		
\$E015	Reverse (CRT display)		
\$E200 ~ \$E2FF	Roll up/roll down		

3.1.2 Key scanning system

The relationship between strobe signals and bit data during keyboard scanning is shown in Figure 3.6.

Strobe signals are delivered to four terminals (PA_3 , PA_2 , PA_1 , PA_0) of the 8255, fed into BCD-to-decimal decoder/driver 74145, then delivered to 10 keyboard strobe input terminals. Keys are discriminated by strobe signals and key data.

For instance when the strobe is '2H' and the key data is 'FBH', it indicates that the **S** key is being pressed.


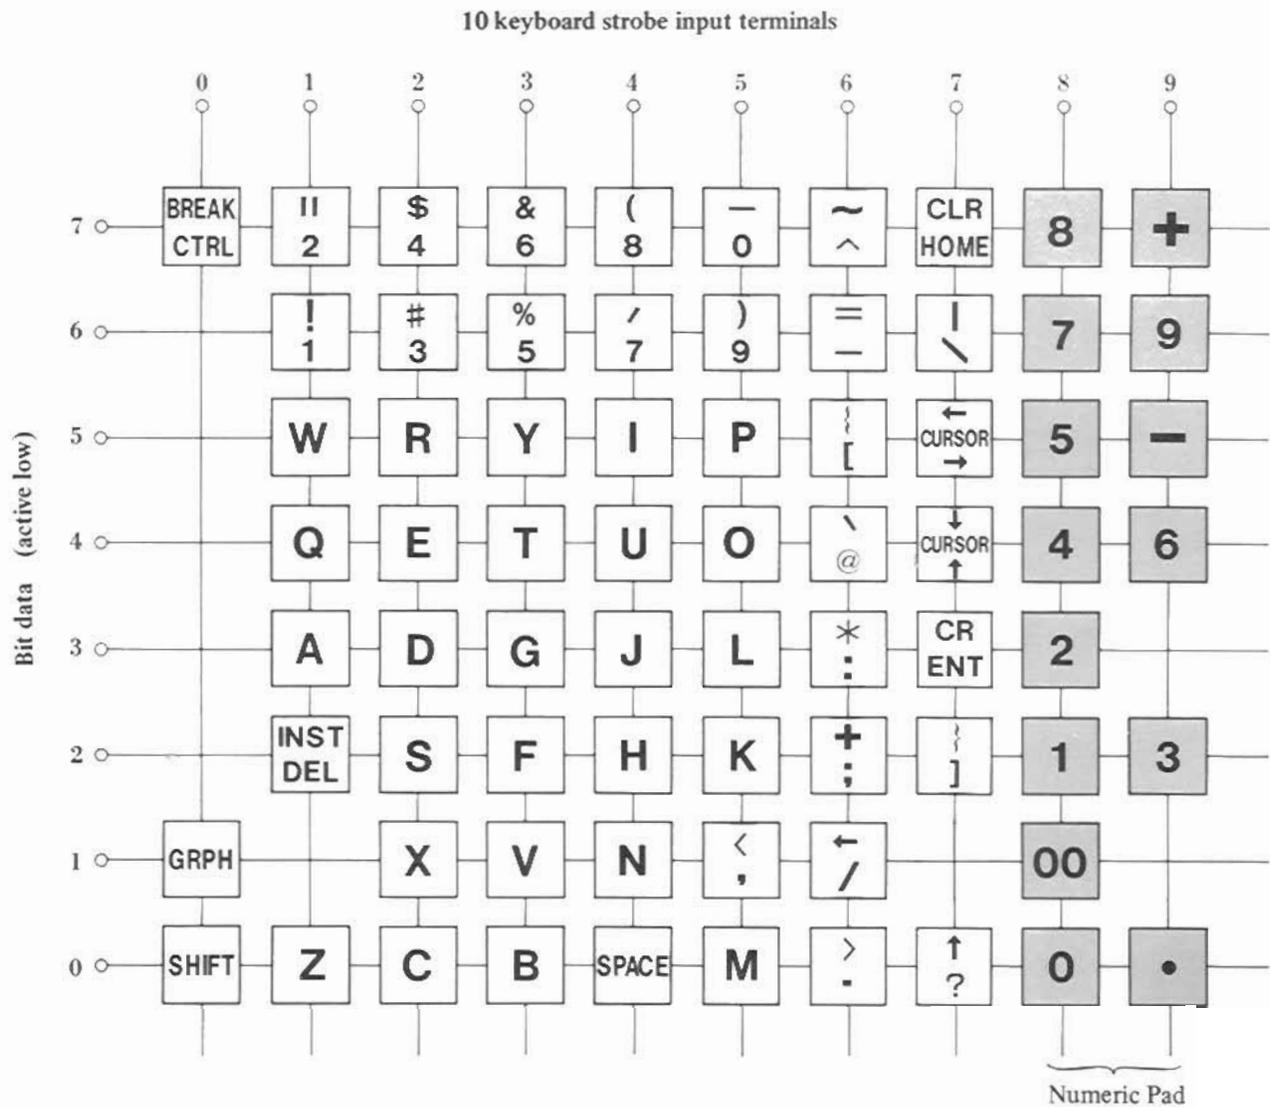


Figure 3.6 Key scanning strobe signal and bit data.




3.2 The MZ-80A circuit diagram

This section includes MZ-80A CPU board circuit diagrams for reference. These diagrams are arranged as follows:

- (1) CPU board, block 1 : CPU signal system
- (2) CPU board, block 2
- (3) CPU board, block 3 : RAM signal system
- (4) CPU board, block 4 : 8255 and 8253 signal system
- (5) CPU board, block 5 : Peripheral I/O port and power terminal

Figure 3.8 CPU board, block 2

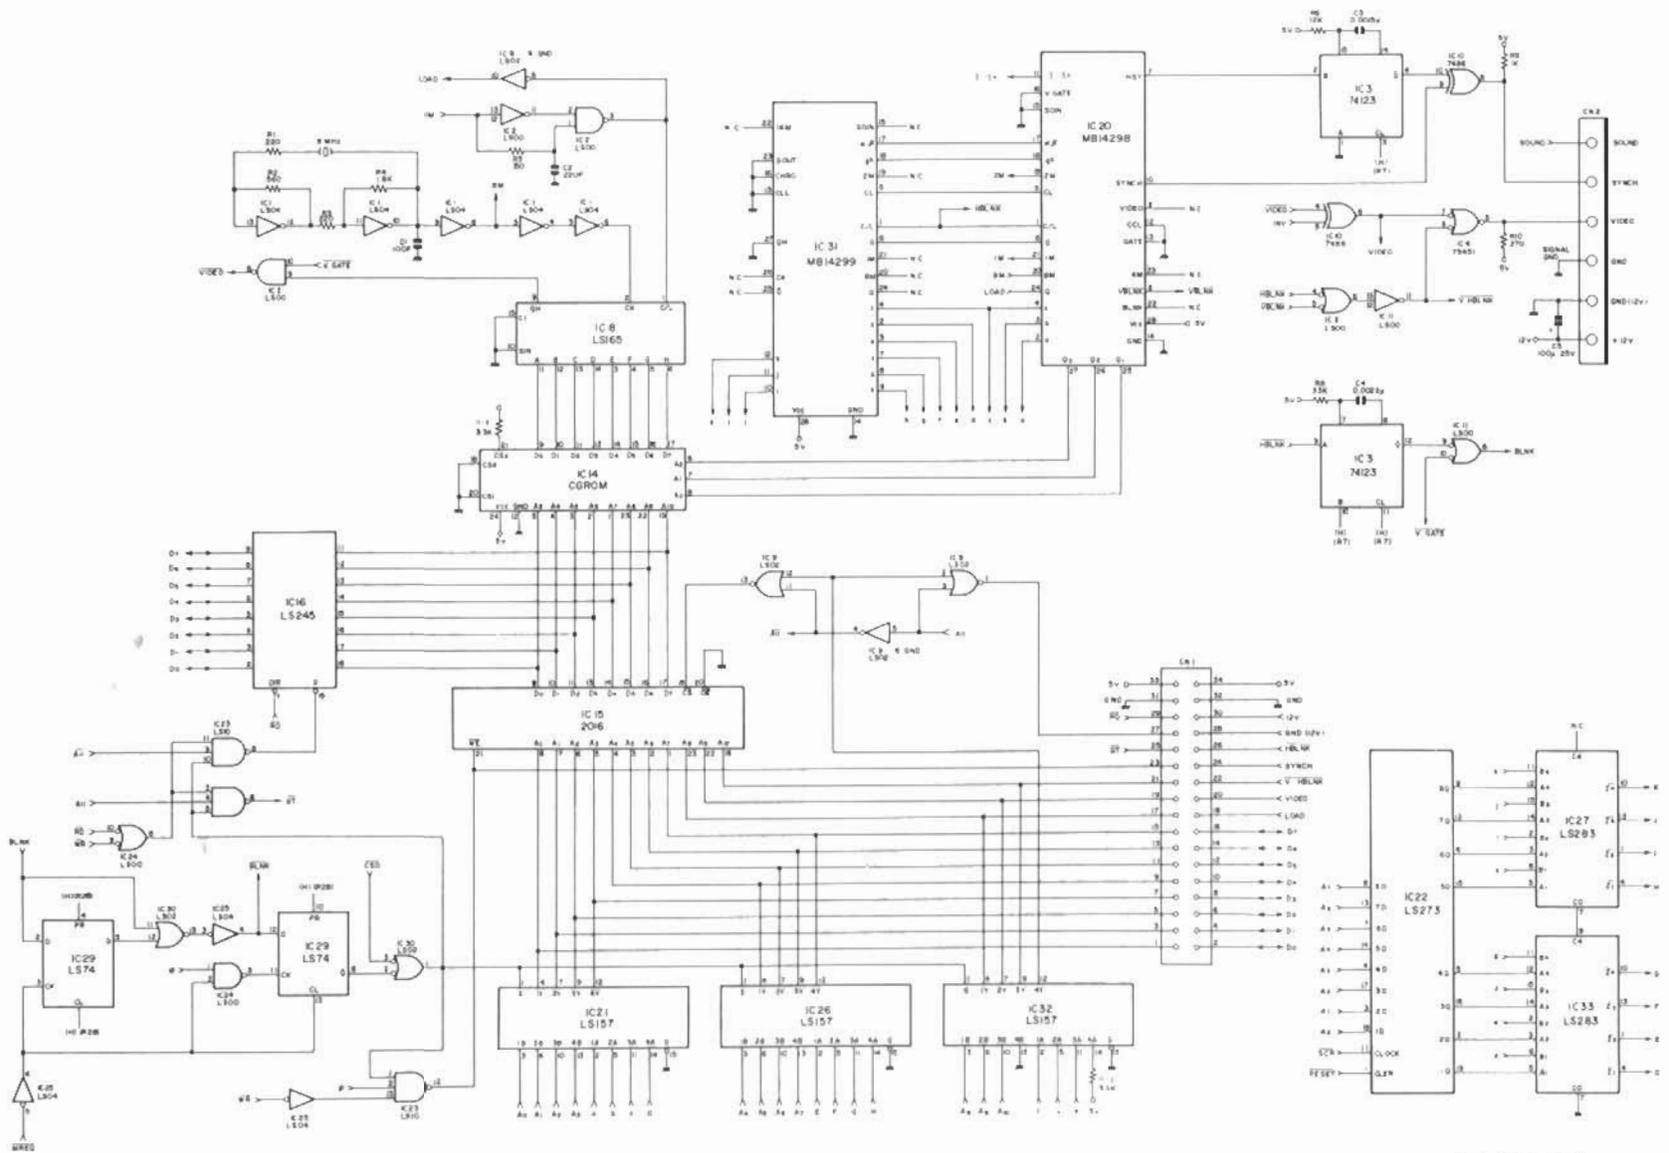

MZ-80A (2/5)

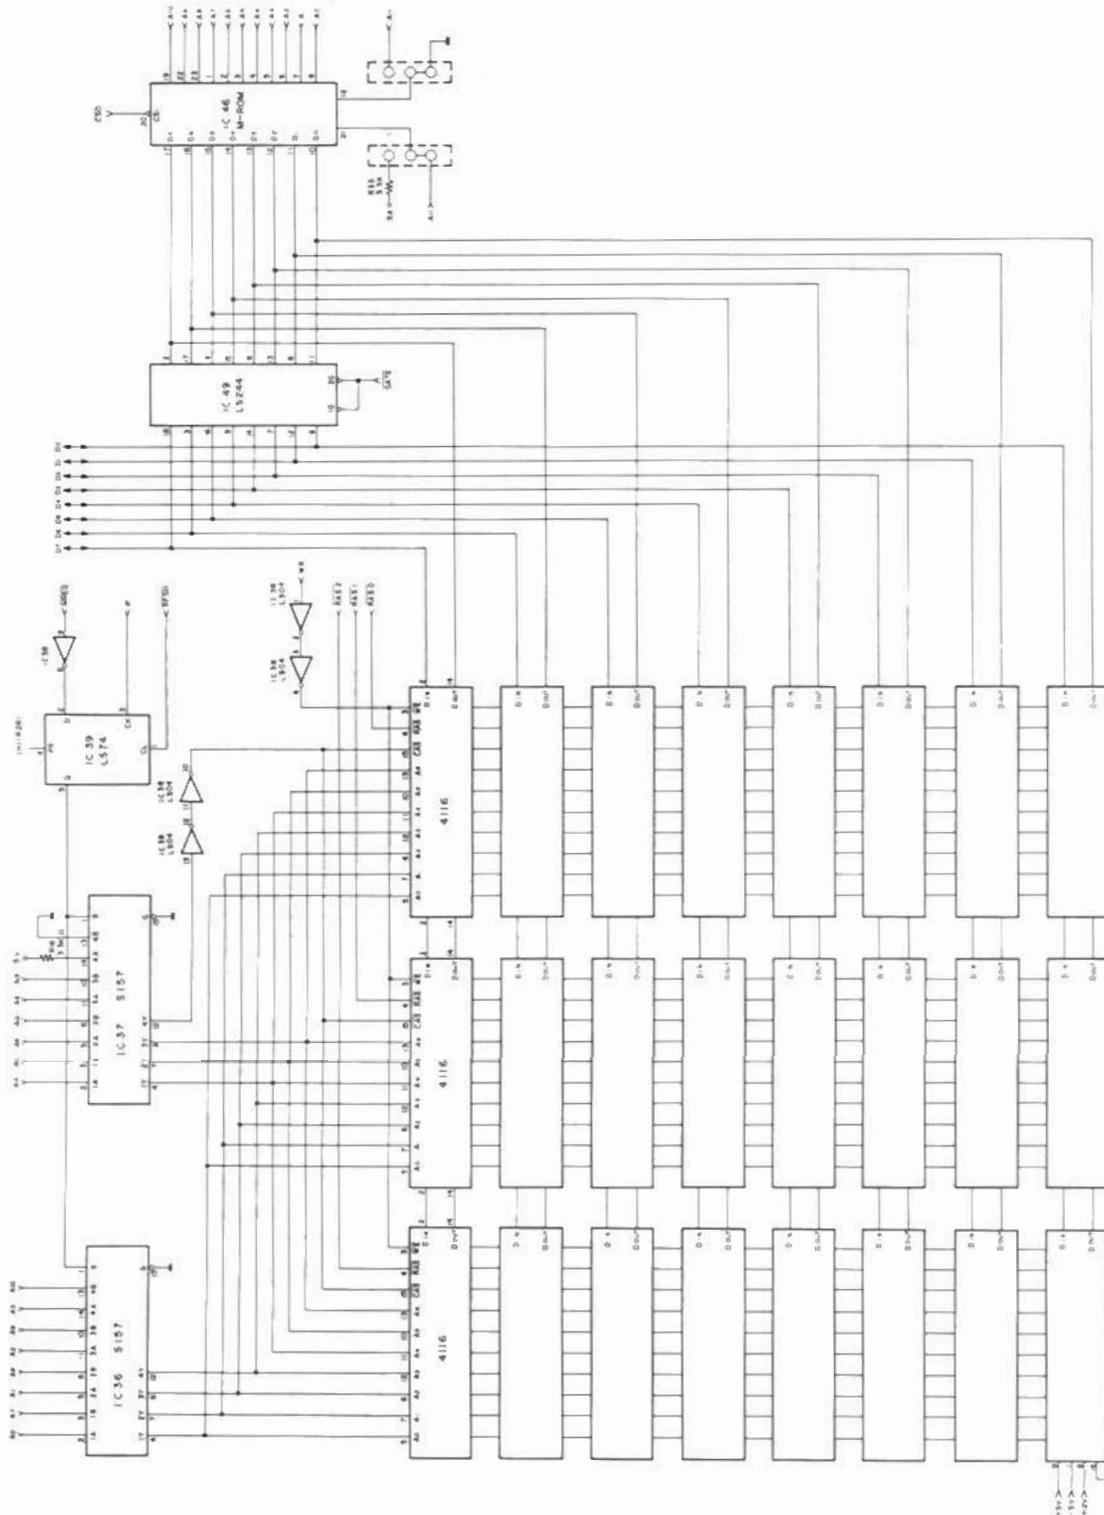


Figure 3.9 CPU board, block 3: RAM signal system


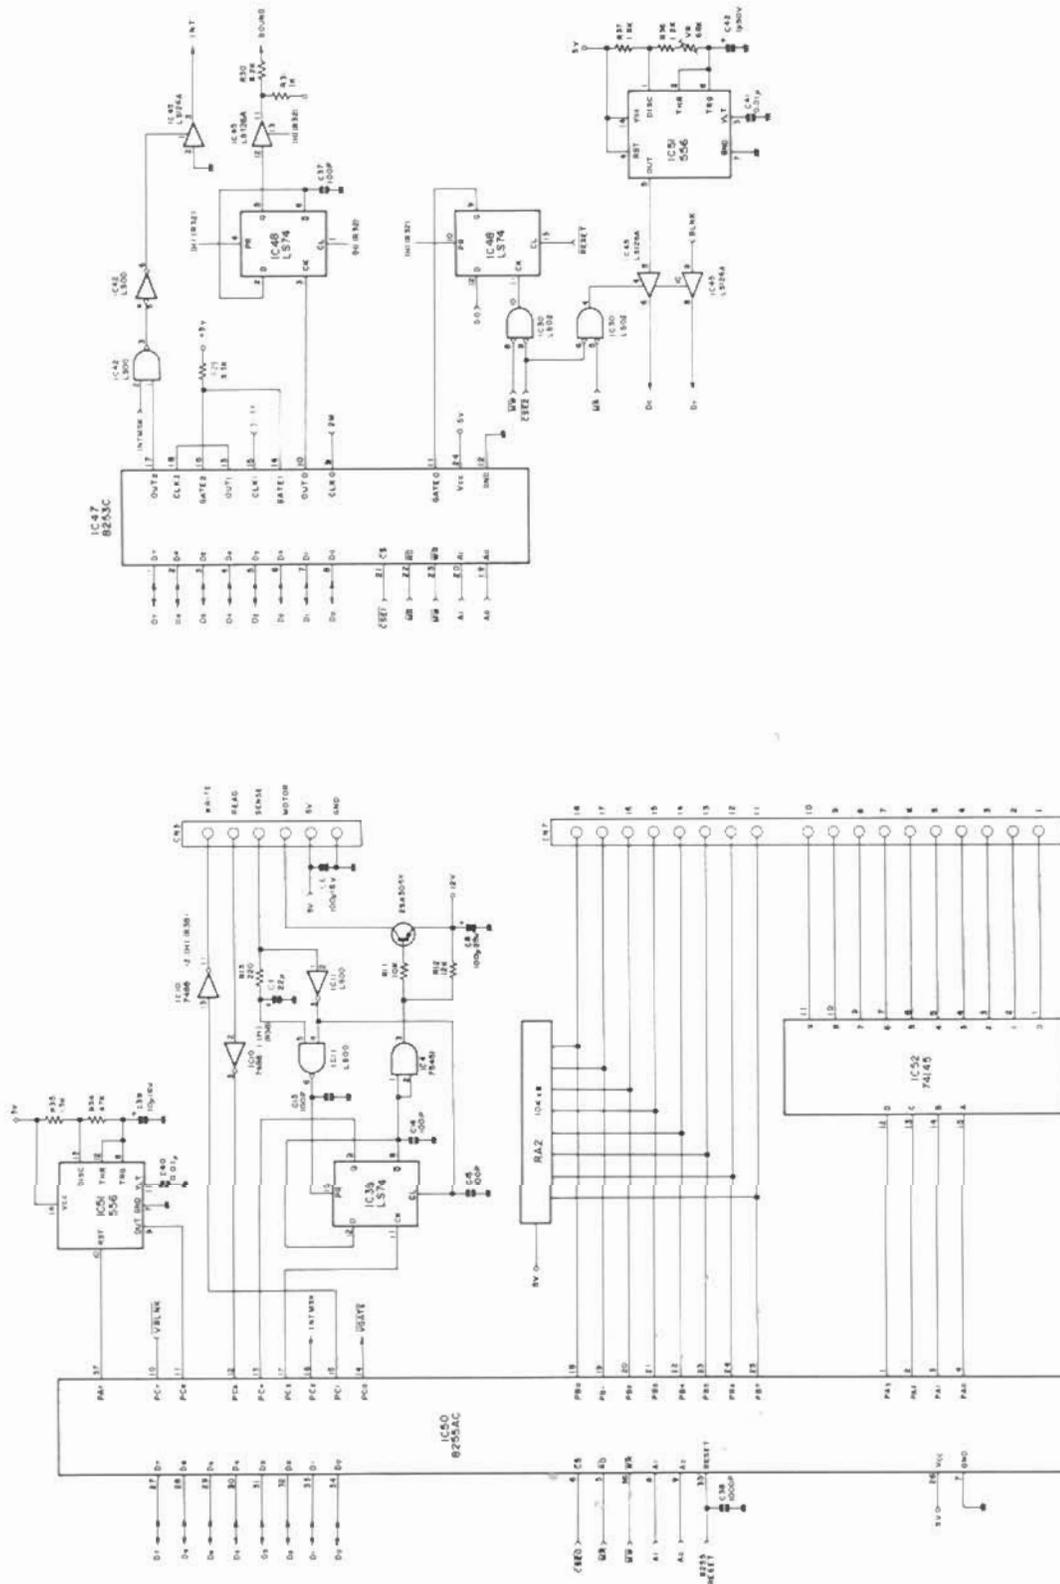


Figure 3.10 CPU board, block 4 : 8255 and 8253 signal system

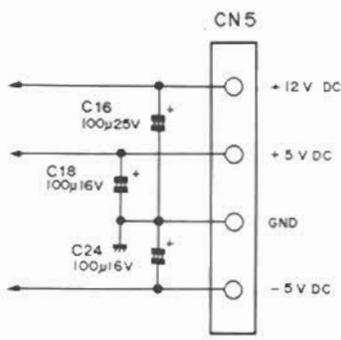

CN 4

	A	B
1	D1	D0
2	D3	D2
3	GND	GND
4	D5	D4
5	D7	D6
6	GND	A0
7	RESET	A1
8	GND	A2
9	$\overline{\text{HALT}}$	A3
10	$\overline{\text{M}}\overline{\text{T}}$	A4
11	GND	A5
12	$\overline{\text{WR}}$	A6
13	$\overline{\text{RD}}$	A7
14	GND	A8
15	$\overline{\text{T}}\overline{\text{OREQ}}$	A9
16	$\overline{\text{M}}\overline{\text{REQ}}$	A10
17	GND	A11
18	EXINT	A12
19	GND	A13
20	NMI	A14
21	$\overline{\text{EX}}\overline{\text{ WAIT}}$	A15
22	$\overline{\text{EX}}\overline{\text{ RESET}}$	ϕ

A : PARTS SIDE

MZ-80A(5/5)

Figure 3.11 CPU board, block 5 : Peripheral I/O port and power terminal



3.3 Expansion equipments

A variety of peripheral devices is available for expanding the MZ-80A personal computer system. Figure 3.12 shows a typical expanded system configuration. With the floppy disk drive, numerous data and program files can be stored and accessed at high speed. With the printer, hard copies of listings and printed graphic patterns can be obtained. This improved processing efficiency, resulting in a wider range of applications.

The MZ-80FB dual floppy disk drive uses a double density mini-floppy diskette (286K bytes/diskette) with a diameter of 5.25 inches, both sides of which are used for recording. It enables use of the DISK BASIC interpreters, which is suitable for practical business applications of the double precision DISK BASIC interpreter, which performs 16 digit BCD operations. Thus, the expanded system exhibits an ability which is comparable with that of larger computers with the aid of a variety of the floppy disk operating system software.



Figure 3.12 Typical expansion system

Figure 3.13 shows peripheral devices which can be connected to the MZ-80A. Devices which are enclosed in a thick solid line are interface cards or RAM blocks and they are connected to the expansion I/O port via interface terminals or connected to the specified connectors in the main cabinet.

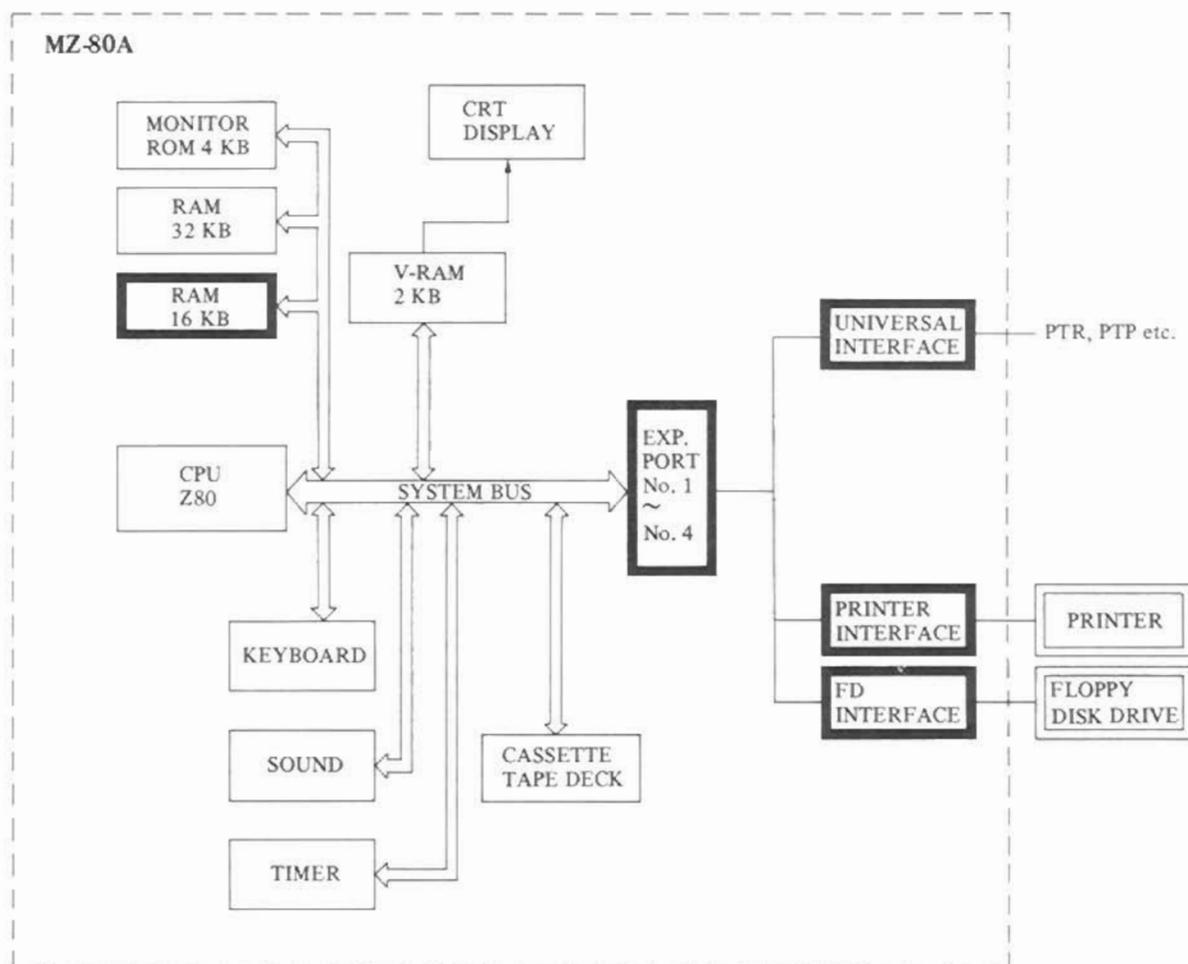


Figure 3.13 MZ-80A system expansion.


WARNING AND CAUTION

- Warning :** Dangerous voltage is inside of the main cabinet. Leave the installation of optional devices which can be connected in the main cabinet to your dealer.
- Caution :** If the power is turned on with the upper part of the main cabinet lifted, electrical parts may be damaged.
- Metal articles remaining in the cabinet can cause serious trouble.
- Ensure that no paper clips or other metallic articles fall into cabinet.

3.4 Technical data of Z-80 CPU

1.0 ARCHITECTURE

A block diagram of the internal architecture of the Z-80 CPU is shown in Figure 1.0-1. The diagram shows all of the major elements in the CPU and it should be referred to throughout the following description.

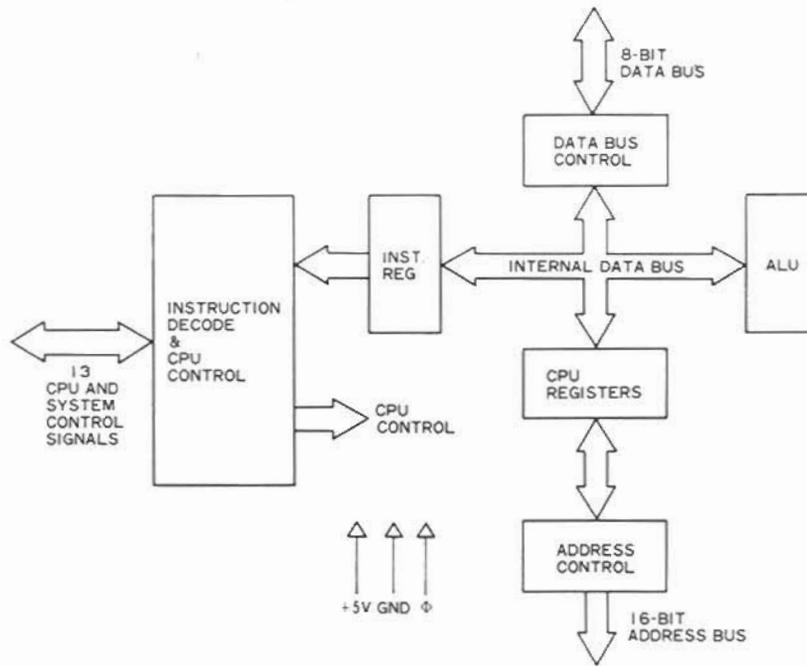


Z-80 CPU BLOCK DIAGRAM
FIGURE 1.0-1

1.1 CPU REGISTERS

The Z-80 CPU contains 208 bits of R/W memory that are accessible to the programmer. Figure 1.0-2 illustrates how this memory is configured into eighteen 8-bit registers and four 16-bit registers. All Z-80 registers are implemented using static RAM. The registers include two sets of six general purpose registers that may be used individually as 8-bit registers or in pairs as 16-bit registers. There are also two sets of accumulator and flag registers.

Special Purpose Registers

1. **Program counter (PC).** The program counter holds the 16-bit address of the current instruction being fetched from memory. The PC is automatically incremented after its contents have been transferred to the address lines. When a program jump occurs the new value is automatically placed in the PC, overriding the incrementer.
2. **Stack Pointer (SP).** The stack pointer holds the 16-bit address of the current top of a stack located anywhere in external system RAM memory. The external stack memory is organized as a last-in first-out (LIFO) file. Data can be pushed onto the stack from specific CPU registers or popped off of the stack into specific CPU registers through the execution of PUSH and POP instructions. The data popped from the stack is always the last data pushed onto it. The stack allows simple implementation of multiple level interrupts, unlimited subroutine nesting and simplification of many types of data manipulation.

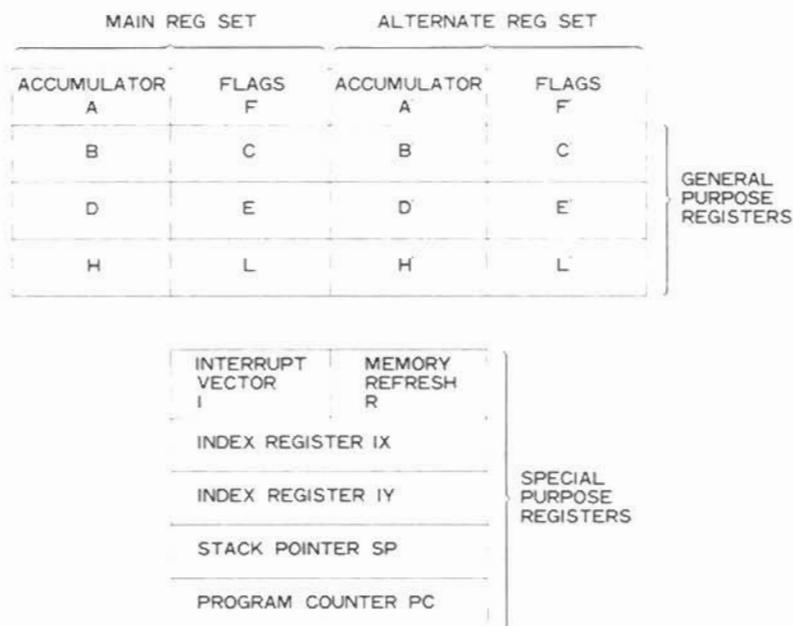

Z-80 CPU REGISTER CONFIGURATION
FIGURE 1.0-2

- Two Index Registers (IX & IY).** The two independent index registers hold a 16-bit base address that is used in indexed addressing modes. In this mode, an index register is used as a base to point to a region in memory from which data is to be stored or retrieved. An additional byte is included in indexed instructions to specify a displacement from this base. This displacement is specified as a two's complement signed integer. This mode of addressing greatly simplifies many types of programs, especially where tables of data are used.
- Interrupt Page Address Register (I).** The Z-80 CPU can be operated in a mode where an indirect call to any memory location can be achieved in response to an interrupt. The I Register is used for this purpose to store the high order 8-bits of the indirect address while the interrupting device provides the lower 8-bits of the address. This feature allows interrupt routines to be dynamically located anywhere in memory with absolute minimal access time to the routine.
- Memory Refresh Register (R).** The Z-80 CPU contains a memory refresh counter to enable dynamic memories to be used with the same ease as static memories. Seven bits of this 8-bit register are automatically incremented after each instruction fetch. The eighth bit will remain as programmed as the result of an LD R, A instruction. The data in the refresh counter is sent out on the lower portion of the address but along with a refresh control signal while the CPU is decoding and executing the fetched instruction. This mode of refresh is totally transparent to the programmer and does not slow down the CPU operation. The programmer can load the R register for testing purposes, but this register is normally not used by the programmer. During refresh, the contents of the I register are placed on the upper 8 bits of the address bus.

Accumulator and Flag Registers

The CPU includes two independent 8-bit accumulators and associated 8-bit flag registers. The accumulator holds the results of 8-bit arithmetic or logical operations while the flag register indicates specific conditions for 8 or 16-bit operations, such as indicating whether or not the result of an operation is equal to zero. The programmer selects the accumulator and flag pair that he wishes to work with a single exchange instruction so that he may easily work with either pair.

General Purpose Registers

There are two matched sets of general purpose registers, each set containing six 8-bit registers that may be used individually as 8-bit registers or as 16-bit register pairs by the programmer. One set is called BC, DE and HL while the complementary set is called BC', DE' and HL'. At any one time the programmer can select either set of registers to work with through a single exchange command for the entire set. In systems where fast interrupt response is required, one set of general purpose registers and an accumulator/flag register may be reserved for handling this very fast routine. Only a simple exchange commands need be executed to go between the routines. This greatly reduces interrupt service time by eliminating the requirement for saving and retrieving register contents in the external stack during interrupt or subroutine processing. These general purpose registers are used for a wide range of applications by the programmer. They also simplify programming, especially in ROM based systems where little external read/write memory is available.

1.2 ARITHMETIC AND LOGIC UNIT (ALU)

The 8-bit arithmetic and logical instructions of the CPU are executed in the ALU. Internally the ALU communicates with the registers and the external data bus on the internal data bus. The type of functions performed by the ALU include:


- Add
- Subtract
- Logical AND
- Logical OR
- Logical Exclusive OR
- Compare
- Left or right shifts or rotates (arithmetic and logical)
- Increment
- Decrement
- Set bit
- Reset bit
- Test bit

1.3 INSTRUCTION REGISTER AND CPU CONTROL

As each instruction is fetched from memory, it is placed in the instruction register and decoded. The control section performs this function and then generates and supplies all of the control signals necessary to read or write data from or to the registers, control the ALU and provide all required external control signals.

2.0 PIN DESCRIPTION

The Z-80 CPU is packaged in an industry standard 40 pin Dual In-Line Package. The I/O pins are shown in Figure 2.0-1 and the function of each is described below.

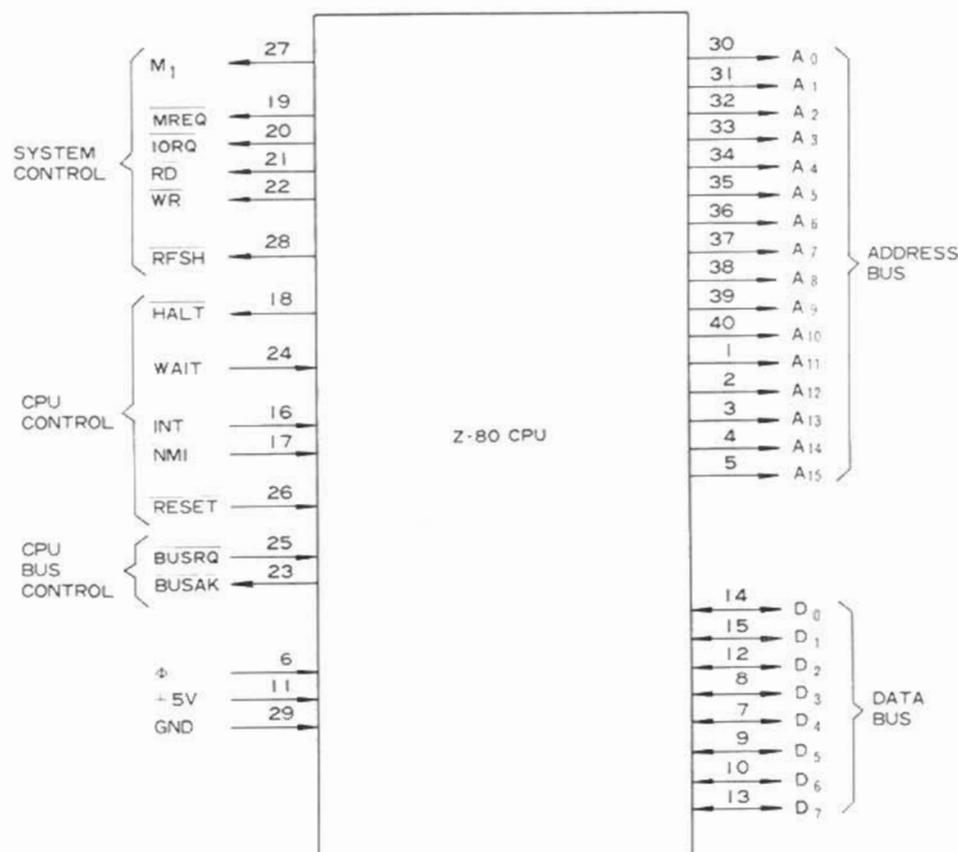

Z-80 PIN CONFIGURATION
FIGURE 2.0-1

A_0 - A_{15}
(Address Bus)

Tri-state output, active high. A_0 - A_{15} constitute a 16-bit address bus. The address bus provides the address for memory (up to 64K bytes) data exchanger and for I/O device data exchanges. I/O addressing uses the 8 lower address bits to allow the user to directly select up to 256 input or 256 output ports. A_0 is the least significant address bit. During refresh time, the lower 7 bits contain a valid refresh address.

D_0 - D_7
(Data Bus)

Tri-state input/output, active high. D_0 - D_7 constitute an 8-bit bidirectional data bus. The data bus is used for data exchanges with memory and I/O devices.

\overline{M}_1
(Machine Cycle one)

Output, active low. \overline{M}_1 indicates that the current machine cycle is the OP code fetch cycle of an instruction execution. Note that during execution of 2-byte op-codes, \overline{M}_1 is generated as each op code byte is fetched. These two byte op-codes always begin with CBH, DDH, EDH or FDH. \overline{M}_1 also occurs with \overline{IORQ} to indicate an interrupt acknowledge cycle.

\overline{MREQ}
(Memory Request)

Tri-state output, active low. The memory request signal indicates that the address bus holds a valid address for a memory read or memory write operation.

$\overline{\text{IORQ}}$ (Input/Output Request)	Tri-state output, active low. The $\overline{\text{IORQ}}$ signal indicates that the lower half of the address bus holds a valid I/O address for a I/O read or write operation. An $\overline{\text{IORQ}}$ signal is also generated with an $\overline{\text{M}_1}$ signal when an interrupt is being acknowledged to indicate that an interrupt response vector can be placed on the data bus. Interrupt Acknowledge operations occur during M_1 time while I/O operations never occur during M_1 time.
$\overline{\text{RD}}$ (Memory Read)	Tri-state output, active low. $\overline{\text{RD}}$ indicates that the CPU wants to read data from memory or an I/O device. The addressed I/O device or memory should use this signal to gate data onto the CPU data bus.
$\overline{\text{WR}}$ (Memory Write)	Tri-state output, active low. $\overline{\text{WR}}$ indicates that the CPU data bus holds valid data to be stored in the addressed memory or I/O device.
$\overline{\text{RFSH}}$ (Refresh)	Output, active low. $\overline{\text{RFSH}}$ indicates that the lower 7 bits of the address bus contain a refresh address for dynamic memories and the current $\overline{\text{MREQ}}$ signal should be used to do a refresh read to all dynamic memories.
$\overline{\text{HALT}}$ (Halt state)	Output, active low. $\overline{\text{HALT}}$ indicates that the CPU has executed a HALT software instruction and is awaiting either a non maskable or a maskable interrupt (with the mask enabled) before operation can resume. While halted, the CPU executes NOP's to maintain memory refresh activity.
$\overline{\text{WAIT}}$ (Wait)	Input, active low. $\overline{\text{WAIT}}$ indicates to the Z-80 CPU that the addressed memory or I/O devices are not ready for a data transfer. The CPU continues to enter wait states for as long as this signal is active. This signal allows memory or I/O devices of any speed to be synchronized to the CPU.
$\overline{\text{INT}}$ (Interrupt Request)	Input, active low. The Interrupt Request signal is generated by I/O devices. A request will be honored at the end of the current instruction if the internal software controlled interrupt enable flip-flop (IFF) is enabled and if the $\overline{\text{BUSRQ}}$ signal is not active. When the CPU accepts the interrupt, an acknowledge signal ($\overline{\text{IORQ}}$ during M_1 time) is sent out at the beginning of the next instruction cycle. The CPU can respond to an interrupt in three different modes.
$\overline{\text{NMI}}$ (Non Maskable Interrupt)	Input, negative edge triggered. The non maskable interrupt request line has a higher priority than $\overline{\text{INT}}$ and is always recognized at the end of the current instruction, independent of the status of the interrupt enable flip-flop. $\overline{\text{NMI}}$ automatically forces the Z-80 CPU to restart to location 0066_{H} . The program counter is automatically saved in the external stack so that the user can return to the program that was interrupted. Note that continuous $\overline{\text{WAIT}}$ cycles can prevent the current instruction from ending, and that a $\overline{\text{BUSRQ}}$ will override a $\overline{\text{NMI}}$.

$\overline{\text{RESET}}$	Input, active low, $\overline{\text{RESET}}$ forces the program counter to zero and initializes the CPU. The CPU initialization includes: <ol style="list-style-type: none">1) Disable the interrupt enable flip-flop2) Set Register I = 00_H3) Set Register R = 00_H4) Set Interrupt Mode 0
	During reset time, the address bus and data bus go to a high impedance state and all control output signals go to the inactive state.
$\overline{\text{BUSRQ}}$ (Bus Request)	Input, active low. The bus request signal is used to request the CPU address bus, data bus and tri-state output control signals to go to a high impedance state so that other devices can control these buses. When $\overline{\text{BUSRQ}}$ is activated, the CPU will set these buses to a high impedance state as soon as the current CPU machine cycle is terminated.
$\overline{\text{BUSAk}}$ (Bus Acknowledge)	Output, active low. Bus acknowledge is used to indicate to the requesting device that the CPU address bus, data bus and tri-state control bus signals have been set to their high impedance state and the external device can now control these signals.
Φ	Single phase TTL level clock which requires only a 330 ohm pull-up resistor to +5 volts to meet all clock requirements. (2 MHz)

3.0 INSTRUCTION SET

The Z-80 CPU can execute 158 different instruction types including all 78 of the 8080A CPU. The instructions can be broken down into the following major groups:

- Load and Exchange
- Block Transfer and Search
- Arithmetic and Logical
- Rotate and Shift
- Bit Manipulation (set, reset, test)
- Jump, Call and Return
- Input/Output
- Basic CPU Control

3.1 INTRODUCTION TO INSTRUCTION TYPES

The load instructions move data internally between CPU registers or between CPU registers and external memory. All of these instructions must specify a source location from which the data is to be moved and a destination location. The source location is not altered by a load instruction. Examples of load group instructions include moves between any of the general purpose registers such as move the data to Register B from Register C. This group also includes load immediate to any CPU register or to any to Register B from Register C. This group also includes load immediate to any CPU register or to any external memory location. Other types of load instructions allow transfer between CPU registers and memory locations. The exchange instructions can trade the contents of two registers.

A unique set of block transfer instructions is provided in the Z-80. With a single instruction a block of memory of any size can be moved to any other location in memory. This set of block moves is extremely valuable when large strings of data must be processed. The Z-80 block search instructions are also valuable for this type of processing. With a single instruction, a block of external memory of any desired length can be searched for any 8-bit character. Once the character is found or the end of the block is reached, the instruction automatically terminates. Both the block transfer and the block search instructions can be interrupted during their execution so as to not occupy the CPU for long periods of time.

The arithmetic and logical instructions operate on data stored in the accumulator and other general purpose CPU registers or external memory locations. The results of the operations are placed in the accumulator and the appropriate flags are set according to the result of the operation. An example of an arithmetic operation is adding the accumulator to the contents of an external memory location. The results of the addition are placed in the accumulator. This group also includes 16-bit addition and subtraction between 16-bit CPU registers.

The rotate and shift group allows any register or any memory location to be rotated right or left with or without carry either arithmetic or logical. Also, a digit in the accumulator can be rotated right or left with two digits in any memory location.

The bit manipulation instructions allow any bit in the accumulator, any general purpose register or any external memory location to be set, reset or tested with a single instruction. For example, the most significant bit of register H can be reset. This group is especially useful in control applications and for controlling software flags in general purpose programming.

The jump, call and return instructions are used to transfer between various locations in the user's program. This group uses several different techniques for obtaining the new program counter address from specific external memory locations. A unique type of call is the restart instruction. This instruction actually contains the new address as a part of the 8-bit OP code. This is possible since only 8 separate addresses located in page zero of the external memory may be specified. Program jumps may also be achieved by loading register HL, IX or IY directly into the PC, thus allowing the jump address to be a complex function of the routine being executed.


The input/output group of instructions in the Z-80 allow for a wide range of transfers between external memory locations or the general purpose CPU registers, and the external I/O devices. In each case, the port number is provided on the lower 8 bits of the address bus during any I/O transaction. One instruction allows this port number to be specified by the second byte of the instruction while other Z-80 instructions allow it to be specified as the content of the C register. One major advantage of using the C register as a pointer to the I/O device is that it allows different I/O ports to share common software driver routines. This is not possible when the address is part of the OP code if the routines are stored in ROM. Another feature of these input instructions is that they set the flag register automatically so that additional operations are not required to determine the state of the input data (for example its parity). The Z-80 CPU includes single instructions that can move blocks of data (up to 256 bytes) automatically to or from any I/O port directly to any memory location. In conjunction with the dual set of general purpose registers, these instructions provide for fast I/O block transfer rates. The value of this I/O instruction set is demonstrated by the fact that the Z-80 CPU can provide all required floppy disk formatting (i.e., the CPU provides the preamble, address, data and enables the CRC codes) on double density floppy disk drives on an interrupt driven basis.

Finally, the basic CPU control instructions allow various options and modes. This group includes instructions such as setting or resetting the interrupt enable flip flop or setting the mode of interrupt response.

3.2 ADDRESSING MODES


Most of the Z-80 instructions operate on data stored in internal CPU registers, external memory or in the I/O ports. Addressing refers to how the address of this data is generated in each instruction. This section gives a brief summary of the types of addressing used in the Z-80 while subsequent sections detail the type of addressing available for each instruction group.

Immediate. In this mode of addressing the byte following the OP code in memory contains the actual operand.

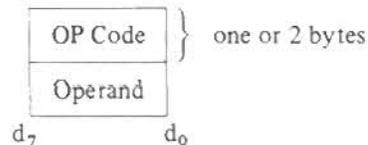


Examples of this type of instruction would be to load the accumulator with a constant, where the constant is the byte immediately following the OP code.

Immediate Extended. This mode is merely an extension of immediate addressing in that the two bytes following the OP codes are the operand.

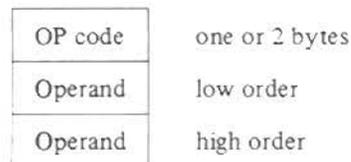


Examples of this type of instruction would be to load the HL register pair (16-bit register) with 16 bits (2 bytes) of data.

Modified Page Zero Addressing. The Z-80 has a special single byte CALL instruction to any of 8 locations in page zero of memory. This instruction (which is referred to as a restart) sets the PC to an effective address in page zero. The value of this instruction is that it allows a single byte to specify a complete 16-bit address where commonly called sub-routines are located, thus saving memory space.

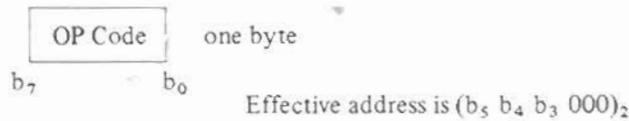


Relative Addressing. Relative addressing uses one byte of data following the OP code to specify a displacement from the existing program to which a program jump can occur. This displacement is a signed two's complement number that is added to the address of the OP code of the following instruction.



The value of relative addressing is that it allows jumps to nearby locations while only requiring two bytes of memory space. For most programs, relative jumps are by far the most prevalent type of jump due to the proximity of related program segments. Thus, these instructions can significantly reduce memory space requirements. The signal displacement can range between +127 and -128 from A+2. This allows for a total displacement of +129 to -126 from the jump relative OP code address. Another major advantage is that it allows for relocatable code.


Extended Addressing. Extended Addressing provides for two bytes (16 bits) of address to be included in the instruction. This data can be an address to which a program can jump or it can be an address where an operand is located.

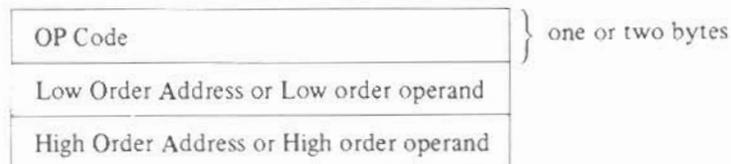

Extended addressing is required for a program to jump from any location in memory to any other location, or load and store data in any memory location.

When extended addressing is used to specify the source or destination address of an operand, the notation (nn) will be used to indicate the content of memory at nn, where nn is the 16-bit address specified in the instruction. This means *that the two bytes of address nn are used as a pointer to a memory location. The use of the parentheses always means that the value enclosed within them is used as a pointer to a memory location.* For example, (1200) refers to the contents of memory at location 1200.

Indexed Addressing. In this type of addressing, the byte of data following the OP code contains a displacement which is added to one of the two index registers (the OP code specifies which index register is used) to form a pointer to memory. The contents of the index register are not altered by this operation.

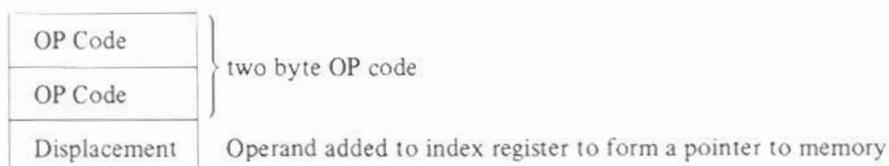

An example of an indexed instruction would be to load the contents of the memory location (Index Register + Displacement) into the accumulator. The displacement is a signed two's complement number. Indexed addressing greatly simplifies programs using tables of data since the index register can point to the start of any table. Two index registers are provided since very often operations require two or more tables. Indexed addressing also allows for relocatable code.

The two index registers in the Z-80 are referred to as IX and IY. To indicate indexed addressing the notation:

$$(IX + d) \text{ or } (IY + d)$$

is used. Here d is the displacement specified after the OP code. The parentheses indicate that this value is used as a pointer to external memory.

Register Addressing. Many of the Z-80 OP codes contain bits of information that specify which CPU register is to be used for an operation. An example of register addressing would be to load the data in register B into register C.

Implied Addressing. Implied addressing refers to operations where the OP code automatically implies one or more CPU registers as containing the operands. An example is the set of arithmetic operations where the accumulator is always implied to be the destination of the results.

Register Indirect Addressing. This type of addressing specifies a 16-bit CPU register pair (such as HL) to be used as a pointer to any location in memory. This type of instruction is very powerful and it is used in a wide range of applications.

OP Code	}	one or two bytes
---------	---	------------------

An example of this type of instruction would be to load the accumulator with the data in the memory location pointed to by the HL register contents. Indexed addressing is actually a form of register indirect addressing except that a displacement is added with indexed addressing. Register indirect addressing allows for very powerful but simple to implement memory accesses. The block move and search commands in the Z-80 are extensions of this type of addressing where automatic register incrementing, decrementing and comparing has been added. The notation for indicating register indirect addressing is to put parentheses around the name of the register that is to be used as the pointer. For example, the symbol

$$(HL)$$

specifies that the contents of the HL register are to be used as a pointer to a memory location. Often register indirect addressing is used to specify 16-bit operands. In this case, the register contents point to the lower order portion of the operand while the register contents are automatically incremented to obtain the upper portion of the operand.

Bit Addressing. The Z-80 contains a large number of bit set, reset and test instructions. These instructions allow any memory location or CPU register to be specified for a bit operation through one of three previous addressing modes (register, register indirect and indexed) while three bits in the OP code specify which of the eight bits is to be manipulated.

ADDRESSING MODE COMBINATIONS

Many instructions include more than one operand (such as arithmetic instructions or loads). In these cases, two types of addressing may be employed. For example, load can use immediate addressing to specify the source and register indirect or indexed addressing to specify the destination.

3.3 INSTRUCTION OF OP CODES AND EXECUTION TIMES

The following section gives a summary of the Z-80 instructions set. The instructions are logically arranged into groups as shown on tables 3.3-1 through 3.3-11. Each table shows the assembly language mnemonic OP code, the actual OP code, the symbolic operation, the content of the flag register following the execution of each instruction, the number of bytes required for each instruction as well as the number of memory cycles and the total number of T states (external clock periods) required for the fetching and execution of each instruction.

All instruction OP codes are listed in binary notation. Single byte OP codes require two hex characters while double byte OP codes require four hex characters. The conversion from binary to hex is repeated here for convenience.

Binary	Hex	Decimal
0000	0	0
0001	1	1
0010	2	2
0011	3	3
0100	4	4
0101	5	5
0110	6	6
0111	7	7
1000	8	8
1001	9	9
1010	A	10
1011	B	11
1100	C	12
1101	D	13
1110	E	14
1111	F	15

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments	
		C	Z	P/V	S	N	H	76	543	210					
LD r,r'	r←r'	●	●	●	●	●	●	01	r	r'	1	1	4	r,r'	Reg.
LD r,n	r←n	●	●	●	●	●	●	00	r	110	2	2	7	000	B
								←	n	→				001	C
LD r,(HL)	r←(HL)	●	●	●	●	●	●	01	r	110	1	2	7	010	D
LD r,(IX+d)	r←(IX+d)	●	●	●	●	●	●	11	011	101	3	5	19	011	E
								01	r	110				100	H
								←	d	→				101	L
LD r,(IY+d)	r←(IY+d)	●	●	●	●	●	●	11	111	101	3	5	19	111	A
								01	r	110					
								←	d	→					
LD (HL),r	(HL)←r	●	●	●	●	●	●	01	110	r	1	2	7		
LD (IX+d),r	(IX+d)←r	●	●	●	●	●	●	11	011	101	3	5	19		
								01	110	r					
								←	d	→					
LD (IY+d),r	(IY+d)←r	●	●	●	●	●	●	11	111	101	3	5	19		
								01	110	r					
								←	d	→					
LD (HL),n	(HL)←n	●	●	●	●	●	●	00	110	110	2	3	10		
								←	n	→					
LD (IX+d),n	(IX+d)←n	●	●	●	●	●	●	11	011	101	4	5	19		
								00	110	110					
								←	d	→					
								←	n	→					
LD (IY+d),n	(IY+d)←n	●	●	●	●	●	●	11	111	101	4	5	19		
								00	110	110					
								←	d	→					
								←	n	→					
LD A,(BC)	A←(BC)	●	●	●	●	●	●	00	001	010	1	2	7		
LD A,(DE)	A←(DE)	●	●	●	●	●	●	00	011	010	1	2	7		
LD A,(nn)	A←(nn)	●	●	●	●	●	●	00	111	010	3	4	13		
								←	n	→					
								←	n	→					
LD (BC),A	(BC)←A	●	●	●	●	●	●	00	000	010	1	2	7		
LD (DE),A	(DE)←A	●	●	●	●	●	●	00	010	010	1	2	7		
LD (nn),A	(nn)←A	●	●	●	●	●	●	00	110	010	3	4	13		
								←	n	→					
								←	n	→					
LD A,I	A←I	●	‡	IFF2	‡	0	0	11	101	101	2	2	9		
								01	010	111					
LD A,R	A←R	●	‡	IFF2	‡	0	0	11	101	101	2	2	9		
								01	011	111					
LD I,A	I←A	●	●	●	●	●	●	11	101	101	2	2	9		
								01	000	111					
LD R,A	R←A	●	●	●	●	●	●	11	101	101	2	2	9		
								01	001	111					

Notes: r, r' means any of the registers A, B, C, D, E, H, L

IFF the content of the interrupt enable flip-flop (IFF) is copied into the P/V flag

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown,
‡ = flag is affected according to the result of the operation.

8-BIT LOAD GROUP
TABLE 3.3-1

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments	
		C	Z	P	V	S	N	H	76	543					
LD dd,nn	dd←nn	•	•	•	•	•	•	00	dd0	001	3	3	10	dd	Pair
		←n→	←n→	00	BC										
LD IX,nn	IX←nn	•	•	•	•	•	•	11	011	101	4	4	14	01	DE
		←n→	←n→	10	HL										
LD IY,nn	IY←nn	•	•	•	•	•	•	11	111	101	4	4	14	11	SP
		←n→	←n→												
LD HL,(nn)	H←(nn+1) L←(nn)	•	•	•	•	•	•	00	101	010	3	5	16		
		←n→	←n→												
LD dd,(nn)	dd _H ←(nn+1) dd _L ←(nn)	•	•	•	•	•	•	11	101	101	4	6	20		
		←n→	←n→	01	dd1	011									
LD IX,(nn)	IX _H ←(nn+1) IX _L ←(nn)	•	•	•	•	•	•	11	011	101	4	6	20		
		←n→	←n→	00	101	010									
LD IY,(nn)	IY _H ←(nn+1) IY _L ←(nn)	•	•	•	•	•	•	11	111	101	4	6	20		
		←n→	←n→	00	101	010									
LD (nn),HL	(nn+1)←H (nn)←L	•	•	•	•	•	•	00	100	010	3	5	16		
		←n→	←n→												
LD (nn),dd	(nn+1)←dd _H (nn)←dd _L	•	•	•	•	•	•	11	101	101	4	6	20		
		←n→	←n→	01	dd0	011									
LD (nn),IX	(nn+1)←IX _H (nn)←IX _L	•	•	•	•	•	•	11	011	101	4	6	20		
		←n→	←n→	00	100	010									
LD (nn),IY	(nn+1)←IY _H (nn)←IY _L	•	•	•	•	•	•	11	111	101	4	6	20		
		←n→	←n→	00	100	010									
LD SP,HL	SP←HL	•	•	•	•	•	•	11	111	001	1	1	6		
LD SP,IX	SP←IX	•	•	•	•	•	•	11	011	101	2	2	10		
		←n→	←n→	11	111	001									
LD SP,IY	SP←IY	•	•	•	•	•	•	11	111	101	2	2	10		
		←n→	←n→	11	111	001									

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments	
		C	Z	P/V	S	N	H	76	543	210					
PUSH qq	$(SP-2) \leftarrow qq_L$	●	●	●	●	●	●	11	qq0	101	1	3	11	qq	Pair
	$(SP-1) \leftarrow qq_H$													00	BC
PUSH IX	$(SP-2) \leftarrow IX_L$	●	●	●	●	●	●	11	011	101	2	4	15	01	DE
	$(SP-1) \leftarrow IX_H$							11	100	101				10	HL
PUSH IY	$(SP-2) \leftarrow IY_L$	●	●	●	●	●	●	11	111	101	2	4	15	11	AF
	$(SP-1) \leftarrow IY_H$							11	100	101					
POP qq	$qq_H \leftarrow (SP-1)$	●	●	●	●	●	●	11	qq0	001	1	3	10		
	$qq_L \leftarrow (SP)$														
POP IX	$IX_H \leftarrow (SP+1)$	●	●	●	●	●	●	11	011	101	2	4	14		
	$IX_L \leftarrow (SP)$							11	100	001					
POP IY	$IY_H \leftarrow (SP+1)$	●	●	●	●	●	●	11	111	101	2	4	14		
	$IY_L \leftarrow (SP)$							11	100	001					

Notes: dd is any of the register pairs BC, DE, HL, SP
 qq is any of the register pairs AF, BC, DE, HL
 (PAIR)_H, (PAIR)_L refer to high order and low order eight bits of the register pair respectively.
 E.g. BC_L = C, AF_H = A

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown,
 † flag is affected according to the result of the operation.

16-BIT LOAD GROUP
 TABLE 3.3-2

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments
		C	Z	P/V	S	N	H	76	543	210				
EX DE, HL	DE ↔ HL	•	•	•	•	•	•	11	101	011	1	1	4	
EX AF, AF'	AF ↔ AF'	•	•	•	•	•	•	00	001	000	1	1	4	
EXX	$\begin{pmatrix} BC \\ DE \\ HL \end{pmatrix} \leftrightarrow \begin{pmatrix} BC \\ DE \\ HL \end{pmatrix}$	•	•	•	•	•	•	11	011	001	1	1	4	Register bank and auxiliary register bank exchange
EX (SP), HL	H ↔ (SP+1) L ↔ (SP)	•	•	•	•	•	•	11	100	011	1	5	19	
EX (SP), IX	IX _H ↔ (SP+1) IX _L ↔ (SP)	•	•	•	•	•	•	11	011	101	2	6	23	
EX (SP), IY	IY _H ↔ (SP+1) IY _L ↔ (SP)	•	•	•	•	•	•	11	111	101	2	6	23	
LDI	(DE) ← (HL) DE ← DE + 1 HL ← HL + 1 BC ← BC - 1	•	•	•	•	0	0	11	101	101	2	4	16	Load (HL) into (DE), increment the pointers and decrement the byte counter (BC)
LDIR	(DE) ← (HL) DE ← DE + 1 HL ← HL + 1 BC ← BC - 1 Repeat until BC = 0	•	•	0	•	0	0	11	101	101	2	5	21	If BC = 0
								10	110	000	2	4	16	If BC = 0
LDD	(DE) ← (HL) DE ← DE - 1 HL ← HL - 1 BC ← BC - 1	•	•	•	•	0	0	11	101	101	2	4	16	
LDDR	(DE) ← (HL) DE ← DE - 1 HL ← HL - 1 BC ← BC - 1 Repeat until BC = 0	•	•	0	•	0	0	11	101	101	2	5	21	If BC = 0
								10	111	000	2	4	16	If BC = 0
CPI	A ← (HL) HL ← HL + 1 BC ← BC - 1	•	•	•	•	1	•	11	101	101	2	4	16	
								10	100	001				

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments
		C	Z	P/V	S	N	H	76	543	210				
CPIR	A ← (HL)	•	‡	‡	‡	1	‡	11	101	101	2	5	21	If BC ≠ 0 and A = (HL)
	HL ← HL - 1 BC ← BC - 1 Repeat until A = (HL) or BC = 0		②	①				10	110	001	2	4	16	If BC = 0 or A = (HL)
CPD	A ← (HL)	•	‡	‡	‡	1	‡	11	101	101	2	4	16	
	HL ← HL - 1 BC ← BC - 1		②	①				10	101	001				
CPDR	A ← (HL)	•	‡	‡	‡	1	‡	11	101	101	2	5	21	If BC ≠ 0 and A ≠ (HL)
	HL ← HL - 1 BC ← BC - 1 Repeat until A = (HL) or BC = 0		②	①				10	111	001	2	4	16	If BC = 0 or A = (HL)

Notes: ① P/V flag is 0 if the result of BC-1 = 0, otherwise P/V = 1

② Z flag is 1 if A = (HL), otherwise Z = 0.

Flag Notation: • = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown,
‡ = flag is affected according to the result of the operation.

EXCHANGE GROUP AND BLOCK TRANSFER AND SEARCH GROUP
TABLE 3.3-3

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments	
		C	Z	P/V	S	N	H	76	543	210					
ADD A, r	A ← A + r	‡	‡	V ‡	‡	0 ‡	‡	10	000	r	1	1	4	r	Reg.
ADD A, n	A ← A + n	‡	‡	V ‡	‡	0 ‡	‡	11	000	110	2	2	7	000	B
										← n →				001	C
ADD A, (HL)	A ← A + (HL)	‡	‡	V ‡	‡	0 ‡	‡	10	000	110	1	2	7	010	D
ADD A, (IX + d)	A ← A + (IX + d)	‡	‡	V ‡	‡	0 ‡	‡	11	011	101	3	5	19	011	E
										10				100	H
										← d →				101	L
ADD A, (IY + d)	A ← A + (IY + d)	‡	‡	V ‡	‡	0 ‡	‡	11	111	101	3	5	19	111	A
										10					
										← d →					
ADC A, s	A ← A + s + CY	‡	‡	V ‡	‡	0 ‡	‡		001						
SUB s	A ← A - s	‡	‡	V ‡	‡	1 ‡	‡		010						
SBC A, s	A ← A - s - CY	‡	‡	V ‡	‡	1 ‡	‡		011						
AND s	A ← A ∧ s	0	‡	P ‡	‡	0	1		100						
OR s	A ← A ∨ s	0	‡	P ‡	‡	0	0		110						
XOR s	A ← A ⊕ s	0	‡	P ‡	‡	0	0		101						
CP s	A ← s	‡	‡	V ‡	‡	1 ‡	‡		111						
INC r	r ← r + 1	●	‡	V ‡	‡	0 ‡	‡	00	r	100	1	1	4		
INC (HL)	(HL) ← (HL) + 1	●	‡	V ‡	‡	0 ‡	‡	00	110	100	1	3	11		
INC (IX + d)	(IX + d) ← (IX + d) + 1	●	‡	V ‡	‡	0 ‡	‡	11	011	101	3	6	23		
										00					
										← d →					
INC (IY + d)	(IY + d) ← (IY + d) + 1	●	‡	V ‡	‡	0 ‡	‡	11	111	101	3	6	23		
										00					
										← d →					
DEC m	m ← m - 1	●	‡	V ‡	‡	1 ‡	‡		101						

Notes: The V symbol in the P/V flag column indicates that the P/V flag contains the overflow of the result of the operation. Similarly the P symbol indicates parity. V = 1 means overflow, V = 0 means not overflow, P = 1 means parity of the result is even, P = 0 means parity of the result is odd.

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown, ‡ = flag is affected according to the result of the operation.

8-BIT ARITHMETIC AND LOGICAL GROUP
TABLE 3.3-4

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments
		C	Z	P/V	S	N	H	76	543	210				
DAA	Converts acc content into packed BCD following add or subtract with packed BCD operands	‡	‡	P	‡	●	‡	00	100	111	1	1	4	Decimal adjust accumulator
CPL	$A \leftarrow \bar{A}$	●	●	●	●	1	1	00	101	111	1	1	4	Complement accumulator (one's complement) N
NEG	$A \leftarrow \bar{A} + 1$	‡	‡	V	‡	1	‡	11	101	101	2	2	8	Negate acc. (two's complement)
CCF	$CY \leftarrow \bar{CY}$	‡	●	●	●	0	X	00	111	111	1	1	4	Complement carry flag
SCF	$CY \leftarrow 1$	1	●	●	●	0	0	00	110	111	1	1	4	Set carry flag
NOP	No operation	●	●	●	●	●	●	00	000	000	1	1	4	
	$PC \leftarrow PC + 1$													
HALT	CPU halted	●	●	●	●	●	●	01	110	110	1	1	4	
DI	$IFF \leftarrow 0$	●	●	●	●	●	●	11	110	011	1	1	4	
EI	$IFF \leftarrow 1$	●	●	●	●	●	●	11	111	011	1	1	4	
IM 0	Set interrupt mode 0	●	●	●	●	●	●	11	101	101	2	2	8	
								01	000	110				
IM 1	Set interrupt mode 1	●	●	●	●	●	●	11	101	101	2	2	8	
								01	010	110				
IM 2	Set interrupt mode 2	●	●	●	●	●	●	11	101	101	2	2	8	
								01	011	110				

Notes: IFF indicates the interrupt enable flip-flop
CY indicates the carry flip-flop.

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown,
‡ = flag is affected according to the result of the operation.

GENERAL PURPOSE ARITHMETIC AND CPU CONTROL GROUPS
TABLE 3.3-5

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments	
		C	Z	P/V	S	N	H	76	543	210					
ADD HL,ss	HL←HL+ss	‡	●	●	●	0	X	00	ss1	001	1	3	11	ss	Reg.
ADC HL,ss	HL←HL+ss+CY	‡	‡	V	‡	0	X	11	101	101	2	4	15	00	BC
								01	ss1	010				01	DE
SBC HL,ss	HL←HL-ss-CY	‡	‡	V	‡	1	X	11	101	101	2	4	15	10	HL
								01	ss0	010				11	SP
ADD IX,pp	IX←IX+pp	‡	●	●	●	0	X	11	011	101	2	4	15	pp	Reg.
								00	pp1	001				00	BC
														01	DE
														10	IX
														11	SP
ADD IY,rr	IY←IY+rr	‡	●	●	●	0	X	11	111	101	2	4	15	rr	Reg.
								00	rr1	001				00	BC
														01	DE
														10	IY
														11	SP
INC ss	ss←ss+1	●	●	●	●	●	●	00	ss0	011	1	1	6		
INC IX	IX←IX+1	●	●	●	●	●	●	11	011	101	2	2	10		
								00	100	011					
INC IY	IY←IY+1	●	●	●	●	●	●	11	111	101	2	2	10		
								00	100	011					
DEC ss	ss←ss-1	●	●	●	●	●	●	00	ss1	011	1	1	6		
DEC IX	IX←IX-1	●	●	●	●	●	●	11	011	101	2	2	10		
								00	101	011					
DEC IY	IY←IY-1	●	●	●	●	●	●	11	111	101	2	2	10		
								00	101	011					

Notes: ss is any of the register pairs BC, DE, HL, SP
pp is any of the register pairs BC, DE, IX, SP
rr is any of the register pairs BC, DE, IY, SP.

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown,
‡ = flag is affected according to the result of the operation.

16-BIT ARITHMETIC GROUP
TABLE 3.3-6

Mnemonic	Symbolic Operation	Flags						OP-Code 7 6 5 4 3 2 1 0	No. of Bytes	No. of M Cycles	No. of T States	Comments	
		C	Z	P/V	S	N	H						
RLC A		↓	●	●	●	0	0	00 000 111	1	1	4	Rotate left circular accumulator	
RL A		↓	●	●	●	0	0	00 010 111	1	1	4	Rotate left accumulator	
RRC A		↓	●	●	●	0	0	00 001 111	1	1	4	Rotate right circular accumulator	
RR A		↓	●	●	●	0	0	00 011 111	1	1	4	Rotate right accumulator	
RLC r		↓	↓	P	↓	0	0	11 001 011 00 000 r	2	2	8	Rotate left circular register r	
RLC (HL)		↓	↓	P	↓	0	0	11 001 011 00 000 110	2	4	15	r	Reg.
RLC (IX+d)		↓	↓	P	↓	0	0	11 011 101 11 001 011 ← d → 00 000 110	4	6	23	000 B 001 C 010 D 011 E 100 H 101 L 111 A	
RLC (IY+d)		↓	↓	P	↓	0	0	11 111 101 11 001 011 ← d → 00 000 110	4	6	23		
RL s		↓	↓	P	↓	0	0	010				Instruction format and states are as shown for RLC, m. To form new OP-code replace 000 of RLC, m with shown code.	
RRC s		↓	↓	P	↓	0	0	001					
RR s		↓	↓	P	↓	0	0	011					
SLA s		↓	↓	P	↓	0	0	100					
SRA s		↓	↓	P	↓	0	0	101					
SRL s		↓	↓	P	↓	0	0	111					
RLD		●	↓	P	↓	0	0	11 101 101 01 101 111	2	5	18		Rotate digit left and right between the accumulator and location (HL).
RRD		●	↓	P	↓	0	0	11 101 101 01 100 111	2	5	18	The content of the upper half of the accumulator is unaffected.	

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown, ↓ = flag is affected according to the result of the operation.

ROTATE AND SHIFT GROUP
TABLE 3.3-7

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments		
		C	Z	P/V	S	N	H	76	543	210				r	Reg.	
BIT b,r	$Z \leftarrow \bar{r}_b$	●	‡	X	X	0	1	11 001 011				2	2	8	r	Reg.
								01 b r								
BIT b,(HL)	$Z \leftarrow \overline{(HL)}_b$	●	‡	X	X	0	1	11 001 011				2	3	12	000	B
								01 b 110							001	C
								011							010	D
BIT b,(IX+d)	$Z \leftarrow \overline{(IX+d)}_b$	●	‡	X	X	0	1	11 011 101				4	5	20	011	E
								11 001 011							100	H
								← d →							101	L
								01 b 110							111	A
BIT b,(IY+d)	$Z \leftarrow \overline{(IY+d)}_b$	●	‡	X	X	0	1	11 111 101				4	5	20	b	Bit Tested
								11 001 011							000	0
								← d →							001	1
								01 b 110							010	2
SET b,r	$r_b \leftarrow 1$	●	●	●	●	●	●	11 001 011				2	2	8	011	3
								11 b r							100	4
SET b,(HL)	$(HL)_b \leftarrow 1$	●	●	●	●	●	●	11 001 011				2	4	15	101	5
								11 b 110							110	6
SET b,(IX+d)	$(IX+d)_b \leftarrow 1$	●	●	●	●	●	●	11 011 101				4	6	23	111	7
								11 001 011								
								← d →								
								11 b 110								
SET b,(IY+d)	$(IY+d)_b \leftarrow 1$	●	●	●	●	●	●	11 111 101				4	6	23		
								11 001 011								
								← d →								
								11 b 110								
RES b,s	$s_b \leftarrow 0$ $s \equiv r, (HL),$ $(IX+d),$ $(IY+d)$							10								

To form new OP-code replace 11 of SET b, m with 10. Flags and time states for SET instruction.

Notes: The notation s_b indicates bit b (0 to 7) or location s.

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown, ‡ = flag is affected according to the result of the operation.

BIT SET, RESET AND TEST GROUP
TABLE 3.3-8

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments		
		C	Z	P/V	S	N	H	76	543	210						
JP nn	PC←nn	●	●	●	●	●	●	11 000 011				3	3	10		
								← n →								
								← n →								
JP cc,nn	If condition cc is true PC←nn, otherwise continue	●	●	●	●	●	●	11 cc 010				3	3	10	cc	Condition
								← n →							000	NZnon zero
								← n →							001	Z zero
															010	NCnon carry
															011	C carry
															100	PO parity odd
															101	PE parity even
															110	P sign positive
															111	M sign negative
JR e	PC←PC+e	●	●	●	●	●	●	00 011 000				2	3	12		
								← e-2 →								
JR C,e	If C=0 continue	●	●	●	●	●	●	00 111 000				2	2	7		If condition not met
								← e-2 →								
	If C=1 PC←PC+e											2	3	12		If condition is met
JR NC,e	If C=1 continue	●	●	●	●	●	●	00 110 000				2	2	7		If condition not met
								← e-2 →								
	If C=0 PC←PC+e											2	3	12		If condition is met
JR Z,e	If Z=0 continue	●	●	●	●	●	●	00 101 000				2	2	7		If condition not met
								← e-2 →								
	If Z=1 PC←PC+e											2	3	12		If condition is met
JR NZ,e	If Z=1 continue	●	●	●	●	●	●	00 100 000				2	2	7		If condition not met
								← e-2 →								
	If Z=0 PC←PC+e											2	3	12		If condition is met
JP (HL)	PC←HL	●	●	●	●	●	●	11 101 001				1	1	4		
JP (IX)	PC←IX	●	●	●	●	●	●	11 011 101				2	2	8		
								11 101 001								
JP (IY)	PC←IY	●	●	●	●	●	●	11 111 101				2	2	8		
								11 101 001								
DJNZ,e	B←B-1 If B=0 continue	●	●	●	●	●	●	00 010 000				2	2	8		If B=0
								← e-2 →								
	If B=0 PC←PC+e											2	3	13		If B=0

Notes: e represents the extension in the relative addressing mode.

e is a signed two's complement number in the range <-126, 129>

e-2 in the op-code provides an effective address of pc+e as PC is incremented by 2 prior to the addition of e.

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown, † = flag is affected according to the result of the operation.

**JUMP GROUP
TABLE 3.3-9**

Mnemonic	Symbolic Operation	Flags						OP-Code			No. of Bytes	No. of M Cycles	No. of T States	Comments	
		C	Z	P/V	S	N	H	76	543	210					
CALL nn	(SP-1)←PC _H (SP-2)←PC _L PC←nn	●	●	●	●	●	●	11 001 101			3	5	17		
CALL cc,nn	If condition cc is false continue, otherwise same as CALL nn	●	●	●	●	●	●	11 cc 100			3	3	10	If cc is false	
								← n →			3	5	17	If cc is true	
RET	PC _L ←(SP) PC _H ←(SP+1)	●	●	●	●	●	●	11 001 001			1	3	10		
RET cc	If condition cc is false continue, otherwise same as RET	●	●	●	●	●	●	11 cc 000			1	1	5	If cc is false	
											1	3	11	If cc is true	
RETI	Return from interrupt	●	●	●	●	●	●	11 101 101			2	4	14	000	NZ non zero
								01 001 101						001	Z zero
														010	NC non carry
														011	C carry
														100	PO parity odd
														101	PE parity even
														110	P sign positive
RETN	Return from non maskable interrupt	●	●	●	●	●	●	11 101 101			2	4	14	010	NC non carry
								01 000 101						011	C carry
														100	PO parity odd
														101	PE parity even
														110	P sign positive
														111	M sign negative
														111	M sign negative
RST p	(SP-1)←PC _H (SP-2)←PC _L PC _H ←0 PC _L ←P	●	●	●	●	●	●	11 t 111			1	3	11	t	P
														000	00H
														001	08H
														010	10H
														011	18H
														100	20H
														101	28H
														110	30H
									111	38H					

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown
‡ = flag is affected according to the result of the operation.

CALL AND RETURN GROUP
TABLE 3.3-10

Mnemonic	Symbolic Operation	Flags						OP-Code 76 543 210	No. of Bytes	No. of M Cycles	No. of T States	Comments
		C	Z	P/V	S	N	H					
IN A,(n)	A ← (n)	●	●	●	●	●	●	11 011 011 ← n →	2	3	11	n to A ₀ ~A ₇ Acc to A ₈ ~A ₁₅
IN r,(C)	r ← (C) If r=110 only the flags will be affected	●	‡	P	‡	0	0	11 101 101 01 r 000	2	3	12	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
INI	(HL) ← (C) B ← B-1 HL ← HL+1	●	‡	X	X	1	X	11 101 101 10 100 010	2	4	16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
INIR	(HL) ← (C) B ← B-1 HL ← HL+1 Repeat until B=0	●	1	X	X	1	X	11 101 101 10 110 010	2	5 ‡ B=0 4 ‡ B=0	21 16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
IND	(HL) ← (C) B ← B-1 HL ← HL-1	●	‡	X	X	1	X	11 101 101 10 101 010	2	4	16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
INDR	(HL) ← (C) B ← B-1 HL ← HL-1 Repeat until B=0	●	1	X	X	1	X	11 101 101 10 111 010	2	5 ‡ B=0 4 ‡ B=0	21 16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
OUT (n),A	(n) ← A	●	●	●	●	●	●	11 010 011	2	3	11	n to A ₀ ~A ₇ Acc to A ₈ ~A ₁₅
OUT (C),r	(C) ← r	●	●	●	●	●	●	11 101 101 01 r 001	2	3	12	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
OUTI	(C) ← (HL) B ← B-1 HL ← HL+1	●	‡	X	X	1	X	11 101 101 10 100 011	2	4	16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
OTIR	(C) ← (HL) B ← B-1 HL ← HL+1 Repeat until B=0	●	1	X	X	1	X	11 101 101 10 110 011	2	5 ‡ B=0 4 ‡ B=0	21 16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
OUTD	(C) ← (HL) B ← B-1 HL ← HL-1	●	‡	X	X	1	X	11 101 101 10 101 011	2	4	16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅
OTDR	(C) ← (HL) B ← B-1 HL ← HL-1 Repeat until B=0	●	1	X	X	1	X	11 101 101 10 111 011	2	5 ‡ B=0 4 ‡ B=0	21 16	C to A ₀ ~A ₇ B to A ₈ ~A ₁₅

Notes: ① If the result of B-1 is zero the Z flag is set, otherwise it is reset.

Flag Notation: ● = flag not affected, 0 = flag reset, 1 = flag set, X = flag is unknown,
‡ = flag is affected according to the result of the operation.

INPUT AND OUTPUT GROUP
TABLE 3.3-11

3.4 FLAGS

Each of the two Z-80 CPU Flag registers contains six bits of information which are set or reset by various CPU operations. Four of these bits are testable; that is, they are used as conditions for jump, call or return instructions. For example a jump may be desired only if a specific bit in the flag register is set. The four testable flag bits are:

- 1) **Carry Flag (C)** – This flag is the carry from the highest order bit of the accumulator. For example, the carry flag will be set during an add instruction where a carry from the highest bit of the accumulator is generated. This flag is also set if a borrow is generated during a subtraction instruction. The shift and rotate instructions also affect this bit.
- 2) **Zero Flag (Z)** – This flag is set if the result of the operation loaded a zero into the accumulator. Otherwise it is reset.
- 3) **Sign Flag (S)** – This flag is intended to be used with signed numbers and it is set if the result of the operation was negative. Since bit 7 (MSB) represents the sign of the number (A negative number has a 1 in bit 7), this flag stores the state of bit 7 in the accumulator.
- 4) **Parity/Overflow Flag (P/V)** – This dual purpose flag indicates the parity of the result in the accumulator when logical operations are performed (such as AND A, B) and it represents overflow when signed two's complement arithmetic operations are performed. The Z-80 overflow flag indicates that the two's complement number in the accumulator is in error since it has exceeded the maximum possible (+127) or is less than the minimum possible (–128) number than can be represented in two's complement notation. For example consider adding:

$$\begin{array}{r}
 +120 = \quad 0111\ 1000 \\
 +105 = \quad 0110\ 1001 \\
 \hline
 C = 0\ 1110\ 0001 = -31 \text{ (wrong) Overflow has occurred}
 \end{array}$$

Here the result is incorrect. Overflow has occurred and yet there is no carry to indicate an error. For this case the overflow flag would be set. Also consider the addition of two negative numbers:

$$\begin{array}{r}
 -5 = \quad 1111\ 1011 \\
 -16 = \quad 1111\ 0000 \\
 \hline
 C = 1\ 1110\ 1011 = -21 \text{ correct}
 \end{array}$$

Notice that the answer is correct but the carry is set so that this flag can not be used as an overflow indicator. In this case the overflow would not be set.

For logical operations (AND, OR, XOR) this flag is set if the parity of the result is even and it is reset if it is odd.

There are also two non-testable bits in the flag register. Both of these are used for BCD arithmetic. They are:

- 1) **Half carry (H)** – This is the BCD carry or borrow result from the least significant four bits of operation. When using the DAA (Decimal Adjust Instruction) this flag is used to correct the result of a previous packed decimal add or subtract.
- 2) **Add/Subtract Flag (N)** – Since the algorithm for correcting BCD operations is different for addition or subtraction, this flag is used to specify what type of instruction was executed last so that the DAA operation will be correct for either addition or subtraction.

The Flag register can be accessed by the programmer and its format is as follows:

S	Z	X	H	X	P/V	N	C
---	---	---	---	---	-----	---	---

X means flag is indeterminate.

Table 3.4-1 lists how each flag bit is affected by various CPU instructions. In this table a '●' indicates that the instruction does not change the flag, an 'X' means that the flag goes to an indeterminate state, a '0' means that it is reset, a '1' means that it is set and the symbol '↓' indicates that it is set or reset according to the previous discussion. Note that any instruction not appearing in this table does not affect any of the flags.

Table 3.4-1 includes a few special cases that must be described for clarity. Notice that the block search instruction sets the Z flag if the last compare operation indicated a match between the source and the accumulator data. Also, the parity flag is set if the byte counter (register pair BC) is not equal to zero. This same use of the parity flag is made with the block move instructions. Another special case is during block input or output instructions, here the Z flag is used to indicate the state of register B which is used as a byte counter. Notice that when the I/O block transfer is complete, the zero flag will be reset to a zero (i.e. B = 0) while in the case of a block move command the parity flag is reset when the operation is complete. A final case is when the refresh or I register is loaded into the accumulator, the interrupt enable flip flop is loaded into the parity flag so that the complete state of the CPU can be saved at any time.

Instruction	C	Z	P/ V	S	N	H	Comments
ADD A, s; ADC A, s	↑	↑	V ↑	0	↓	↓	8-bit add or add with carry
SUB s; SBC A, s; CP s; NEG	↑	↑	V ↓	1	↑	↑	8-bit subtract, subtract with carry, compare and negate accumulator
AND s	0	↑	P ↑	0	↓	1	Logical operations
OR s; XOR s	0	↑	P ↑	0	0	0	
INC s	•	↑	V ↑	0	↓	↓	8-bit increment
DEC m	•	↑	V ↓	1	↓	↓	8-bit decrement
ADD DD, ss	↑	•	•	•	0	X	16-bit add
ADC HL, ss	↑	↑	V ↑	0	X	X	16-bit add with carry
SBC HL, ss	↑	↑	V ↓	1	X	X	16-bit subtract with carry
RLA; RLCA; RRA; RRCA;	↑	•	•	•	0	0	Rotate accumulator
RL m; RLC m; RR m; RRC m; SLA m; SRA m; SRL m	↑	↑	P ↑	0	0	0	Rotate and shift location s
RLD; RRD	•	↑	P ↓	0	0	0	Rotate digit left and right
DAA	↑	↑	P ↓	•	↑	↑	Decimal adjust accumulator
CPL	•	•	•	•	1	1	Complement accumulator
SCF	1	•	•	•	0	0	Set carry
CCF	↑	•	•	•	0	X	Complement carry
IN r, (C)	•	↑	P ↑	0	0	0	Input register indirect
INI; IND; OUTI; OUTD	•	↑	X X	1	X	X	Block input and output Z = 0 if B ≠ 0 otherwise Z = 1
INIR; INDR; OTIR; OTDR	•	1	X X	1	X	X	
LDI; LDD	•	X	↑	X	0	0	Block transfer instructions P/V = 1 if BC ≠ 0, otherwise P/V = 0
LDIR; LDDR	•	X	0	X	0	0	
CPI; CPIR; CPD; CPDR	•	↑	↑	X	1	X	Block search instructions Z = 1 if A = (HL), otherwise Z = 0 P/V = 1 if BC ≠ 0, otherwise P/V = 0
LD A, I; LD A, R	•	↑	IFF ↑	0	0	0	
BIT b, s	•	↑	X X	0	1	1	The state of bit b of location s is copied into the Z flag
NEG	↑	↑	V ↓	1	↑	↑	Negative accumulator

The following notation is used in this table:

Symbol	Operation
C	Carry/link flag. C = 1 if the operation produced a carry from the MSB of the operand or result.
Z	Zero flag. Z = 1 if the result of the operation is zero.
S	Sign flag. S = 1 if the MSB of the result is one.
P/V	Parity or overflow flag. Parity (P) and overflow (V) share the same flag. Logical operations affect this flag with the parity of the result while arithmetic operations affect this flag with the overflow of the result. If P/V holds parity, P/V = 1 if the result of the operation is even, P/V = 0 if result is odd. If P/V holds overflow, P/V = 1 if the result of the operation produced an overflow.
H	Half-carry flag. H = 1 if the add or subtract operation produced a carry into or borrow from into bit 4 of the accumulator.
N	Add/Subtract flag. N = 1 if the previous operation was a subtract.
	H and N flags are used in conjunction with the decimal adjust instruction (DAA) to properly correct the result into packed BCD format following addition or subtraction using operands with packed BCD format.
↑	The flag is affected according to the result of the operation.
•	The flag is unchanged by the operation.
0	The flag is reset by the operation.
1	The flag is set by the operation.
X	The flag is a "don't care."
V	P/V flag affected according to the overflow result of the operation.
P	P/V flag affected according to the parity result of the operation.
r	Any one of the CPU registers A, B, C, D, E, H, L.
s	Any 8-bit location for all the addressing modes allowed for the particular instruction.
ss	Any 16-bit location for all the addressing modes allowed for that instruction.
ii	Any one of the two index registers IX or IY.
R	Refresh counter.
n	8-bit value in range <0, 255>
nn	16-bit value in range <0, 65535>
m	Any 8-bit location for all the addressing modes allowed for the particular instruction.

SUMMARY OF FLAG OPERATION
TABLE 3.4-1

4.0 INTERRUPT RESPONSE

The purpose of an interrupt is to allow peripheral devices to suspend CPU operation in an orderly manner and force the CPU to start a peripheral service routine. Usually this service routine is involved with the exchange of data, or status and control information, between the CPU and the peripheral. Once the service routine is completed, the CPU returns to the operation from which it was interrupted.

INTERRUPT ENABLE – DISABLE

The Z-80 CPU has two interrupt inputs, a software maskable interrupt and a non maskable interrupt. The non maskable interrupt (NMI) can *not* be disabled by the programmer and it will be accepted whenever a peripheral device requests it. This interrupt is generally reserved for very important functions that must be serviced whenever they occur, such as an impending power failure. The maskable interrupt (INT) can be selectively enable or disabled by the programmer. This allows the programmer to disable the interrupt during periods where his program has timing constraints that do not allow it to be interrupted. In the Z-80 CPU there is an enable flip flop (called IFF) that is set or reset by the programmer using the Enable Interrupt (EI) and Disable Interrupt (DI) instructions. When the IFF is reset, an interrupt can not be accepted by the CPU.

Actually, for purposes that will be subsequently explained, there are two enable flip flops, called IFF₁ and IFF₂.



The state of IFF₁ is used to actually inhibit interrupts while IFF₂ is used as a temporary storage location for IFF₁. The purpose of storing the IFF₁ will be subsequently explained.

A reset to the CPU will force both IFF₁ and IFF₂ to the reset state so that interrupts are disabled. They can then be enabled by an EI instruction at any time by the programmer. When an EI instruction is executed, any pending interrupt request will not be accepted until after the instruction following EI has been executed. This single instruction delay is necessary for cases when the following instruction is a return instruction and interrupts must not be allowed until the return has been completed. The EI instruction sets both IFF₁ and IFF₂ to the enable state. When an interrupt is accepted by the CPU, both IFF₁ and IFF₂ are automatically reset, inhibiting further interrupts until the programmer wishes to issue a new EI instruction. Note that for all of the previous cases, IFF₁ and IFF₂ are always equal.

The purpose of IFF₂ is to save the status of IFF₁ when a non-maskable interrupt occurs. When a non maskable interrupt is accepted, IFF₁ is reset to prevent further interrupts until reenabled by the programmer. Thus, after a non maskable interrupt has been accepted, maskable interrupts are disabled but the previous state of IFF₁ has been saved so that the complete state of the CPU just prior to the non maskable interrupt can be restored at any time. When a Load Register A with Register I (LD A, I) instruction or a Load Register A with Register R (LD A, R) instruction is executed, the state of IFF₂ is copied into the parity flag where it can be tested or stored.

A second method of restoring the status of IFF₁ is thru the execution of a Return From Non Maskable Interrupt (RETN) instruction. Since this instruction indicates that the non maskable interrupt service routine is complete, the contents of IFF₂ are now copied back into IFF₁, so that the status of IFF₁ just prior to the acceptance of the non maskable interrupt will be restored automatically.

Figure 4.0-1 is a summary of the effect of different instructions on the two enable flip flops.

Action	IFF ₁	IFF ₂	
CPU Reset	0	0	
DI	0	0	
EI	1	1	
LD A, I	•	•	IFF ₂ → Parity flag
LD A, R	•	•	IFF ₂ → Parity flag
Accept NMI	0	•	
RETN	IFF ₂	•	IFF ₂ → IFF ₁

“•” indicates no change

FIGURE 4.0-1
INTERRUPT ENABLE/DISABLE FLIP FLOPS

CPU RESPONSE

Non Maskable

A nonmaskable interrupt will be accepted at all times by the CPU. When this occurs, the CPU ignores the next instruction that it fetches and instead does a restart to location 0066H. Thus, it behaves exactly as if it had received a restart instruction but, it is to a location that is not one of the 8 software restart locations. A restart is merely a call to a specific address in page 0 of memory.

Maskable

The CPU can be programmed to respond to the maskable interrupt in any one of three possible modes.

Mode 0

This mode is identical to the 8080A interrupt response mode. With this mode, the interrupting device can place *any instruction on the data bus and the CPU will execute it*. Thus, the interrupting device provides the next instruction to be executed instead of the memory. Often this will be a restart instruction since the interrupting device only need supply a single byte instruction. Alternatively, any other instruction such as a 3 byte call to any location in memory could be executed.

The number of clock cycles necessary to execute this instruction is 2 more than the normal number for the instruction. This occurs since the CPU automatically adds 2 wait states to an interrupt response cycle to allow sufficient time to implement an external daisy chain for priority control.

After the application of RESET the CPU will automatically enter interrupt Mode 0.


Mode 1

When this mode has been selected by the programmer, the CPU will respond to an interrupt by executing a restart to location 0038H. Thus the response is identical to that for a non maskable interrupt except that the call location is 0038H instead of 0066H. Another difference is that the number of cycles required to complete the restart instruction is 2 more than normal due to the two added wait states.

Mode 2

This mode is the most powerful interrupt response mode. With a single 8 bit byte from the user an indirect call can be made to any memory location.

With this mode the programmer maintains a table of 16 bit starting addresses for every interrupt service routine. This table may be located anywhere in memory. When an interrupt is accepted, a 16 bit pointer must be formed to obtain the desired interrupt service routine starting address from the table. The upper 8 bits of this pointer is formed from the contents of the I register. The I register must have been previously loaded with the desired value by the programmer, i.e. LDI, A. Note that a CPU reset clears the I register so that it is initialized to zero. The lower eight bits of the pointer must be supplied by the interrupting device. Actually, only 7 bits are required from the interrupting device as the least significant bit must be a zero. This is required since the pointer is used to get two adjacent bytes to form a complete 16 bit service routine starting address and the addresses must always start in even locations.

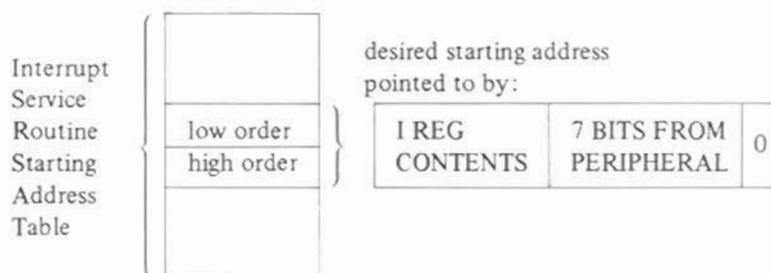

The first byte in the table is the least significant (low order) portion of the address. The programmer must obviously fill this table in with the desired addresses before any interrupts are to be accepted.

Note that this table can be changed at any time by the programmer (if it is stored in Read/Write Memory) to allow different peripherals to be serviced by different service routines.

Once the interrupting device supplies the lower portion of the pointer, the CPU automatically pushes the program counter onto the stack, obtains the starting address from the table and does a jump to this address. This mode of response requires 19 clock periods to complete (7 to fetch the lower 8 bits from the interrupting device, 6 to save the program counter, and 6 to obtain the jump address.)



Appendix



A.1 ASCII Code Table

The following are the ASCII codes for characters:

MSD		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
LSD		0000	0001	0010	0011	0100	0101	0110	0111	1000	1001	1010	1011	1100	1101	1110	1111
0	0000			SP	O	@	P	☛	☒	}	—	q	n		☐	—	☐
1	0001	↓	!	I	A	Q	H	☒	☒	☒	a	☐	☐	☐	♠	●	
2	0010	↑	"	2	B	R	I	☒	☐	e	z	Ü	☐	☐	☐	☐	☐
3	0011	→	#	3	C	S	♣	☒	☐	'	w	m	☐	☐	☐	☐	♥
4	0100	←	\$	4	D	T	♣	☒	☐	~	s	☐	☐	☐	☐	☐	☐
5	0101	☐	%	5	E	U	♣	☒	☐	☒	u	☐	☐	☐	☐	☐	☐
6	0110	©	&	6	F	V	¥	☒	☐	t	i	☐	→	☐	☐	☐	⊗
7	0111		'	7	G	W	☺	☒	☐	g	≡	o	☐	☐	☐	☐	○
8	1000		(8	H	X	☺	☒	☐	h	ö	l	☐	☐	☐	☐	♣
9	1001)	9	I	Y	☞	☐	☐	k	Ä	☐	☐	☐	☐	☐	☐
A	1010		*	:	J	Z	♣	☐	☐	b	f	ö	☐	☐	☐	☐	♦
B	1011		+	;	K	☐	♣	°	^	x	v	ä	☐	☐	☐	☐	£
C	1100		,	<	L	☐	♣	☒	☐	d	☐	☐	☐	☐	☐	☐	↓
D	1101	CR	—	=	M	☐	♣	☐	☐	r	ü	y	☐	☐	☐	☐	☐
E	1110		.	>	N	↑	☐	☐	☐	p	β	l	☐	☐	☐	☐	☐
F	1111		/	?	O	←	☐	☐	☐	c	j	☐	☐	☐	☐	☐	π

A.2 Display Code Table

The following are the display codes of the MZ-80A.

MSD		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
LSD		0000	0001	0010	0011	0100	0101	0110	0111	1000	1001	1010	1011	1100	1101	1110	1111
0	0000	SP	P	0	□	}	↑	π	□		p	□	□	↓	▣	□	▨
1	0001	A	Q	1	□	♠	<	!	□	a	q	□	□	↓	▣	□	□
2	0010	B	R	2	□	▤	□	"	□	b	r	□	□	↑	▣	□	□
3	0011	C	S	3	□	■	♥	#	□	c	s	□	□	→	▣	□	▨
4	0100	D	T	4	□	♦]	\$	□	d	t	□	□	←	▣	□	□
5	0101	E	U	5	□	←	@	%	□	e	u	□	□	H	▣	□	▨
6	0110	F	V	6	□	♣	▤	&	□	f	v	□	□	☉	▣	□	▨
7	0111	G	W	7	□	●	>	'	□	g	w	□	□	♣	▣	□	▨
8	1000	H	X	8	□	○	↓	(□	h	x	□	□	H	▣	□	▨
9	1001	I	Y	9	□	?	↘)	□	i	y	□	□	H	▣	□	▨
A	1010	J	Z	-	□	○	→	+	□	j	z	β	□	♣	▣	□	▨
B	1011	K	£	=	□	□	▣	*	□	k	ä	ü	□	♣	°	□	▨
C	1100	L	□	;	□	□	□	□	□	l	□	ö	□	♣	▣	□	▨
D	1101	M	□	/	□	▤	□	×	□	m	□	Ü	□	♣	▣	□	▨
E	1110	N	H	.	□	▤	□	□	□	n	□	Ä	□	☺	▣	□	▨
F	1111	O	H	,	□	:	□	□	□	o	□	Ö	□	☺	☹	▣	▨

A. 3 Mnemonic Codes and Corresponding Object Codes

(Mnemonic codes are arranged in alphabetic order.)

OP-Code	Mnemonic
8E	ADC A, (HL)
<u>DD8E05</u>	ADC A, (IX + d)
<u>FD8E05</u>	ADC A, (IY + d)
8F	ADC A, A
88	ADC A, B
89	ADC A, C
8A	ADC A, D
8B	ADC A, E
8C	ADC A, H
8D	ADC A, L
<u>CE20</u>	ADC A, n
ED4A	ADC HL, BC
ED5A	ADC HL, DE
ED6A	ADC HL, HL
ED7A	ADC HL, SP
86	ADD A, (HL)
<u>DD8605</u>	ADD A, (IX + d)
<u>FD8605</u>	ADD A, (IY + d)
87	ADD A, A
80	ADD A, B
81	ADD A, C
82	ADD A, D
83	ADD A, E
84	ADD A, H
85	ADD A, L
<u>C620</u>	ADD A, n
09	ADD HL, BC
19	ADD HL, DE
29	ADD HL, HL
39	ADD HL, SP
DD09	ADD IX, BC
DD19	ADD IX, DE
DD29	ADD IX, IX
DD39	ADD IX, SP
FD09	ADD IY, BC
FD19	ADD IY, DE
FD29	ADD IY, IY
FD39	ADD IY, SP

Note

nn, n, d and e in the operands of each mnemonic code represent constant data. The example values set forth below are used for these constants in this table.

nn = 584H

n = 20H

d = 5

e = 30H

Data codes represented by example values are shown in italic and underlined.

OP-Code	Mnemonic	OP-Code	Mnemonic
A6	AND (HL)	CB54	BIT 2, H
<u>DDA605</u>	AND (IX + d)	CB55	BIT 2, L
<u>FDA605</u>	AND (IY + d)	CB5E	BIT 3, (HL)
A7	AND A	<u>DDCB05 5E</u>	BIT 3, (IX + d)
A0	AND B	<u>FDCB055E</u>	BIT 3, (IY + d)
A1	AND C	CB5F	BIT 3, A
A2	AND D	CB58	BIT 3, B
A3	AND E	CB59	BIT 3, C
A4	AND H	CB5A	BIT 3, D
A5	AND L	CB5B	BIT 3, E
<u>E620</u>	AND n	CB5C	BIT 3, H
		CB5D	BIT 3, L
CB46	BIT 0, (HL)	CB66	BIT 4, (HL)
<u>DDCB0546</u>	BIT 0, (IX + d)	<u>DDCB0566</u>	BIT 4, (IX + d)
<u>FDCB0546</u>	BIT 0, (IY + d)	<u>FDCB0566</u>	BIT 4, (IY + d)
CB47	BIT 0, A	CB67	BIT 4, A
CB40	BIT 0, B	CB60	BIT 4, B
CB41	BIT 0, C	CB61	BIT 4, C
CB42	BIT 0, D	CB62	BIT 4, D
CB43	BIT 0, E	CB63	BIT 4, E
CB44	BIT 0, H	CB64	BIT 4, H
CB45	BIT 0, L	CB65	BIT 4, L
CB4E	BIT 1, (HL)	CB6E	BIT 5, (HL)
<u>DDCB054E</u>	BIT 1, (IX + d)	<u>DDCB056E</u>	BIT 5, (IX + d)
<u>FDCB054E</u>	BIT 1, (IY + d)	<u>FDCB056E</u>	BIT 5, (IY + d)
CB4F	BIT 1, A	CB6F	BIT 5, A
CB48	BIT 1, B	CB68	BIT 5, B
CB49	BIT 1, C	CB69	BIT 5, C
CB4A	BIT 1, D	CB6A	BIT 5, D
CB4B	BIT 1, E	CB6B	BIT 5, E
CB4C	BIT 1, H	CB6C	BIT 5, H
CB4D	BIT 1, L	CB6D	BIT 5, L
CB56	BIT 2, (HL)	CB76	BIT 6, (HL)
<u>DDCB05 56</u>	BIT 2, (IX + d)	<u>DDCB05 76</u>	BIT 6, (IX + d)
<u>FDCB 05 56</u>	BIT 2, (IY + d)	<u>FDCB05 76</u>	BIT 6, (IY + d)
CB57	BIT 2, A	CB77	BIT 6, A
CB50	BIT 2, B	CB70	BIT 6, B
CB51	BIT 2, C	CB71	BIT 6, C
CB52	BIT 2, D	CB72	BIT 6, D
CB53	BIT 2, E	CB73	BIT 6, E

OP-Code	Mnemonic	OP-Code	Mnemonic
CB74	BIT 6,H	EDB1	CPIR
CB75	BIT 6,L		
CB7E	BIT 7,(HL)	2F	CPL
<u>DDCB057E</u>	BIT 7,(IX+d)		
<u>FDCB057E</u>	BIT 7,(IY+d)	27	DAA
CB7F	BIT 7,A		
CB78	BIT 7,B	35	DEC (HL)
CB79	BIT 7,C	<u>DD3505</u>	DEC (IX+d)
CB7A	BIT 7,D	<u>FD3505</u>	DEC (IY+d)
CB7B	BIT 7,E	3D	DEC A
CB7C	BIT 7,H	05	DEC B
CB7D	BIT 7,L	0B	DEC BC
		0D	DEC C
		15	DEC D
<u>DC8405</u>	CALL C,nn	1B	DEC DE
<u>FC8405</u>	CALL M,nn	1D	DEC E
<u>D48405</u>	CALL NC,nn	25	DEC H
<u>CD8405</u>	CALL nn	2B	DEC HL
<u>C48405</u>	CALL NZ,nn	DD2B	DEC IX
<u>F48405</u>	CALL P,nn	FD2B	DEC IY
<u>EC8405</u>	CALL PE,nn	2D	DEC L
<u>E48405</u>	CALL PO,nn	3B	DEC SP
<u>CC8405</u>	CALL Z,nn		
3F	CCF	F3	DI
BE	CP (HL)	<u>102E</u>	DJNZ e
<u>DDBE05</u>	CP (IX+d)		
<u>FDDE05</u>	CP (IY+d)	FB	EI
BF	CP A		
B8	CP B	E3	EX (SP),HL
B9	CP C	DDE3	EX (SP),IX
BA	CP D	FDE3	EX (SP),IY
BB	CP E	08	EX AF,AF'
BC	CP H	EB	EX DE,HL
BD	CP L	D9	EXX
<u>FE20</u>	CP n		
		76	HALT
EDA9	CPD		
EDB9	CPDR	ED46	IM 0
EDA1	CPI	ED56	IM 1

OP-Code	Mnemonic	OP-Code	Mnemonic
ED5E	IM 2	<u>C28405</u>	JP NZ,nn
ED78	IN A,(C)	<u>F28405</u>	JP P,nn
<u>DB20</u>	IN A,(n)	<u>EA8405</u>	JP PE,nn
ED40	IN B,(C)	<u>E28405</u>	JP PO,nn
ED48	IN C,(C)	<u>CA8405</u>	JP Z,nn
ED50	IN D,(C)	<u>382E</u>	JR C,e
ED58	IN E,(C)	<u>182E</u>	JR e
ED60	IN H,(C)	<u>302E</u>	JR NC,e
ED68	IN L,(C)	<u>202E</u>	JR NZ,e
34	INC (HL)	<u>282E</u>	JR Z,e
<u>DD3405</u>	INC (IX+d)	02	LD (BC),A
<u>FD3405</u>	INC (IY+d)	12	LD (DE),A
3C	INC A	77	LD (HL),A
04	INC B	70	LD (HL),B
03	INC BC	71	LD (HL),C
0C	INC C	72	LD (HL),D
14	INC D	73	LD (HL),E
13	INC DE	74	LD (HL),H
1C	INC E	75	LD (HL),L
24	INC H	<u>3620</u>	LD (HL),n
23	INC HL	<u>DD7705</u>	LD (IX+d),A
<u>DD23</u>	INC IX	<u>DD7005</u>	LD (IX+d),B
<u>FD23</u>	INC IY	<u>DD7105</u>	LD (IX+d),C
2C	INC L	<u>DD7205</u>	LD (IX+d),D
33	INC SP	<u>DD7305</u>	LD (IX+d),E
EDAA	IND	<u>DD7405</u>	LD (IX+d),H
EDBA	INDR	<u>DD7505</u>	LD (IX+d),L
EDA2	INI	<u>DD360520</u>	LD (IX+d),n
EDB2	INIR	<u>FD7705</u>	LD (IY+d),A
E9	JP (HL)	<u>FD7005</u>	LD (IY+d),B
DDE9	JP (IX)	<u>FD7105</u>	LD (IY+d),C
FDE9	JP (IY)	<u>FD7205</u>	LD (IY+d),D
<u>DA8405</u>	JP C,nn	<u>FD7305</u>	LD (IY+d),E
<u>FA8405</u>	JP M,nn	<u>FD7405</u>	LD (IY+d),H
<u>D28405</u>	JP NC,nn	<u>FD7505</u>	LD (IY+d),L
<u>C38405</u>	JP nn	<u>FD360520</u>	LD (IY+d),n
		<u>328405</u>	LD (nn),A
		<u>ED438405</u>	LD (nn),BC

OP-Code	Mnemonic	OP-Code	Mnemonic
<u>ED538405</u>	LD (nn),DE	4B	LD C,E
<u>228405</u>	LD (nn),HL	4C	LD C,H
<u>DD228405</u>	LD (nn),IX	4D	LD C,L
<u>FD228405</u>	LD (nn),IY	<u>0E20</u>	LD C,n
<u>ED738405</u>	LD (nn),SP	56	LD D,(HL)
0A	LD A,(BC)	<u>DD5605</u>	LD D,(IX+d)
1A	LD A,(DE)	<u>FD5605</u>	LD D,(IY+d)
7E	LD A,(HL)	57	LD D,A
<u>DD7E05</u>	LD A,(IX+d)	50	LD D,B
<u>FD7E05</u>	LD A,(IY+d)	51	LD D,C
<u>3A 8405</u>	LD A,(nn)	52	LD D,D
7F	LD A,A	53	LD D,E
78	LD A,B	54	LD D,H
79	LD A,C	55	LD D,L
7A	LD A,D	<u>1620</u>	LD D,n
7B	LD A,E	<u>ED5B8405</u>	LD DE,(nn)
7C	LD A,H	<u>118405</u>	LD DE,nn
ED57	LD A,I	5E	LD E,(HL)
7D	LD A,L	<u>DD5E05</u>	LD E,(IX+d)
<u>3E20</u>	LD A,n	<u>FD5E05</u>	LD E,(IY+d)
46	LD B,(HL)	5F	LD E,A
<u>DD4605</u>	LD B,(IX+d)	58	LD E,B
<u>FD4605</u>	LD B,(IY+d)	59	LD E,C
47	LD B,A	5A	LD E,D
40	LD B,B	5B	LD E,E
41	LD B,C	5C	LD E,H
42	LD B,D	5D	LD E,L
43	LD B,E	<u>1E20</u>	LD E,n
44	LD B,H	66	LD H,(HL)
45	LD B,L	<u>DD6605</u>	LD H,(IX+d)
<u>0620</u>	LD B,n	<u>FD6605</u>	LD H,(IY+d)
<u>ED4B8405</u>	LD BC,(nn)	67	LD H,A
<u>018405</u>	LD BC,nn	60	LD H,B
4E	LD C,(HL)	61	LD H,C
<u>DD4E05</u>	LD C,(IX+d)	62	LD H,D
<u>FD4E05</u>	LD C,(IY+d)	63	LD H,E
4F	LD C,A	64	LD H,H
48	LD C,B	65	LD H,L
49	LD C,C	<u>2620</u>	LD H,n
4A	LD C,D	<u>2A8405</u>	LD H,(nn)

OP-Code	Mnemonic	OP-Code	Mnemonic
<u>218405</u>	LD HL,nn	B4	OR H
ED47	LD I,A	B5	OR L
<u>DD2A8405</u>	LD IX,(nn)	<u>F620</u>	OR n
<u>DD218405</u>	LD IX,nn	EDBB	OTDR
<u>FD2A8405</u>	LD IY,(nn)	EDB3	OTIR
<u>FD218405</u>	LD IY,nn	ED79	OUT (C),A
6E	LD L,(HL)	ED41	OUT (C),B
<u>DD6E05</u>	LD L,(IX+d)	ED49	OUT (C),C
<u>FD6E05</u>	LD L,(IY+d)	ED51	OUT (C),D
6F	LD L,A	ED59	OUT (C),E
68	LD L,B	ED61	OUT (C),H
69	LD L,C	ED69	OUT (C),L
6A	LD L,D	<u>D320</u>	OUT (n),A
6B	LD L,E	EDAB	OUTD
6C	LD L,H	EDA3	OUTI
6D	LD L,L	F1	POP AF
<u>2E20</u>	LD L,n	C1	POP BC
<u>ED7B8405</u>	LD SP,(nn)	D1	POP DE
F9	LD SP,HL	E1	POP HL
DDF9	LD SP,IX	DDE1	POP IX
FDF9	LD SP,IY	FDE1	POP IY
<u>318405</u>	LD SP,nn	F5	PUSH AF
EDA8	LDD	C5	PUSH BC
EDB8	LDDR	D5	PUSH DE
EDA0	LDI	E5	PUSH HL
EDB0	LDIR	DDE5	PUSH IX
ED44	NEG	FDE5	PUSH IY
00	NOP	CB86	RES 0,(HL)
B6	OR (HL)	<u>DDCB0586</u>	RES 0,(IX+d)
<u>DDB605</u>	OR (IX+d)	<u>FDCB0586</u>	RES 0,(IY+d)
<u>FDB605</u>	OR (IY+d)	CB87	RES 0,A
B7	OR A	CB80	RES 0,B
B0	OR B	CB81	RES 0,C
B1	OR C	CB82	RES 0,D
B2	OR D	CB83	RES 0,E
B3	OR E	CB84	RES 0,H

OP-Code	Mnemonic	OP-Code	Mnemonic
CB85	RES 0,L	CBA5	RES 4,L
CB8E	RES 1,(HL)	CBAE	RES 5,(HL)
DDCB058E	RES 1,(IX+d)	DDCB05AE	RES 5,(IX+d)
FDCB058E	RES 1,(IY+d)	FDCB05AE	RES 5,(IY+d)
CB8F	RES 1,A	CBAF	RES 5,A
CB88	RES 1,B	CBA8	RES 5,B
CB89	RES 1,C	CBA9	RES 5,C
CB8A	RES 1,D	CBA A	RES 5,D
CB8B	RES 1,E	CBAB	RES 5,E
CB8C	RES 1,H	CBAC	RES 5,H
CB8D	RES 1,L	CBAD	RES 5,L
CB96	RES 2,(HL)	CBB6	RES 6,(HL)
DDCB0596	RES 2,(IX+d)	DDCB05B6	RES 6,(IX+d)
FDCB0596	RES 2,(IY+d)	FDCB05B6	RES 6,(IY+d)
CB97	RES 2,A	CBB7	RES 6,A
CB90	RES 2,B	CBB0	RES 6,B
CB91	RES 2,C	CBB1	RES 6,C
CB92	RES 2,D	CBB2	RES 6,D
CB93	RES 2,E	CBB3	RES 6,E
CB94	RES 2,H	CBB4	RES 6,H
CB95	RES 2,L	CBB5	RES 6,L
CB9E	RES 3,(HL)	CBBE	RES 7,(HL)
DDCB059E	RES 3,(IX+d)	DDCB05BE	RES 7,(IX+d)
FDCB059E	RES 3,(IY+d)	FDCB05BE	RES 7,(IY+d)
CB9F	RES 3,A	CBBF	RES 7,A
CB98	RES 3,B	CBB8	RES 7,B
CB99	RES 3,C	CBB9	RES 7,C
CB9A	RES 3,D	CBBA	RES 7,D
CB9B	RES 3,E	CBBB	RES 7,E
CB9C	RES 3,H	CBBC	RES 7,H
CB9D	RES 3,L	CBBD	RES 7,L
CBA6	RES 4,(HL)		
DDCB05A6	RES 4,(IX+d)	C9	RET
FDCB05A6	RES 4,(IY+d)	D8	RET C
CBA7	RES 4,A	F8	RET M
CBA0	RES 4,B	D0	RET NC
CBA1	RES 4,C	C0	RET NZ
CBA2	RES 4,D	F0	RET P
CBA3	RES 4,E	E8	RET PE
CBA4	RES 4,H	E0	RET PO

OP-Code	Mnemonic	OP-Code	Mnemonic
C8	RET Z	CB0E	RRC (HL)
ED4D	RETI	DDCB <u>05</u> 0E	RRC (IX+d)
ED45	RETN	FDCB <u>05</u> 0E	RRC (IY+d)
CB16	RL (HL)	CB0F	RRC A
DDCB <u>05</u> 16	RL (IX+d)	CB08	RRC B
FDCB <u>05</u> 16	RL (IY+d)	CB09	RRC C
CB17	RL A	CB0A	RRC D
CB10	RL B	CB0B	RRC E
CB11	RL C	CB0C	RRC H
CB12	RL D	CB0D	RRC L
CB13	RL E	0F	RRCA
CB14	RL H	ED67	RRD
CB15	RL L	C7	RST 00H
17	RLA	CF	RST 08H
CB06	RLC (HL)	D7	RST 10H
DDCB <u>05</u> 06	RLC (IX+d)	DF	RST 18H
FDCB <u>05</u> 06	RLC (IY+d)	E7	RST 20H
CB07	RLC A	EF	RST 28H
CB00	RLC B	F7	RST 30H
CB01	RLC C	FF	RST 38H
CB02	RLC D	9E	SBC A,(HL)
CB03	RLC E	DD9E <u>05</u>	SBC A,(IX+d)
CB04	RLC H	FD9E <u>05</u>	SBC A,(IY+d)
CB05	RLC L	9F	SBC A,A
07	RLCA	98	SBC A,B
ED6F	RLD	99	SBC A,C
CB1E	RR (HL)	9A	SBC A,D
DDCB <u>05</u> 1E	RR (IX+d)	9B	SBC A,E
FDCB <u>05</u> 1E	RR (IY+d)	9C	SBC A,H
CB1F	RR A	9D	SBC A,L
CB18	RR B	DE <u>20</u>	SBC A,n
CB19	RR C	ED42	SBC HL,BC
CB1A	RR D	ED52	SBC HL,DE
CB1B	RR E	ED62	SBC HL,HL
CB1C	RR H	ED72	SBC HL,SP
CB1D	RR L	37	SCF
1F	RRA		

OP-Code	Mnemonic	OP-Code	Mnemonic
CBC6	SET 0, (HL)	CBE6	SET 4, (HL)
DDCB05 C6	SET 0, (IX + d)	DDCB05 E6	SET 4, (IX + d)
FDCB05 C6	SET 0, (IY + d)	FDCB05 E6	SET 4, (IY + d)
CBC7	SET 0, A	CBE7	SET 4, A
CBC0	SET 0, B	CBE0	SET 4, B
CBC1	SET 0, C	CBE1	SET 4, C
CBC2	SET 0, D	CBE2	SET 4, D
CBC3	SET 0, E	CBE3	SET 4, E
CBC4	SET 0, H	CBE4	SET 4, H
CBC5	SET 0, L	CBE5	SET 4, L
CBCE	SET 1, (HL)	CBEE	SET 5, (HL)
DDCB05 CE	SET 1, (IX + d)	DDCB05 EE	SET 5, (IX + d)
FDCB05 CE	SET 1, (IY + d)	FDCB05 EE	SET 5, (IY + d)
CBCF	SET 1, A	CBEF	SET 5, A
CBC8	SET 1, B	CBE8	SET 5, B
CBC9	SET 1, C	CBE9	SET 5, C
CBCA	SET 1, D	CBEA	SET 5, D
CBCB	SET 1, E	CBEB	SET 5, E
CBCC	SET 1, H	CBEC	SET 5, H
CBCD	SET 1, L	CBED	SET 5, L
CBD6	SET 2, (HL)	CBF6	SET 6, (HL)
DDCB05 D6	SET 2, (IX + d)	DDCB05 F6	SET 6, (IX + d)
FDCB05 D6	SET 2, (IY + d)	FDCB05 F6	SET 6, (IY + d)
CBD7	SET 2, A	CBF7	SET 6, A
CBD0	SET 2, B	CBF0	SET 6, B
CBD1	SET 2, C	CBF1	SET 6, C
CBD2	SET 2, D	CBF2	SET 6, D
CBD3	SET 2, E	CBF3	SET 6, E
CBD4	SET 2, H	CBF4	SET 6, H
CBD5	SET 2, L	CBF5	SET 6, L
CBD8	SET 3, B	CBFE	SET 7, (HL)
CBDE	SET 3, (HL)	DDCB05 FE	SET 7, (IX + d)
DDCB05 DE	SET 3, (IX + d)	FDCB05 FE	SET 7, (IY + d)
FDCB05 DE	SET 3, (IY + d)	CBFF	SET 7, A
CBDF	SET 3, A	CBF8	SET 7, B
CBD9	SET 3, C	CBF9	SET 7, C
CBDA	SET 3, D	CBFA	SET 7, D
CBDB	SET 3, E	CBFB	SET 7, E
CBDC	SET 3, H	CBFC	SET 7, H
CBDD	SET 3, L	CBFD	SET 7, L

OP-Code	Mnemonic	OP-Code	Mnemonic
CB26	SLA (HL)	93	SUB E
DDCB <u>05</u> 26	SLA (IX+d)	94	SUB H
FDCB <u>05</u> 26	SLA (IY+d)	95	SUB L
CB27	SLA A	D6 <u>20</u>	SUB n
CB20	SLA B		
CB21	SLA C	AE	XOR (HL)
CB22	SLA D	DDAE <u>05</u>	XOR (IX+d)
CB23	SLA E	FDAE <u>05</u>	XOR (IY+d)
CB24	SLA H	AF	XOR A
CB25	SLA L	A8	XOR B
		A9	XOR C
		AA	XOR D
		AB	XOR E
		AC	XOR H
		AD	XOR L
		EE <u>20</u>	XOR n
CB2E	SRA (HL)		
DDCB <u>05</u> 2E	SRA (IX+d)		
FDCB <u>05</u> 2E	SRA (IY+d)		
CB2F	SRA A		
CB28	SRA B		
CB29	SRA C		
CB2A	SRA D		
CB2B	SRA E		
CB2C	SRA H		
CB2D	SRA L		
CB3E	SRL (HL)		
DDCB <u>05</u> 3E	SRL (IX+d)		
FDCB <u>05</u> 3E	SRL (IY+d)		
CB3F	SRL A		
CB38	SRL B		
CB39	SRL C		
CB3A	SRL D		
CB3B	SRL E		
CB3C	SRL H		
CB3D	SRL L		
96	SUB (HL)		
DD96 <u>05</u>	SUB (IX+d)		
FD96 <u>05</u>	SUB (IY+d)		
97	SUB A		
90	SUB B		
91	SUB C		
92	SUB D		

A. 4 Specifications

1. MZ-80A GENERAL SPECIFICATIONS

CPU	SHARP LH0080 (Z80-CPU)	Key layout	73 keys ASCII standard main keyboard Numeric pad
Clock	2 MHz		
Memory	ROM 4K bytes (monitor program) ROM 2K bytes (character generator) RAM 32K bytes (dynamic RAM) Can be expanded to 48K bytes. (option; 16K bytes)	Editing function	Cursor control; up, down, left, right, home, clear Deletion, insertion
		Clock function	Built-in
		Power supply	Local supply rating voltage
Display	9" CRT (green display) Character display 8x8 dot matrix Characters; 1000 (40 characters x 25 lines) Pseudo-graphic display 80 x 50 dots	Temperature	Operating temp; 0° to 35°C Storage temp; -15° to 60°C
		Humidity	Lower than 80%
		Weight	Approx. 10 kg
		Dimensions	Width; 440 mm Depth; 480 mm Height; 260 mm
Cassette	Standard audio cassette tape Data transfer speed; 1200 bits/sec. Data transfer system; SHARP PWM		
Sound output	Max. 400 mW (440 Hz)		

2. CPU BOARD SECTION SPECIFICATIONS

CPU	SHARP LH0080 (Z80-CPU) 1 pc.		
ROM	Monitor ROM (4K bytes) 1 pc.	Programmable peripheral interface	8255 1 pc.
	Character generator ROM (2K bytes) 1 pc.		
RAM	Standard; 16K bits dynamic RAM 16 pcs.	Programmable counter	8253 1 pc.
	Optional; 16K bits dynamic RAM 8 pcs.		
	Video RAM (2K bytes) 1 pc.		

3. POWER SUPPLY SECTION SPECIFICATIONS

INPUT	Use a power source with the voltage shown on rating name plate.	OUTPUT	5V, -5V, 12V (stabilizing), 12V (non-stabilizing)
--------------	---	---------------	--

4. DISPLAY SECTION SPECIFICATIONS

Size	9"	Resolution	Horizontal  *The pattern of the left in the center of the picture must be clear.
Vertical horizontal frequency	60Hz (vertical), 15.75kHz (horizontal)	Non-linearity distortion	Horizontal; $\pm 8\%$ ($\pm 14\%$ max.) Vertical; $\pm 8\%$ ($\pm 12\%$ max.)
Power source	DC 12V, 1.1A $\pm 10\%$	Geometrical distortion	Pincushion dist.; 1% (2% max.) Barrel dist.; 1% (2% max.) Trapezoidal dist.; 1% (2% max.) Parallelogram dist.; 1° (2.5° max.)
Picture tube	E2728B3; 9"90° deflection explosion proof type Heater; 12V, 75mA	High voltage	Zero beam; 11.0kV (10.0kV, min., 12.0kV, max.)
ICs	2 pcs.	Power supply	DC 12.0V, 1.05A (1.2A max.)
Transistors	7 pcs.	Working range	12V $\pm 10\%$
Diodes	13 pcs.	Scan size	Horizontal; 10% (15% max.) Vertical; 10% (15% max.)
Sound output	400mW max. (440 Hz) Speaker 8cm, round dynamic type (32 Ω)	Horizontal lock-in range	$\pm 300\text{Hz}$ ($\pm 100\text{Hz}$ limit)
Control knobs	Volume, V-Hold, Contrast, H-Hold, Brightness, Focus	Vertical lock-in range	-12Hz (-6Hz limit)
Working temperature	-10°C to 50°C	Audio frequency characteristic	440Hz (0dB) -10dB $\pm 4\text{dB}$ at 100Hz -12dB $\pm 4\text{dB}$ at 10kHz
Video output	40Vp-p standard (35Vp-p limit)		

5. CASSETTE TAPE DECK SECTION SPECIFICATIONS

System	PWM recording	Erasing	DC system
Power source	5V $\pm 0.25\text{V}$ (rated)	Playback sensitivity	1m sec. to 500 μ sec. (standard)
Rated amperage	Wait; 2mA Record; 70mA (TEAC test tape) Playback; 7mA (TEAC test tape)	Input level	Below 0.4V ("L") Over 2.0V ("H")
Semiconductors	4 transistors 1 IC 4 diodes	Input impedance	Over 10k Ω (record jack)
Applied tape	From C30 to C60	Output level	Below 0.4V ("L") Over 2.0V ("H")
Tape speed	4.75 cm/sec.	Working temperature	-10°C to 50°C
Track	2-track monaural type	Storage temperature	-25°C to 70°C
Motor	Electronic governor motor (12V)		
Biasing	DC system		

Specifications and design subject to change without prior notice for product improvement. In such cases, items mentioned may be partially different from the product.

A. 5 Caring for the system

- **Power cable**
Don't place heavy objects such as desks or chairs on the power cable and do not damage the covering of the power cable or a severe accident may occur. Be sure to pull the plug (not the cable) when disconnecting the unit from the AC outlet.
- **Line voltage**
The correct line voltage is shown on rating plate. Extremely high or low line voltages may cause trouble or result in incorrect operation. Contact your dealer if such trouble occurs.
- **Ventilation**
Ventilation holes are provided in the cabinet. Never place the unit on a carpet or the like because the holes on the bottom plate of the cabinet will be covered. Place the set in a well ventilated location.
- **Moisture and dust**
Place the unit in a location which is free from moisture and dust.
- **Temperature**
Do not expose the unit to direct sunlight and do not place it near heaters to prevent its temperature from rising.
- **Water and other foreign substances**
Operating the unit when it is wet or contains foreign articles such as clips, pins or other metallic items is dangerous. If water or other liquid enters the unit, immediately pull the power plug and contact your dealer.
- **Shock**
If the unit is subjected to shock the sensitive electronic parts may be damaged.
- **Trouble**
If any trouble occurs, stop operating the unit immediately and contact your dealer.
- **Long periods of disuse**
When the unit is not operated for a long time, be sure to pull the power plug from the AC outlet.
- **Connection of peripheral devices**
When connecting peripheral devices, use only parts and devices designated by the Sharp Corporation. Use of parts and devices other than those designated (or modification of the set) may result in trouble.
- **Stains**
Remove stains from the cabinet with a soft cloth moistened with water or detergent. Never use solvents such as benzine, or discoloration will result.
- **Noise**
When the unit is used in locations where there are high electrical noise levels induced in the AC line, use a line filter to remove the noise. Keep the signal cables away from power cables and other electric equipment.
- **Use and storage**
Do not use or store the unit with the upper cabinet open, or trouble may occur.
- **Radio wave interference**
When a radio or TV set is used near the MZ-80A, noise may interfere with broadcast reception. Equipment causing a strong magnetic field may interfere with operation of the MZ-80A.
Keep such equipment at least 2 to 3 meters away from the MZ-80A.

-
- **Power switch operation**
Once the power switch is turned off, wait at least 10 seconds before turning it on again. This ensures correct operation of the microprocessor. Never insert the power plug into an AC outlet with the power switch set to ON.
 - **Cassette deck maintenance**
Dirty cassette deck recording and reproducing heads may result in incorrect data recording or reproduction. Be sure to clean the heads every month. Commercially available cleaning tape is convenient.
 - **Discoloration of CRT screen**
If a certain spot of the CRT screen is lit an external period of time the spot may become discolored. (If it is necessary for certain spot to be lit for an extended time, turn down the brightness control on the display control unit.)

SHARP CORPORATION

MODEL: MZ8AM01E

TINSE0038PAZZ
080311-250182

MZ-80A
E2